 
 


Ref No	Part No	Description
01	3SH-E1111-00-00	Head, Cylinder 1
02	90116-08394-00	Bolt, Stud
03	90176-08040-00	Nut, Crown
04	90201-08649-00	Washer, Plate
05	94701-00188-00	Plug, Spark
06	3MB-11181-00-00	Gasket, Cylinder Head 1
07	3SH-E1311-00-00	Cylinder 1
08	3BN-11351-00-00	Gasket, Cylinder
09	4DL-E5441-00-00	Holder, Clutch Cable
10	90116-08318-00	Bolt, Stud
11	90116-08388-00	Bolt, Stud
12	99510-10114-00	Pin, Dowel
13	90179-08491-00	Nut
14	3SH-E131A-00-00	Valve 1
15	3SH-E131E-00-00	Holder 1
16	4DL-E133F-00-00	Cable, Pulley 2
17	90316-05012-00	Bolt
18	3NC-E131U-00-00	Holder 3
19	93108-23010-00	Oil Seal
20	93210-30640-00	O-ring
21	3FN-E131M-00-00	Cover
22	91311-05010-00	Bolt
23	3FN-E131R-00-00	Cap, Seal
24	91316-05012-00	Bolt
25	29L-1132E-00-00	Pulley 1
26	97026-06018-00	Bolt
27	92906-06100-00	Washer, Spring
28	92906-06600-00	Washer, Plate
29	4DL-E133E-00-00	Cable, Pulley 1

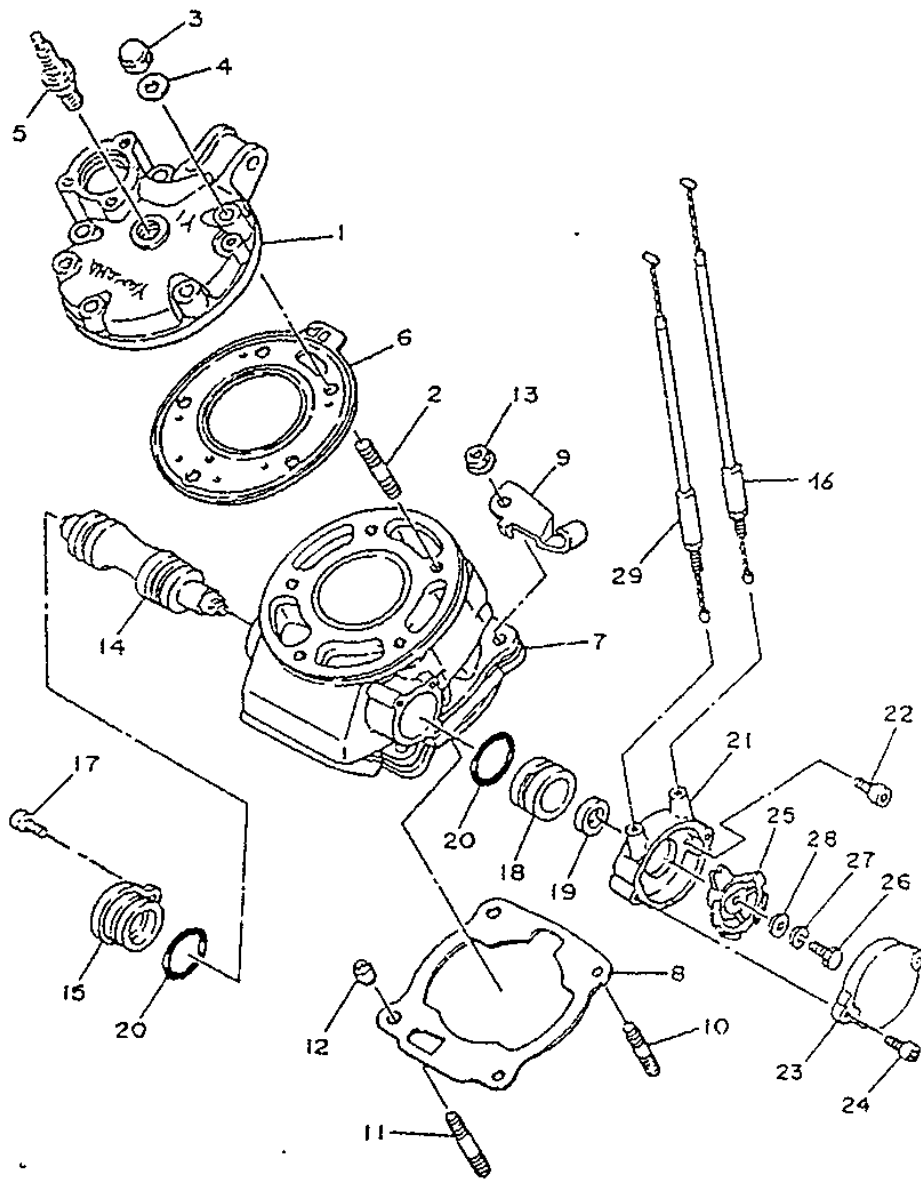


Ref No	Part No	Description
01	4DL-E1400-00-00	Crankshaft Assy
04	2VR-E1651-00-00	Rod, Connecting
08	4DL-11631-00-95	Piston (std)
08	4DL-11635-00-00	Piston (0.25mm O/s)
08	4DL-11636-00-00	Piston (0.50mm O/s)
09	3MB-11610-01-00	Piston Ring Set
09	3MB-11610-11-00	Piston Ring Set
09	3MB-11610-21-00	Piston Ring Set
10	93310-31684-00	Bearing
11	3NC-E1633-00-00	Pin, Piston
12	2VR-E1634-00-00	Clip, Piston Pin
13	93306-30556-00	Bearing
14	93102-25331-00	Oil Seal
15	93103-32099-00	Oil Seal
16	90387-202T9-00	Collar
17	90280-03045-00	Key, Woodruff
18	90282-05047-00	Key, Straight
19	2AH-E1536-00-00	Gear, Drive
20	2VR-E1454-00-00	Weight 1
21	93306-302Y9-00	Bearing
22	93306-203Y9-00	Bearing
23	90282-05058-00	Key, Straight
24	2VR-E1530-00-00	Balancer Weight Gear Comp.
25	90215-12272-00	Washer, Lock
26	90170-12370-00	Nut

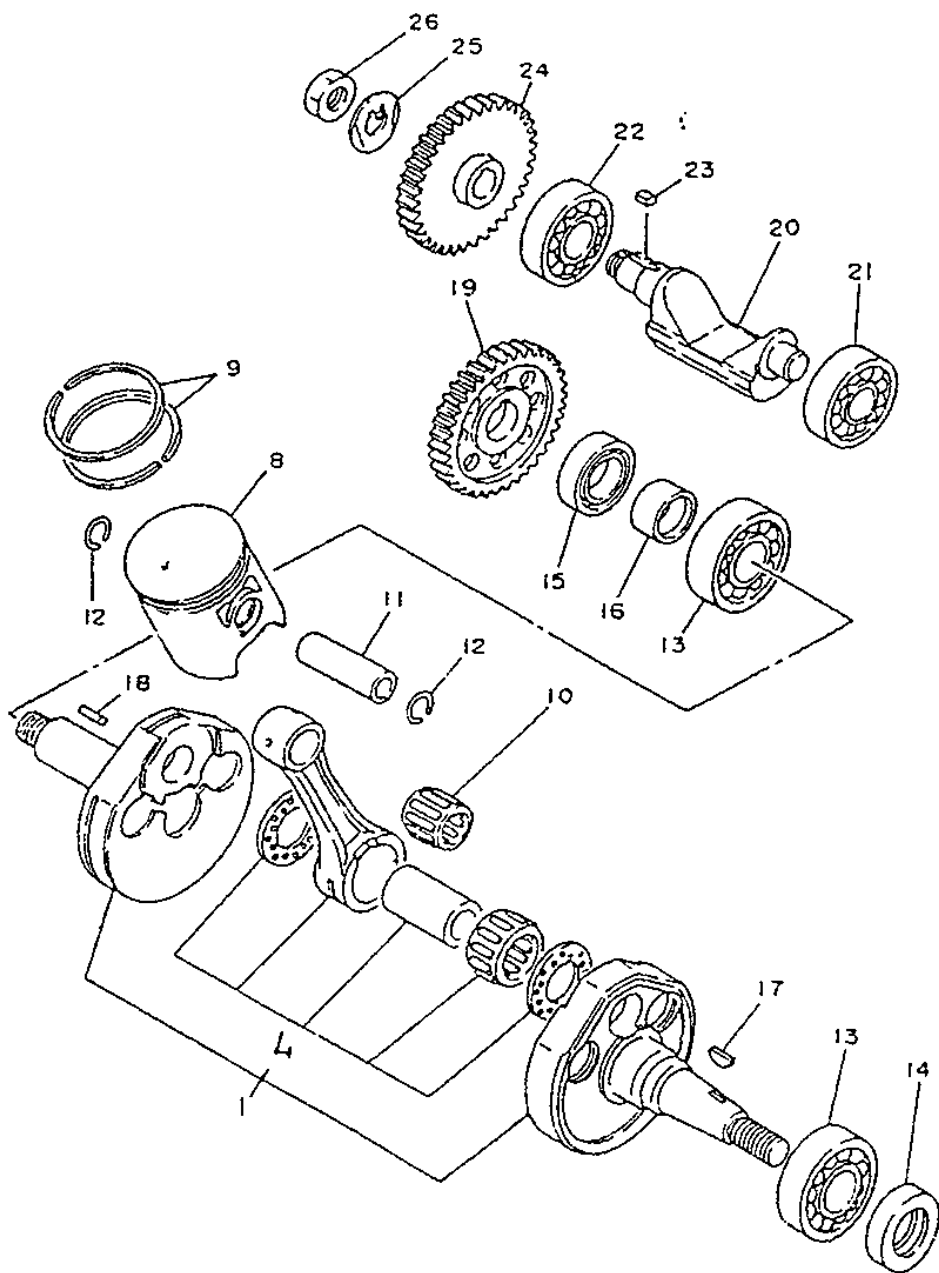


100-1020

Ref No	Part No	Description
01	2VR-E2450-00-00	Impeller Shaft Assy
02	93103-10147-00	Oil Seal
03	93603-22028-00	Pin, Dowel
04	3NC-E2459-00-00	Gear, Impeller Shaft
05	90201-08512-00	Washer, Plate
06	99001-07600-00	Circlip
07	3NC-E2422-00-00	Cover, Housing
08	3NC-E2428-00-00	Gasket, Housing Cover 2
09	93604-10011-00	Pin, Dowel
10	98506-06025-00	Screw, Pan Head
11	98506-06065-00	Screw, Pan Head
12	95826-06025-00	Bolt, Flange
13	90430-06166-00	Gasket

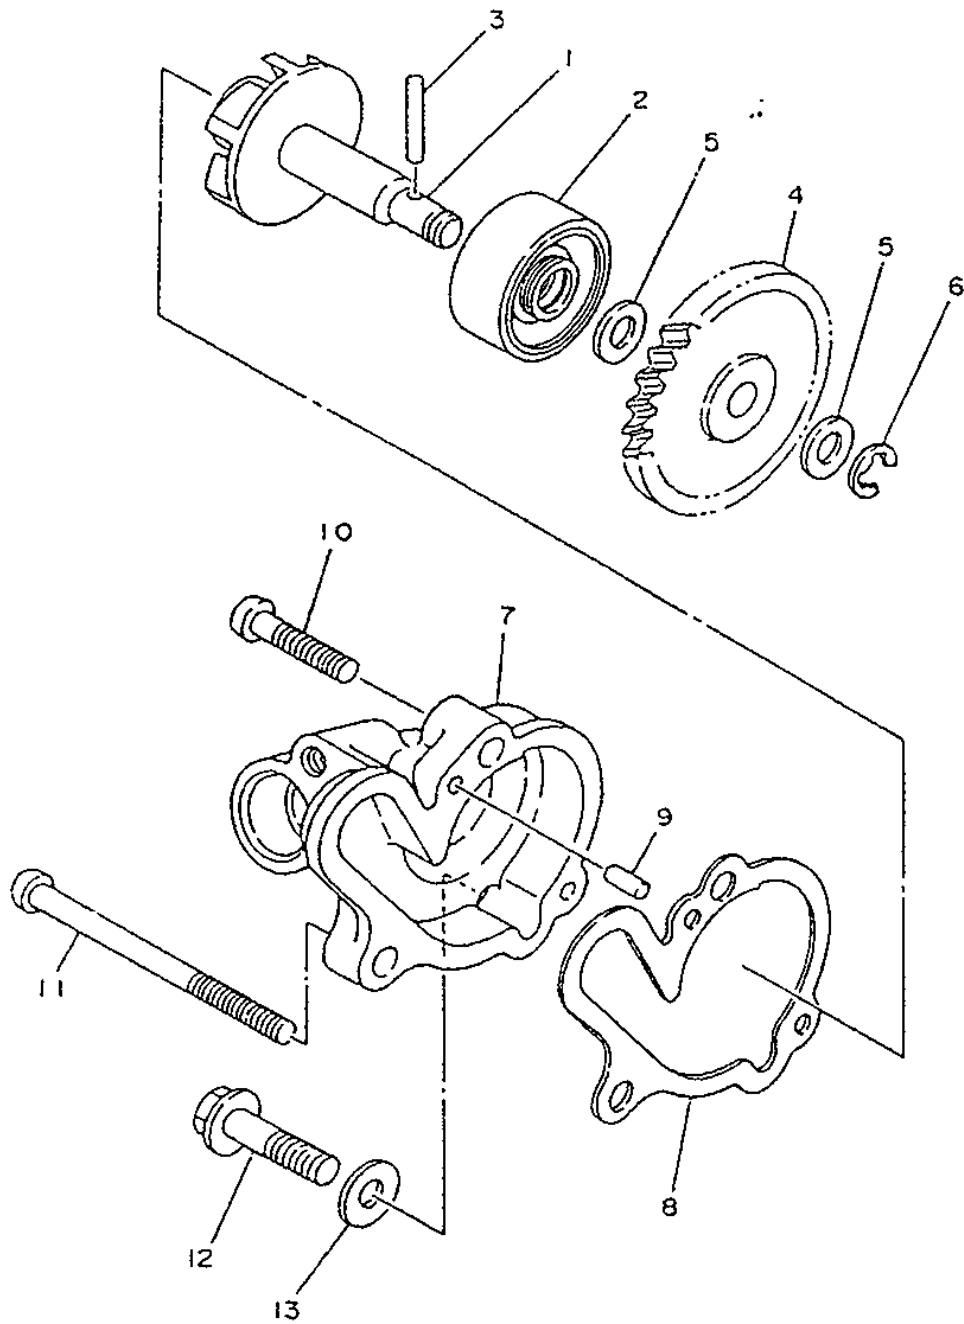 



10-8030

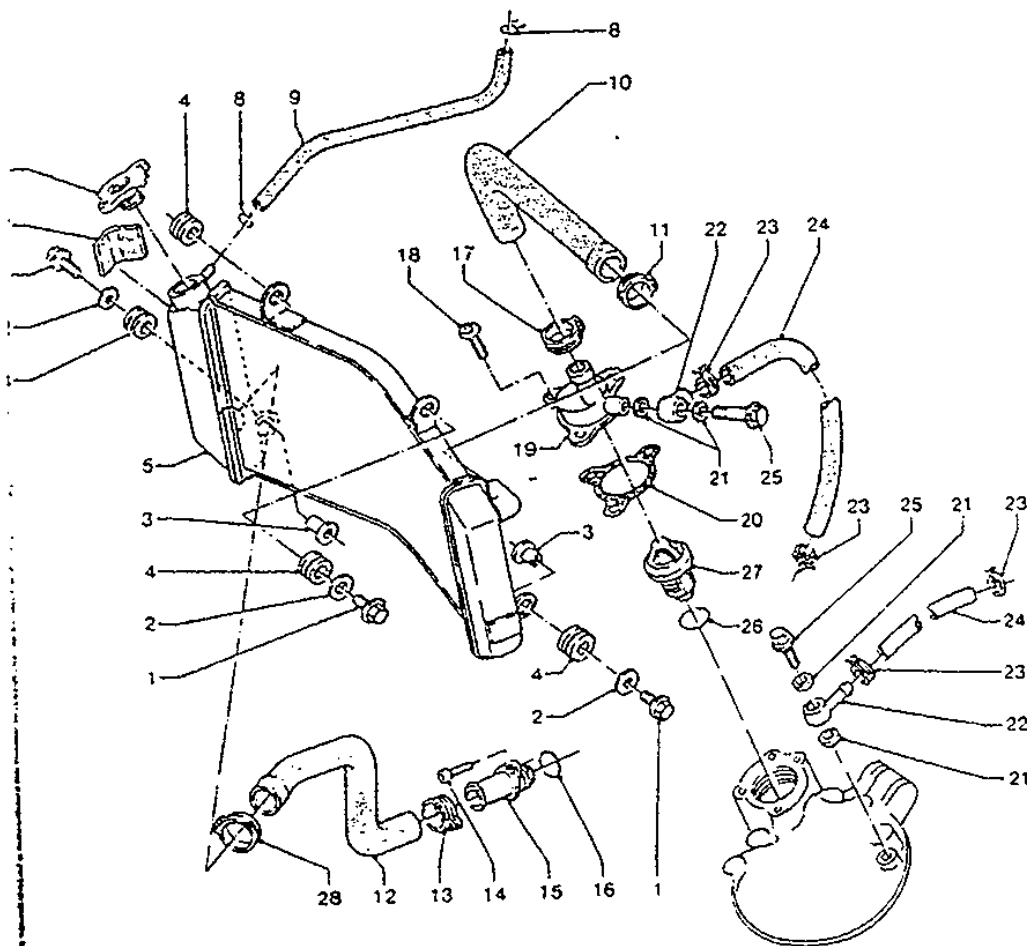 

Ref No	Part No	Description
01	97301-06030-00	Bolt
02	90201-06072-00	Washer, Plate
03	90387-06388-00	Collar
04	90480-15363-00	Grommet
05	3MA-12460-00-00	Radiator Assy
06	1KT-12462-00-00	• Cap, Radiator
07	4DL-F1268-00-00	Seal
08	90467-10001-00	Clip
09	90445-09001-00	Hose
10	4DL-E2482-00-00	Pipe 2
11	90450-27014-00	Hose Clamp Assy
12	4DL-E2481-00-00	Pipe 1
13	90450-28014-00	Hose Clamp Assy
14	98506-06012-00	Screw, Pan Head
15	4DL-E2483-00-00	Pipe 3
16	93210-12327-00	O-ring
17	90450-30014-00	Hose Clamp Assy
18	98506-06020-00	Screw, Pan Head
19	3NC-E2469-00-00	Joint 1
20	3NC-E2414-00-00	Gasket, Cover
21	90430-06166-00	Gasket
22	90401-06042-00	Bolt, Union
23	90467-10035-00	Clip
24	3NC-E2484-00-00	Pipe 4
25	90401-06115-00	Bolt, Union
26	93210-27194-00	O-ring
27	34X-12411-00-00	Thermostat
28	90450-26001-00	Hose Clamp Assy

Ref No	Part No	Description
01	3MB-13101-01-00	Oil Pump Assy
02	90445-057F9-00	. Hose
03	353-13552-01-00	. Nozzle
04	90468-02033-00	. Clip
05	93505-32002-00	. Ball
06	90501-02018-00	. Spring, Compression
07	90430-04004-00	. Gasket
08	98906-04006-00	. Screw, Bind
09	137-13138-01-00	. Plate, Adjusting
10	137-13137-00-10	. Shim, Plunger
11	92901-05100-00	. Washer, Spring
12	95303-05600-00	. Nut
13	55K-13175-01-00	Shaft, Worm
14	90201-08624-00	Washer, Plate
15	2AH-E3116-00-00	Gasket, Pump Case
16	98501-05016-00	Screw, Pan Head
17	93101-10090-00	Oil Seal
18	2AH-E3176-00-00	Metal, Worm Shaft Outer
19	3NC-E3178-00-00	Gear, Pump Drive
20	93603-22028-00	Pin, Dowel
21	Circlip	
22	3NC-E3133-00-00	Clip
23	90468-02033-00	Clip
24	3NC-E3174-00-00	Holder, Oil Pipe
25	93210-07100-00	O-ring
26	90468-08086-00	Clip

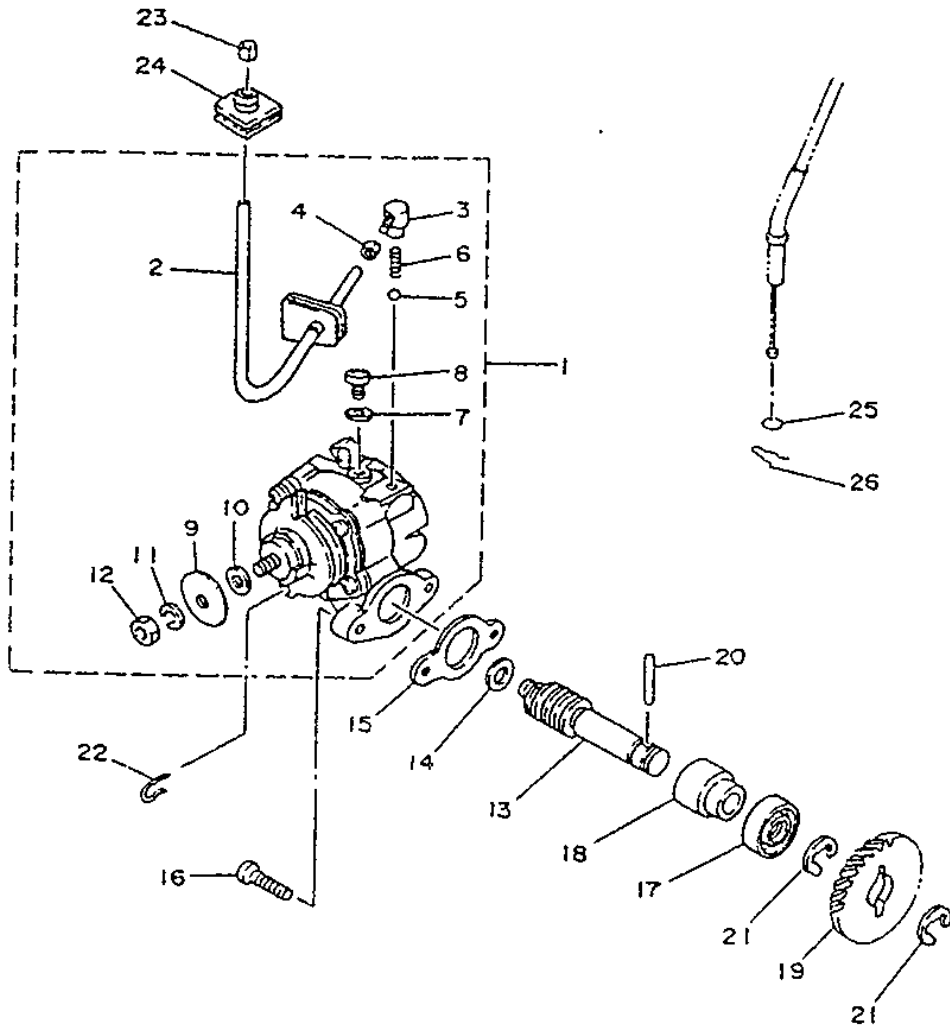 


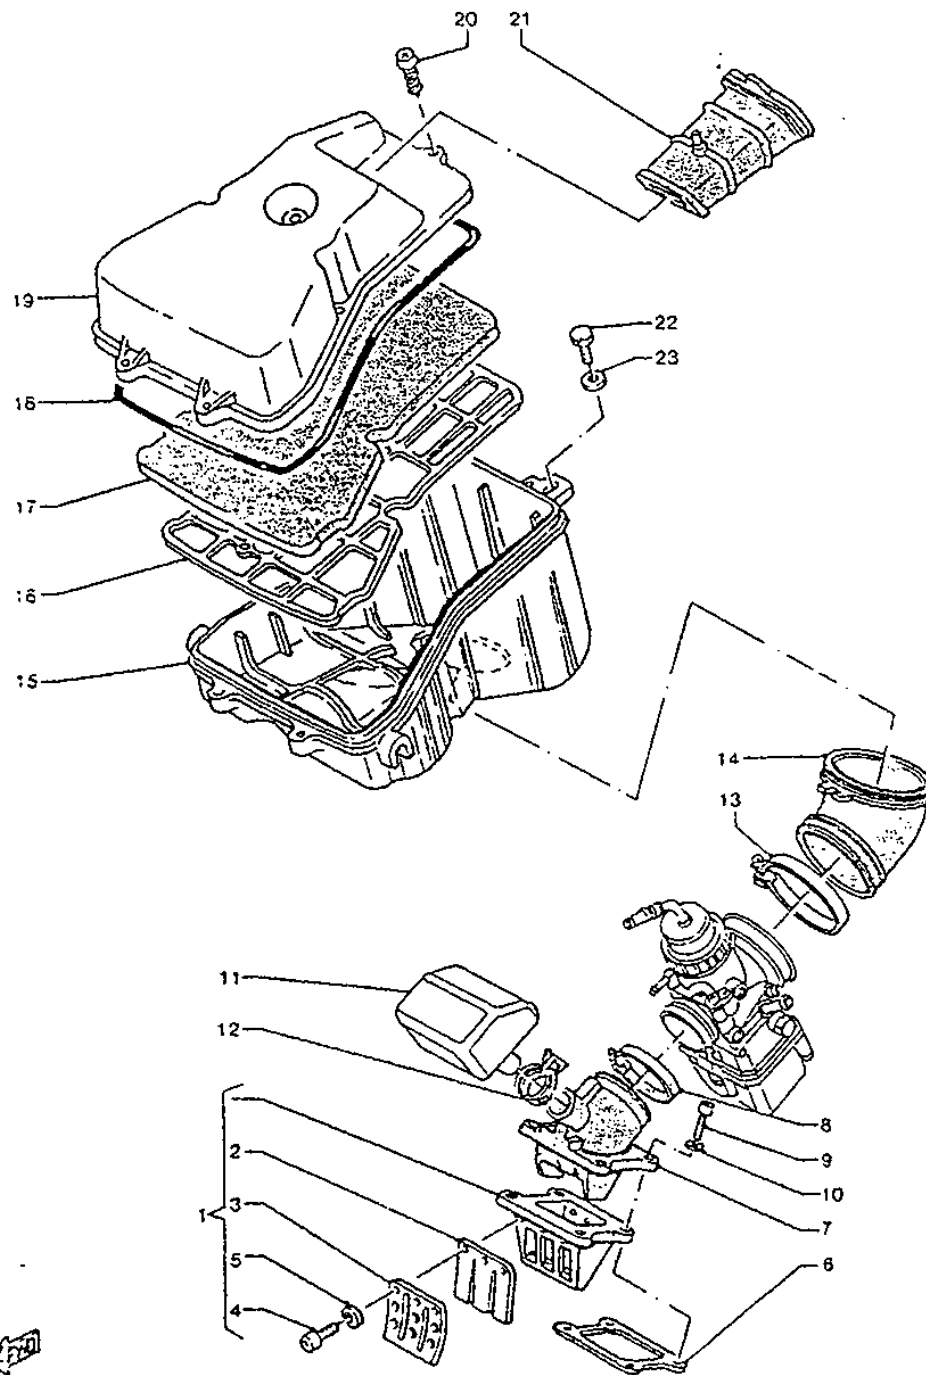 

Ref No	Part No	Description
01	1KT-13610-00-00	Reed Valve Assy
02	1KT-13613-00-00	. Reed, Valve
03	1KT-13616-00-00	. Stopper, Reed Valve
04	98501-03008-00	. Screw, Pan Head
05	92990-03100-00	. Washer, Spring
06	2VR-E3621-00-00	Gasket, Valve Seat
07	4DL-E3555-00-00	Manifold, Intake
08	90460-44108-00	Clamp, Hose
09	97001-06025-00	Bolt
10	92906-06600-00	Washer, Plate
11	3BN-13581-00-00	Chamber, Air
12	90467-20050-00	Clip
13	90450-75020-00	Hose Clamp Assy
14	4DL-E4453-00-00	Joint, Air Cleaner 1
15	2RH-14411-00-00	Case, Air Cleaner 1
16	2RH-14472-00-00	Plate, Element
17	2RH-14451-00-00	Element, Air Cleaner
18	1VJ-14462-00-00	Seal
19	2RH-14412-01-00	Cap, Cleaner Case 1
20	97780-50525-00	Screw, Tapping
21	1KT-14437-00-00	Duct
22	97382-06016-00	Bolt
23	92902-06200-00	Washer




 300-1060

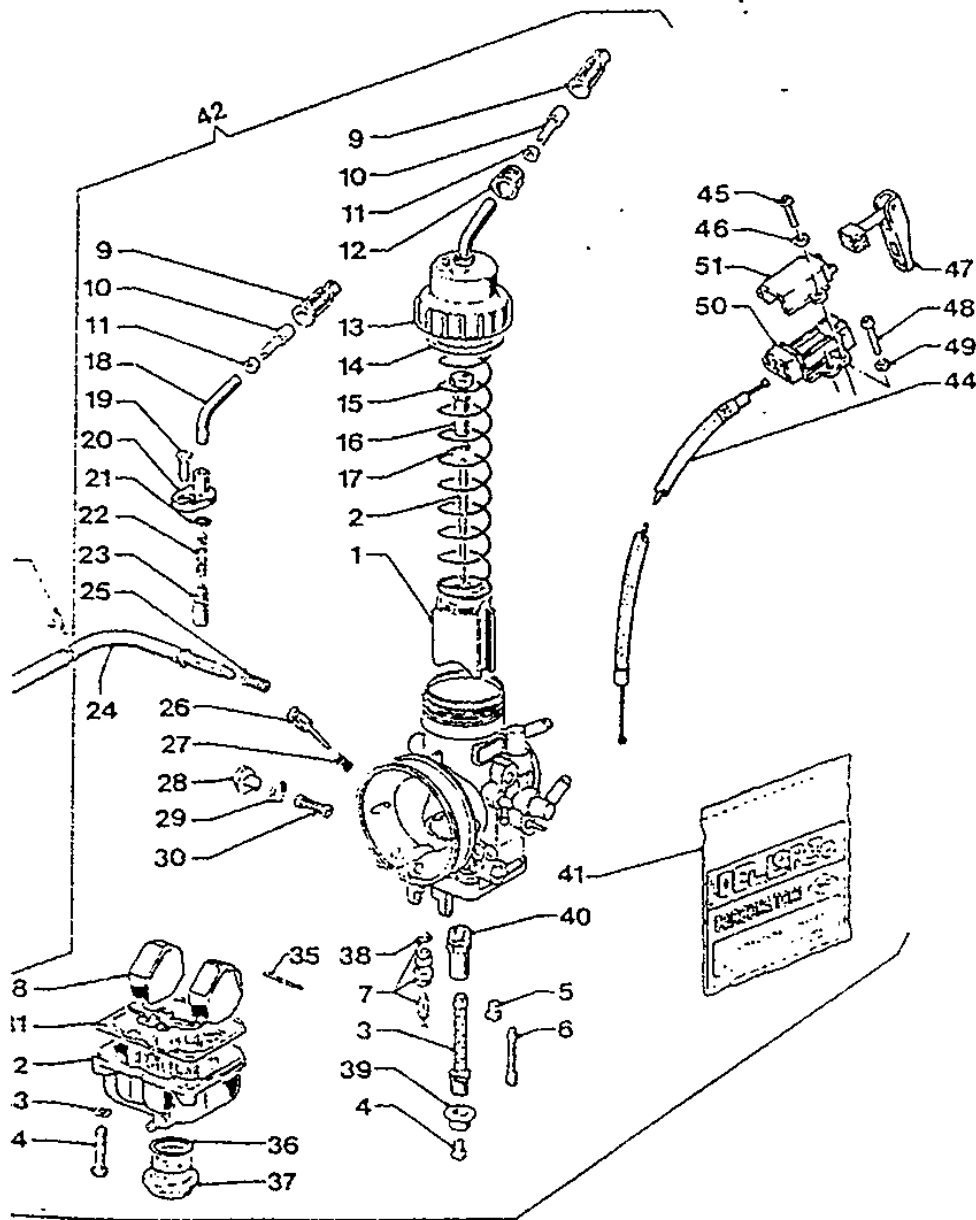


Ref No	Part No	Description
01	4DL-E4112-60-00	. Valve, Throttle 1
02	4DL-E4196-10-00	. Pipe
03	4DL-E4141-10-00	. Nozzle, Main
05	4DL-E4142-38-00	. Jet, Pilot
06	4DL-E4144-00-00	. Jet, Starter
07	4DL-E4185-01-00	. Float
08	4DL-E4185-01-00	. Float
09	4DL-E4169-00-00	. Cap
10	4DL-E4162-00-00	. Bolt, Holding
11	4DL-E4118-00-00	. Cap
13	4DL-E4157-00-00	. Cover, Mixing
15	4DL-E4131-00-00	. Spring, Throttle Valve
16	4DL-E410F-00-00	. Connector
17	2AH-E4134-00-00	. Spring, Air Adjusting
18	4DL-E4155-00-00	. Guide, Cable
19	90141-05008-00	. Screw, Countersunk
20	4DL-E4173-00-00	. Cover, Plunger Cap
22	4DL-E4135-00-00	. Spring, Plunger
23	4DL-E4171-00-00	. Plunger, Starter
24	4DL-E4121-00-00	. Screw, Throttle Stop
25	4DL-E4133-00-00	. Spring, Throttle Stop
26	4DL-E4123-00-00	. Screw, Air Adjusting
27	2AH-E4138-00-00	. Clip, Plunger
28	4DL-E4991-00-00	. Screw
30	4DL-E4994-00-00	. Net, Filter
32	4DL-E4181-01-00	. Body, Float Chamber 1
33	92900-05100-00	. Washer
34	90145-05022-00	. Screw, Flat Fillister
35	4DL-E4186-00-00	. Pin, Float
37	4DL-E4191-00-00	. Plug, Drain
39	4DL-E4264-00-00	. Collar
40	4DL-E4244-00-00	. Holder, Nozzle
41	4DL-E490A-00-00	. Diaphragm Set 1
42	4DL-E4101-02-00	Carburetor Assy 1
43	99000-05600-00	Circlip
44	4DL-F6331-00-00	Cable, Starter 1
45	98506-04010-00	Screw, Pan Head
46	92906-04100-00	Washer, Spring
47	47X-14201-00-00	Choke Lever Comp.
48	98506-04012-00	Screw, Pan Head
49	92906-04100-00	Washer, Spring
50	2YK-14204-00-00	Case, Starter
51	47X-14205-00-00	Cap, Starter

Ref No	Part No	Description
01	4DL-E4610-00-00	Exhaust Pipe Assy 1
02	90179-08270-00	Nut
03	152-14613-00-00	Gasket, Exhaust Pipe
04	90116-08042-00	Bolt, Stud
05	97316-08045-00	Bolt
06	92906-09200-00	Washer
07	92901-08200-00	Washer, Plain
08	95711-08300-00	Nut, Flange
09	95701-06500-00	Nut, Flange
10	4DL-E4714-02-00	Gasket, Muffler
11	95711-08300-00	Nut, Flange
12	95206-08040-00	Bolt
13	4DL-E4753-02-00	Silencer, Exhaust
14	92906-09200-00	Washer

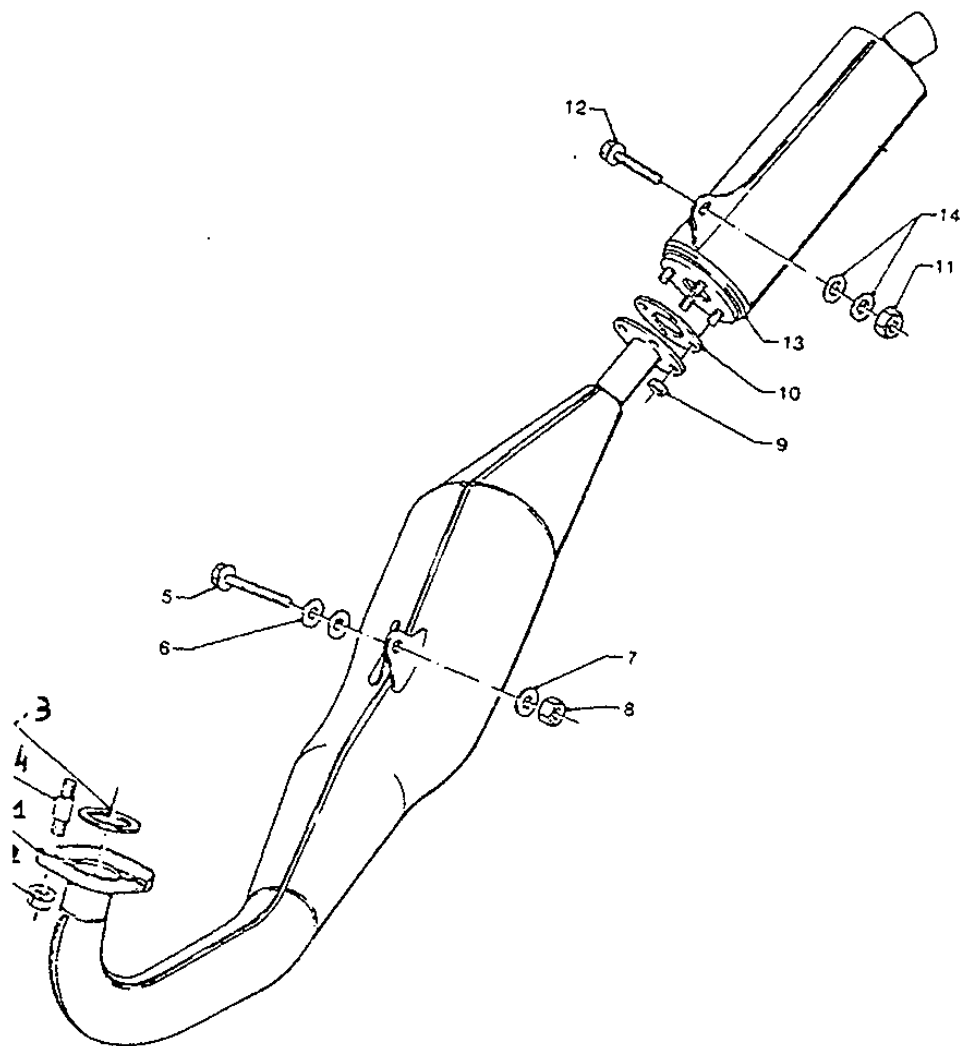 


080

 B

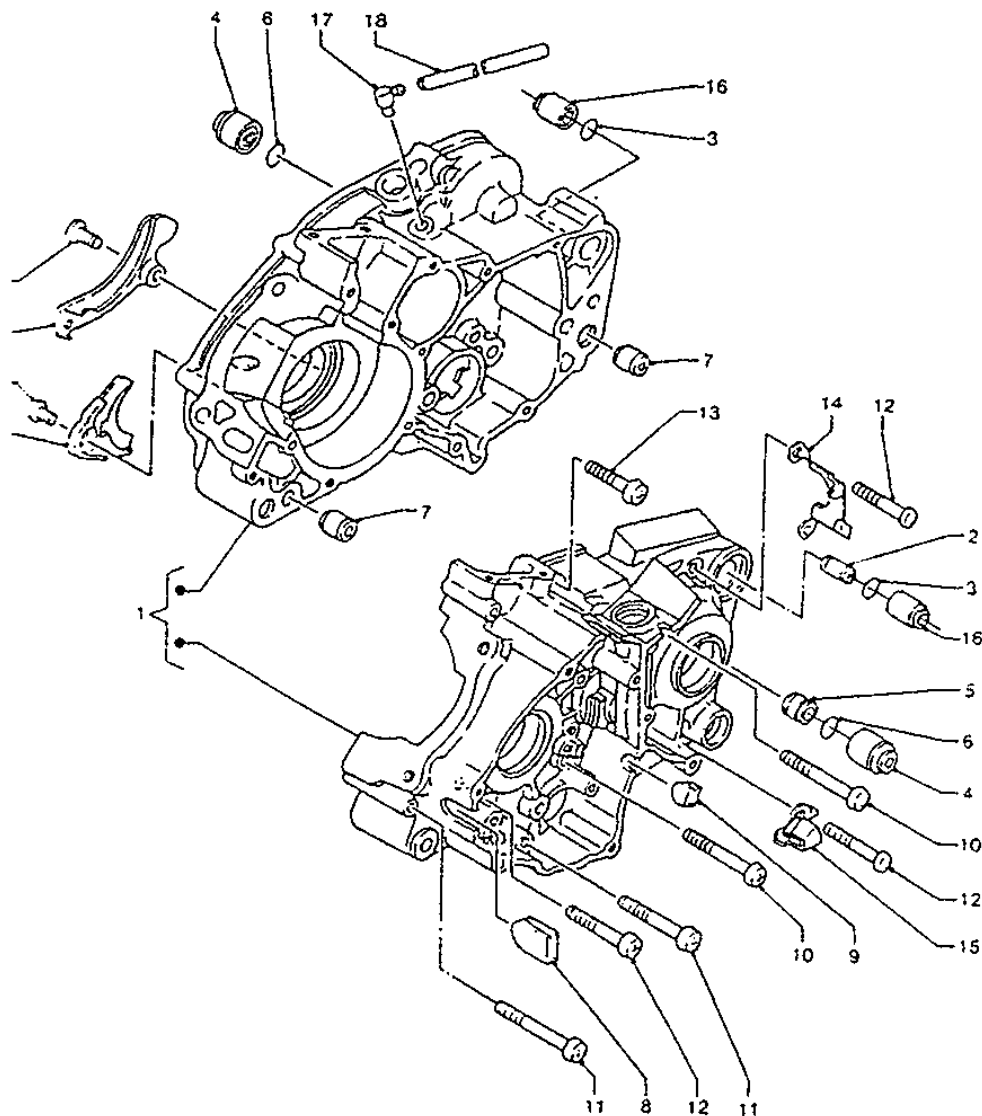

Ref No	Part No	Description
01	4DL-E5150-00-00	Crankcase Assy
02	4DL-E5317-00-00	Spacer, Engine Mount
03	93210-12095-00	O-ring
04	328-15316-00-00	Damper, Engine Mount 1
05	3NC-E5317-00-00	Spacer, Engine Mount
06	93210-12095-00	O-ring
07	99510-12016-00	Pin, Dowel
08	3SH-E5167-00-00	Plug, Blind 1
09	3SH-E5168-00-00	Plug, Blind 2
10	98501-06060-00	Screw, Pan Head
11	98501-06065-00	Screw, Pan Head
12	98501-06050-00	Screw, Pan Head
13	98501-06040-00	Screw, Pan Head
14	90462-08189-00	Clamp
15	90462-10190-00	Clamp
16	328-15316-00-00	Damper, Engine Mount 1
17	3FN-E5371-00-00	Breather
18	90445-05001-00	Hose
19	3FN-E5128-00-00	Holder
20	98501-08010-00	Screw, Pan Head
21	3FN-E5492-00-00	Cover
22	98501-06012-00	Screw, Pan Head

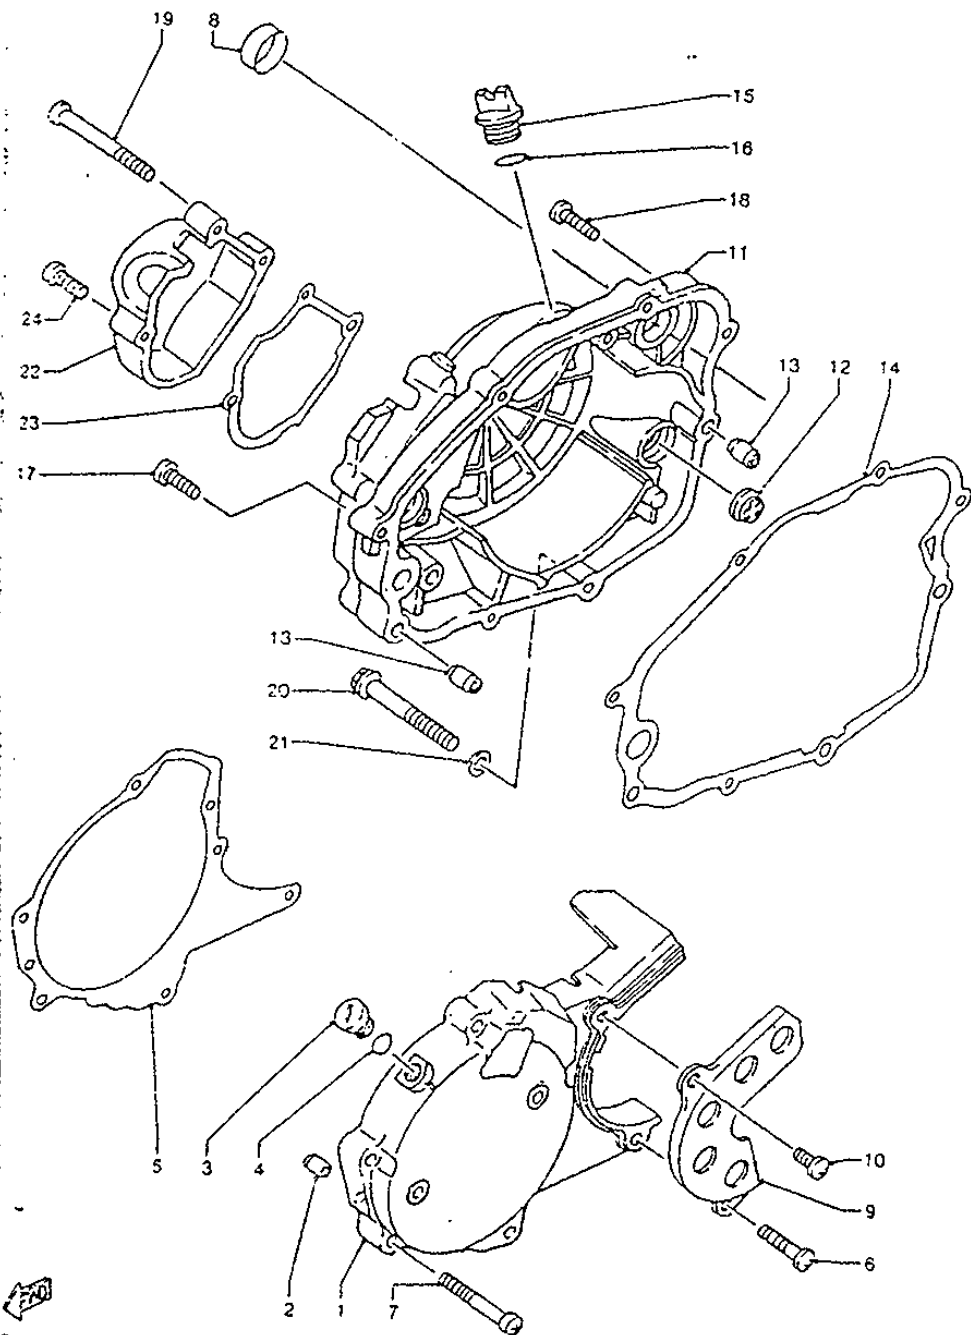 



Ref No	Part No	Description
01	4DL-E5411-00-00	Cover, Crankcase 1
02	93606-14081-00	Pin, Dowel
03	90340-14120-00	Plug, Straight Screw
04	93210-14369-00	O-ring
05	3SH-E5455-00-00	Gasket 1
06	98506-06035-00	Screw, Pan Head
07	98506-06060-00	Screw, Pan Head
08	3SH-E542A-00-00	Damper 1
09	4DL-E5431-00-00	Cover, Crankcase 3
10	98506-06010-00	Screw, Pan Head
11	3NC-E5421-00-00	Cover, Crankcase 2
12	3Y1-15361-00-00	Gauge, Level
13	99530-10014-00	Pin, Dowel
14	3NC-E5451-00-00	Gasket, Crankcase Cover 1
15	2VR-E5363-00-00	Plug, Oil
16	93210-19123-00	O-ring
17	98516-06030-00	Screw, Pan Head
18	98501-06030-00	Screw, Pan Head
19	98506-06030-00	Screw, Pan Head
20	95806-08080-00	Bolt, Flange
21	90201-08087-00	Washer, Plate
22	3NC-E5416-00-00	Cover, Oil Pump
23	3NC-E5456-00-00	Gasket, Oil Pump Cover 1
24	98516-06030-00	Screw, Pan Head

200-1100



Ref No	Part No	Description
01	3AY-15524-00-00	Wheel, Starter
02	93310-23081-00	Bearing
03	3MB-15544-00-00	Stay 1
04	98701-06016-00	Screw, Flat Head
05	3AY-15580-00-00	Starter Clutch Outer Assy
06	3AY-15583-00-00	Cap, Starter Clutch Spring
07	93610-10174-00	• Pin, Dowel
08	90501-02693-00	• Spring, Compression
09	50W-15650-00-00	Idle Gear Assy
10	3SH-E3342-00-00	Shaft, Idle Gear
11	90201-08092-00	Washer, Plate
12	3SH-E5532-00-00	Plate, Idle Gear
13	90501-06040-00	Spring, Compression
14	92901-06600-00	Washer, Plate
15	91312-06012-00	Bolt

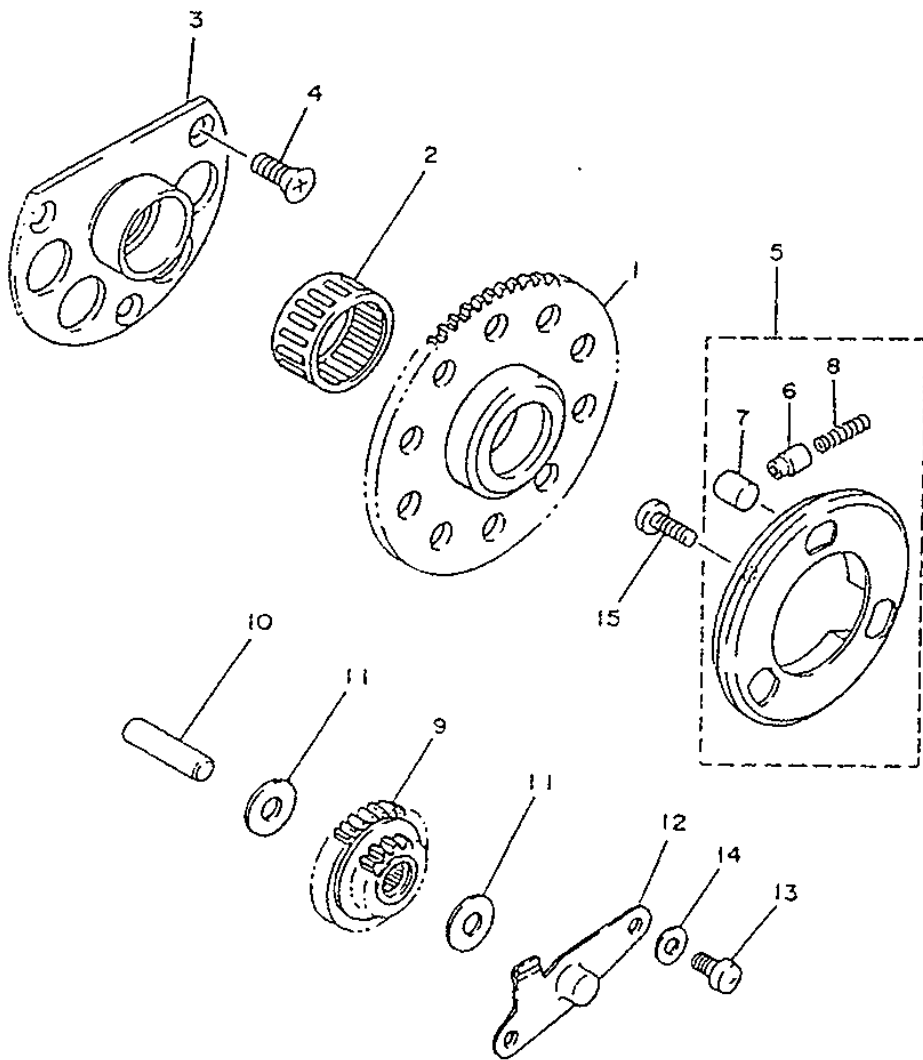 


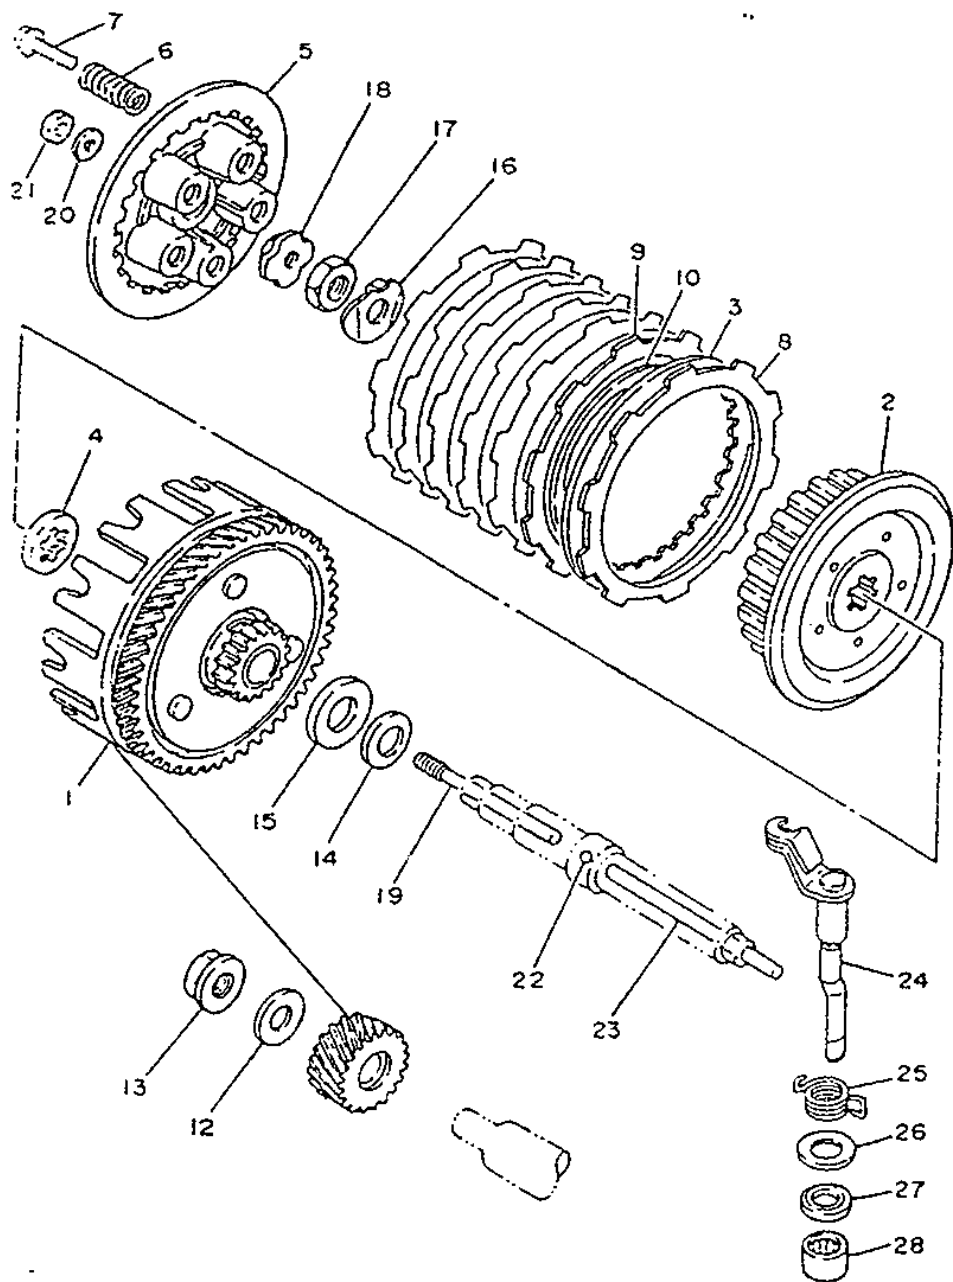 


Ref No	Part No	Description
01	3NC-E6150-00-00	Primary Driven Gear Comp.
02	3NC-E6371-00-00	Boss, Clutch
03	2AH-E6324-00-00	Plate, Clutch 1
04	3NC-E6154-00-00	Plate, Thrust 1
05	3NC-E6351-00-00	Plate, Pressure 1
06	90501-20644-00	Spring, Compression
07	90119-05001-00	Bolt, With Washer
08	3FN-E6321-00-00	Plate, Friction
09	3NC-E6331-00-00	Plate, Friction 2
10	3NC-E6383-00-00	Spring, Clutch Boss
12	90201-120E8-00	Washer, Plate
13	90179-12244-00	Nut
14	90208-18046-00	Washer, Conical Spring
15	3NC-E6164-00-00	Plate, Thrust 2
16	90215-12271-00	Washer, Lock
17	90170-12370-00	Nut
18	2AH-E6358-00-00	Plate, Push
19	2AH-E6356-00-00	Rod, Push 1
20	92901-06200-00	Washer, Plain
21	95303-06600-00	Nut
22	93503-16010-00	Ball
23	2VR-E6357-00-00	Rod, Push 2
24	3NC-E6380-00-00	Push Lever Assy
25	90508-18765-00	Spring, Torsion
26	90201-14217-00	Washer, Plate
27	93104-14004-00	Oil Seal
28	93315-21429-00	Bearing



Ref No	Part No	Description
01	3NC-E7411-00-00	Axle, Main
02	3NC-E7121-00-00	Gear, 2nd Pinion
03	4DL-E7131-00-00	Gear, 3rd Pinion
04	4DL-E7151-00-00	Gear, 5th Pinion
05	4DL-E7161-00-00	Gear, 6th Pinion
06	90201-20266-00	Washer, Plate
07	93410-20038-00	Circlip
08	93306-20431-00	Bearing
09	93311-31567-00	Bearing
10	3NC-E7421-00-00	Axle, Drive
11	3NC-E7211-00-00	Gear, 1st Wheel
12	4DL-E7221-00-00	Gear, 2nd Wheel
13	4DL-E7231-00-00	Gear, 3rd Wheel
14	2VR-E7241-00-00	Gear, 4th Wheel
15	4DL-E7251-00-00	Gear, 5th Wheel
16	4DL-E7261-00-00	Gear, 6th Wheel
17	90201-154E8-00	Washer, Plate
18	99009-15400-00	Circlip
19	90209-18135-00	Washer
20	93410-22039-00	Circlip
21	90201-22555-00	Washer, Plate
22	93306-202X2-00	Bearing
23	93306-304Y1-00	Bearing
24	93102-26042-00	Oil Seal
25	90387-205U0-00	Collar
26	4DL-E5691-00-00	Sprocket, Drive
27	90215-20261-00	Washer, Lock
28	90179-16226-00	Nut
29	2VR-E7471-00-00	Plate, Cover
30	98501-06012-00	Screw, Pan Head

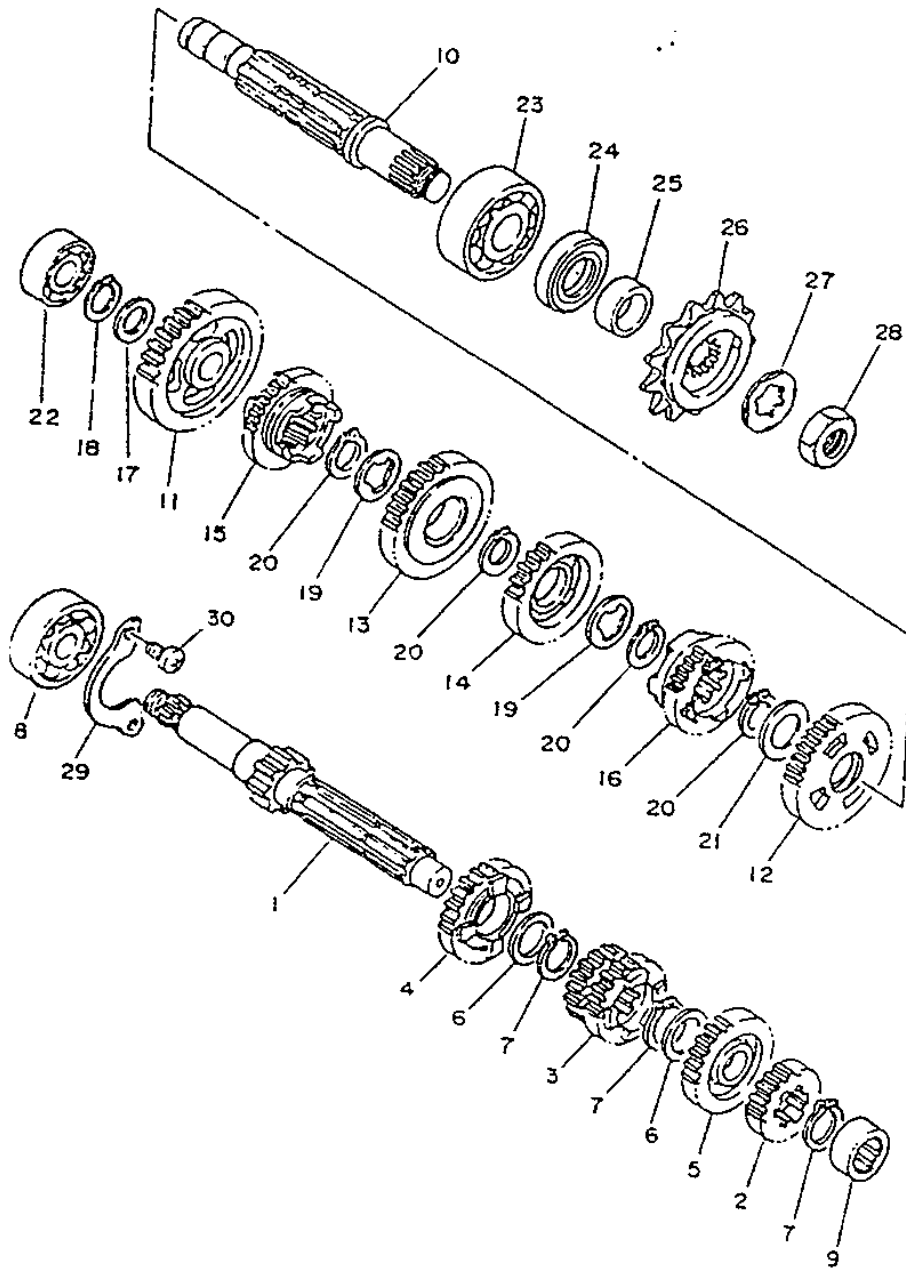 



XO-1130

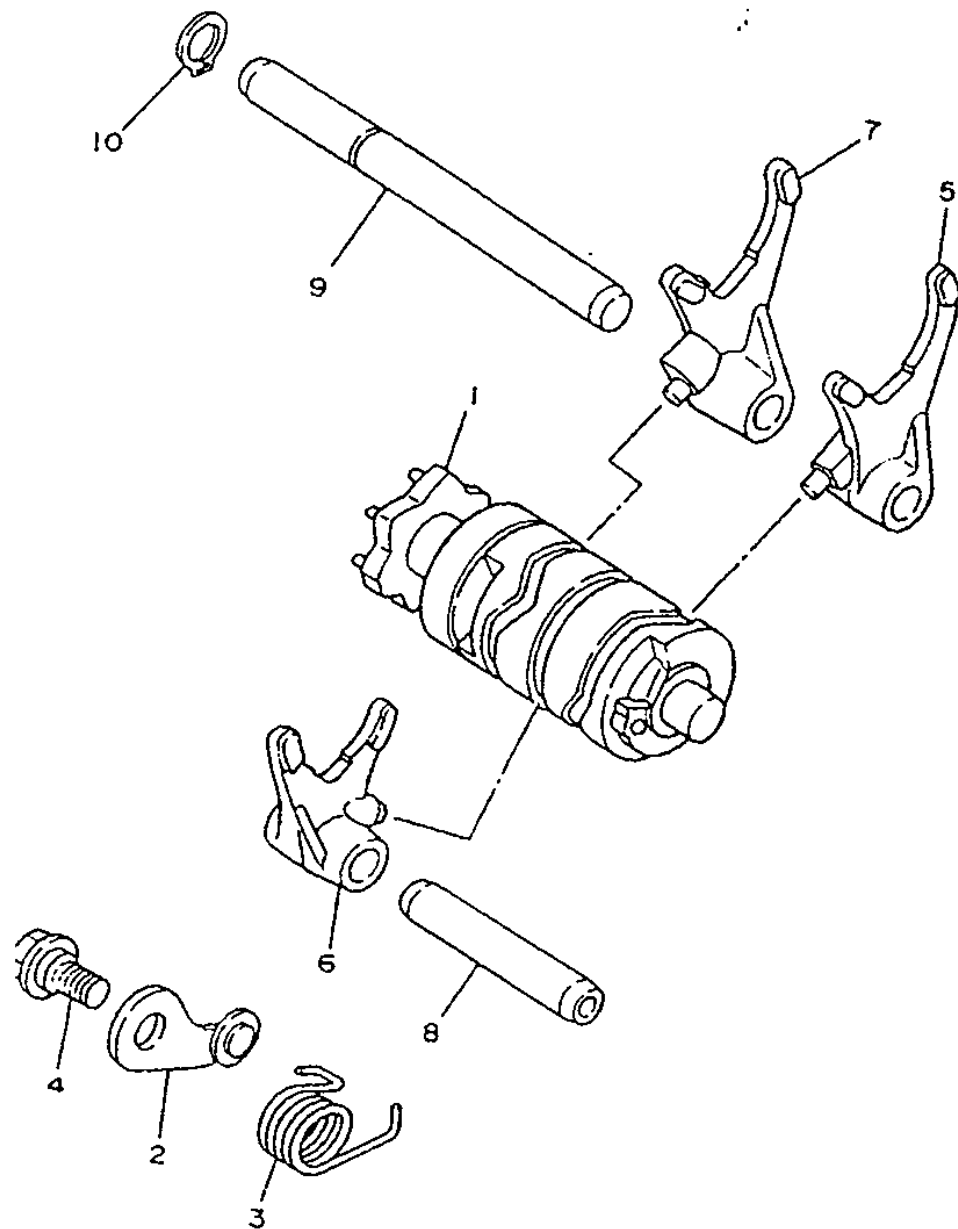 

Ref No	Part No	Description
01	4DL-E8540-00-00	Shift Cam Assy
02	3NC-E8140-00-00	Stopper Lever Assy
03	90508-26561-00	Spring, Torsion
04	2AH-E8177-00-00	Bolt, Stopper
05	2VR-E8511-00-00	Fork, Shift 1
06	2VR-E8512-00-00	Fork, Shift 2
07	2VR-E8513-00-00	Fork, Shift 3
08	3NC-E8531-00-00	Bar, Shift Fork Guide 1
09	3NC-E8535-00-00	Bar, Shift Fork Guide 2
10	99009-10400-00	Circlip

Ref No	Part No	Description
01	10W-18101-03-00	Shift Shaft Assy
02	93101-12060-00	Oil Seal
03	90508-32523-00	Spring, Torsion
04	99001-10600-00	Circlip
05	4DL-E8110-00-00	Shift Pedal Assy
06	4DL-E8113-00-00	• . Cover, Shift Pedal
07	2H9-18156-00-00	• . Joint 1
08	99009-12400-00	Circlip
09	90201-124E4-00	Washer, Plate
10	90206-12074-00	Washer, Wave
11	97381-06025-00	Bolt
12	92902-06600-00	Washer, Plate
13	4DL-E8115-00-00	Rod, Shift
14	95301-06700-00	Nut
15	4DL-E8130-00-00	Shift Shaft Assy
16	2H9-18156-00-00	• . Joint 1

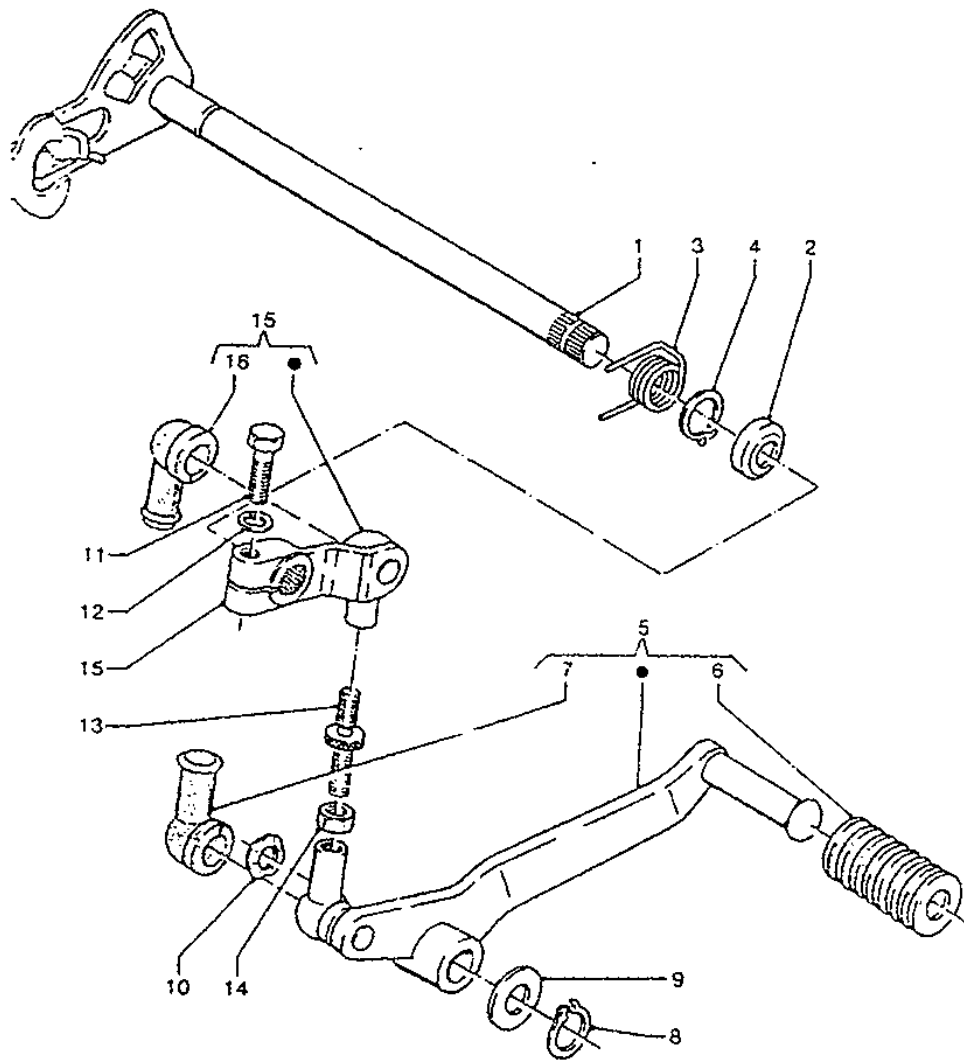 

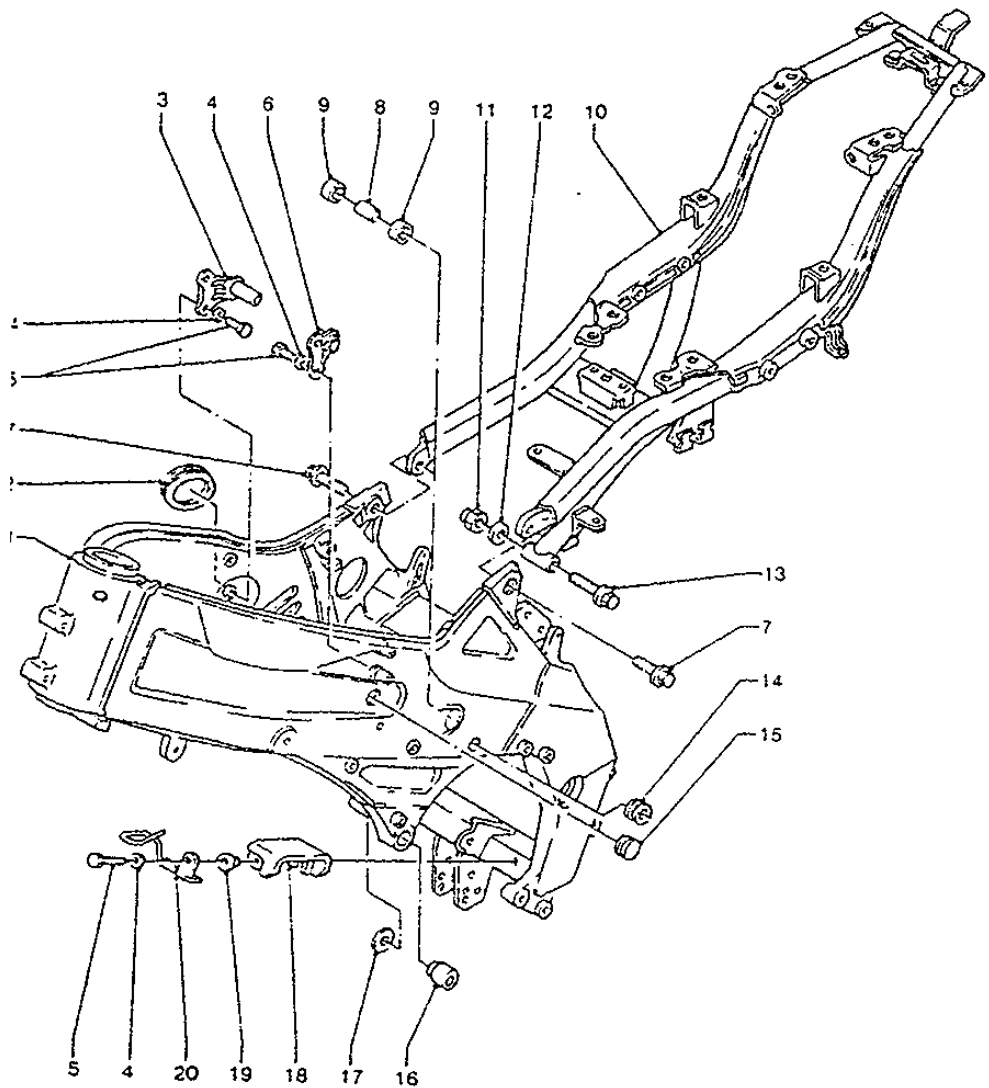 


Ref No	Part No	Description
01	4DL-F1110-10-33	Frame Comp.
01	4DL-F1110-10-AL	Frame Comp.
02	1WG-2117M-00-00	Cover 2
03	4DL-F1148-00-00	Bracket, Air Cleaner 2
04	92902-06600-00	Washer, Plate
05	97001-06020-00	Bolt
06	4DL-F1147-00-00	Bracket, Air Cleaner 1
07	90105-10459-00	Bolt, Washer Based
08	90387-10002-00	Collar
09	90480-15001-00	Grommet
10	4DL-F1190-00-33	Rear Frame Comp.
10	4DL-F1190-00-35	Rear Frame Comp.
11	95611-10100-00	Nut, U
12	90201-101J1-00	Washer, Plate
13	90105-10609-00	Bolt, Washer Based
14	90480-09018-00	Grommet
15	90338-15202-00	Plug
16	328-15316-00-00	Damper, Engine Mount 1
17	3MA-2140A-00-00	Damper, Stopper
18	3MA-22147-00-00	Protector, Chain
19	90387-06020-00	Collar
20	4DL-F1162-00-00	Holder, Clutch Cable

1160



Ref No	Part No	Description
01	3MA-21162-10-00	Holder, Clutch Cable
02	91026-06012-00	Bolt, Flange
03	4DL-F1163-10-00	Holder, Clutch Cable
04	97001-06020-00	Bolt
05	92902-06600-00	Washer, Plate
06	4DL-F1163-00-00	Holder, Clutch Cable
07	4DL-F1161-01-00	Holder, Cable
08	3SH-F6394-00-00	Clip, Grommet
09	3MA-21161-10-00	Holder, Cable
10	3MA-21164-10-00	Holder, Cable
11	90185-08089-00	Nut, Self-locking
12	92901-08200-00	Washer, Plain
13	4DL-F194F-00-00	Bracket, Engine
14	90101-08095-00	Bolt
15	90101-08085-00	Bolt
16	90105-08035-00	Bolt, Washer Based
17	4DL-F194E-00-00	Bracket, Engine
18	97382-06016-00	Bolt
19	92902-06600-00	Washer, Plate
20	4DL-F116A-00-20	Stay 1
21	90105-10052-00	Bolt, Washer Based
22	90201-100E9-00	Washer, Plate
23	90185-10060-00	Nut, Self-locking
24	92902-06200-00	Washer

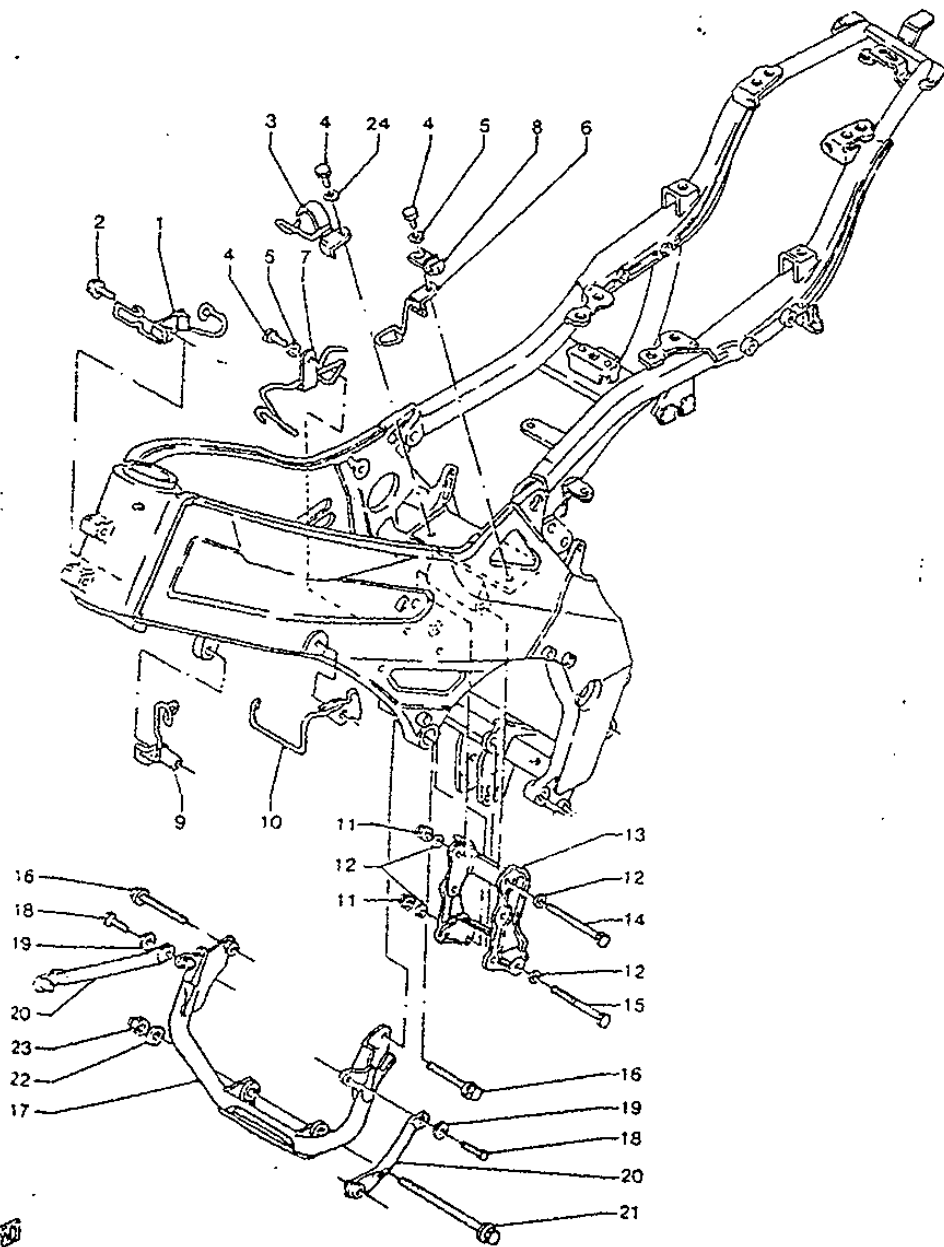 



~1170

[

Ref No	Part No	Description
--------	---------	-------------


01	90387-06681-00	Collar
02	90119-06043-00	Bolt, With Washer
03	95702-06100-00	Nut, Flange
04	92902-06600-00	Washer, Plate
05	90101-06035-00	Bolt
06	1A8-21518-00-00	Holder, Cable
07	4DL-F163A-00-00	Cover, Rear Fender 1
08	4DL-F163E-00-00	Cover, Rear Fender 2
09	97382-06020-00	Bolt
10	92902-06200-00	Washer
11	4DL-F1611-10-00	Fender, Rear
12	4DL-F1717-00-00	Damper

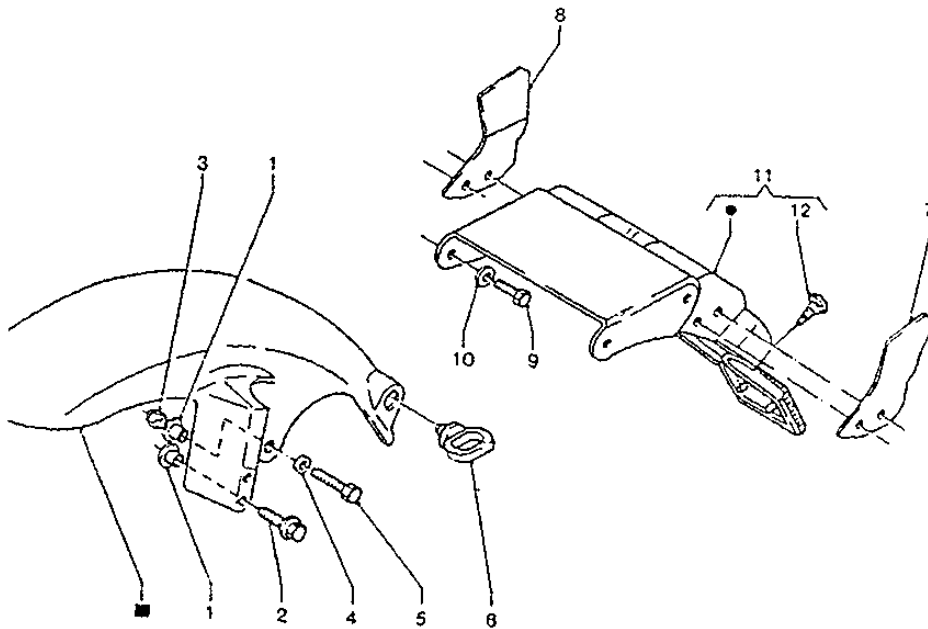 


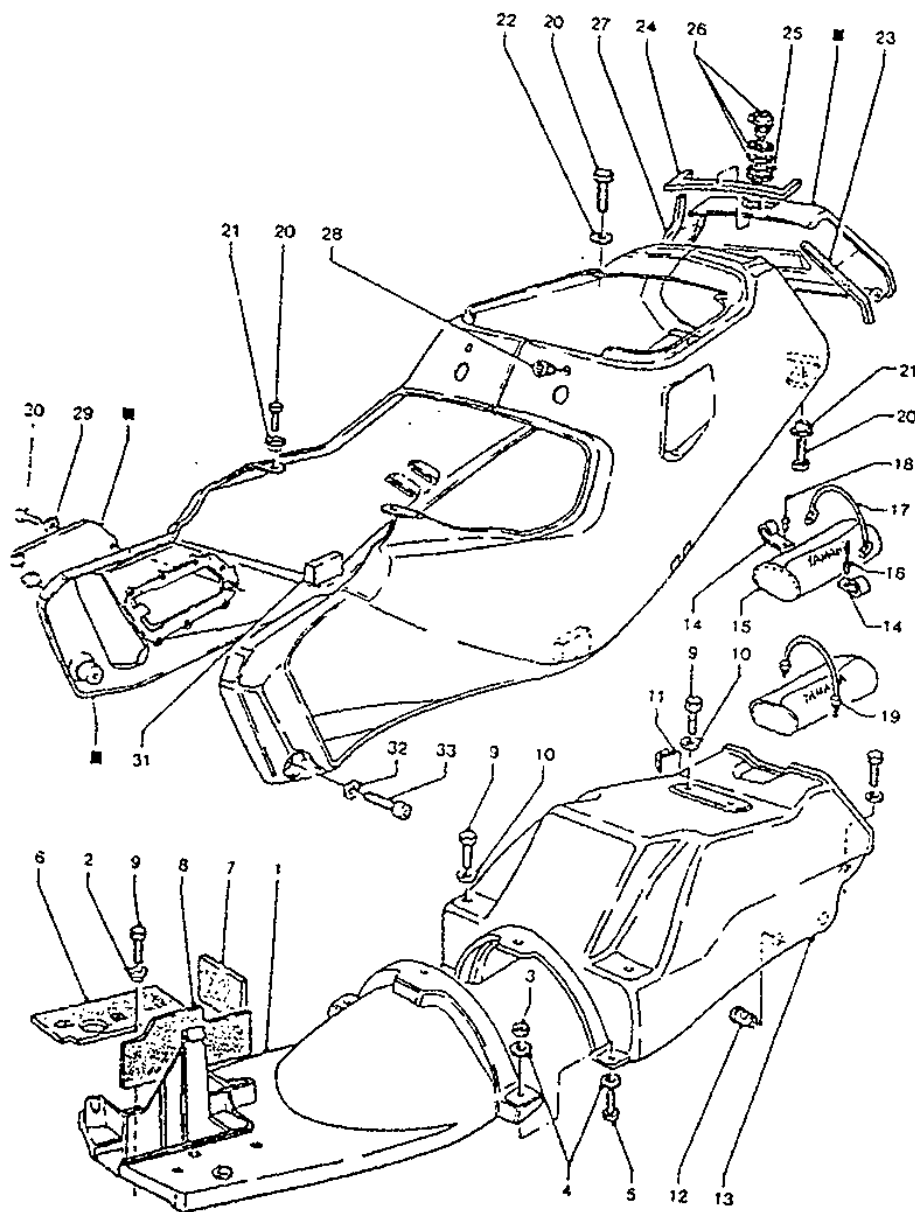 

Ref No	Part No	Description
01	4DL-F177G-00-00	Box, Battery
02	90387-06020-00	Collar
03	95702-06100-00	Nut, Flange
04	92902-06200-00	Washer
05	90101-06022-00	Bolt
06	4DL-F1779-00-00	Damper, Locating 2
07	4DL-F177M-00-00	Damper, Locating 3
08	4DL-F1778-00-00	Damper, Locating 1
09	97382-06014-00	Bolt
10	92902-06200-00	Washer
11	2VW-F8345-00-00	Mole 1
12	90179-06822-00	Nut
13	4DL-F8173-00-00	Box, Tool
14	4DL-F1945-00-00	Bracket, Tool Box Fitting
15	3SH-F8100-00-00	Tool Kit
16	90267-40016-00	Rivet, Blind
17	4DL-F846G-00-00	Band, 1
18	90267-40029-00	Rivet, Blind
19	4DL-F846G-10-00	Band
20	97382-06014-00	Bolt
21	90387-06020-00	Collar
22	92902-06200-00	Washer
23	4DL-F1649-10-00	Damper
24	4DL-F1639-00-00	Damper 2
25	90480-24186-00	Grommet
26	3MA-21708-00-00	Lock Assy 2
27	4DL-F1649-00-00	Damper
28	90179-06822-00	Nut
29	92906-04600-00	Washer, Plate
30	98906-04014-00	Screw, Bind
31	4DL-F177N-00-00	Damper, Locating 4
32	92902-06600-00	Washer, Plate
33	92012-06020-00	Bolt, Button Head

Ref No	Part No	Description
01	3MA-21751-01-00	Tank, Oil
02	90119-06096-00	Bolt, With Washer
03	47X-21771-00-00	Body, Cap
04	38N-13416-00-00	Pipe, Oil 1
05	90467-08003-00	Clip
06	90467-11001-00	Clip
07	4DL-F1745-00-00	Pipe, Oil Tank Breather
08	90467-10001-00	Clip
09	4DL-F172M-00-00	Bracket 3
10	91026-06012-00	Bolt, Flange
11	4DL-F8217-00-00	Damper 1
12	3MA-21871-01-00	Tank, Recovery
13	90119-06096-00	Bolt, With Washer
14	90105-08307-00	Bolt, Washer Based
15	1AA-21815-00-00	Cap
16	90445-080F3-00	Hose
17	90467-11001-00	Clip
18	4DL-F172N-00-00	Bracket 4
19	97386-06010-00	Bolt
20	92906-06100-00	Washer, Spring
21	4DL-F8217-00-00	Damper 1
22	90501-08430-00	• Spring, Compression
23	3SH-F6394-00-00	Clip, Grommet

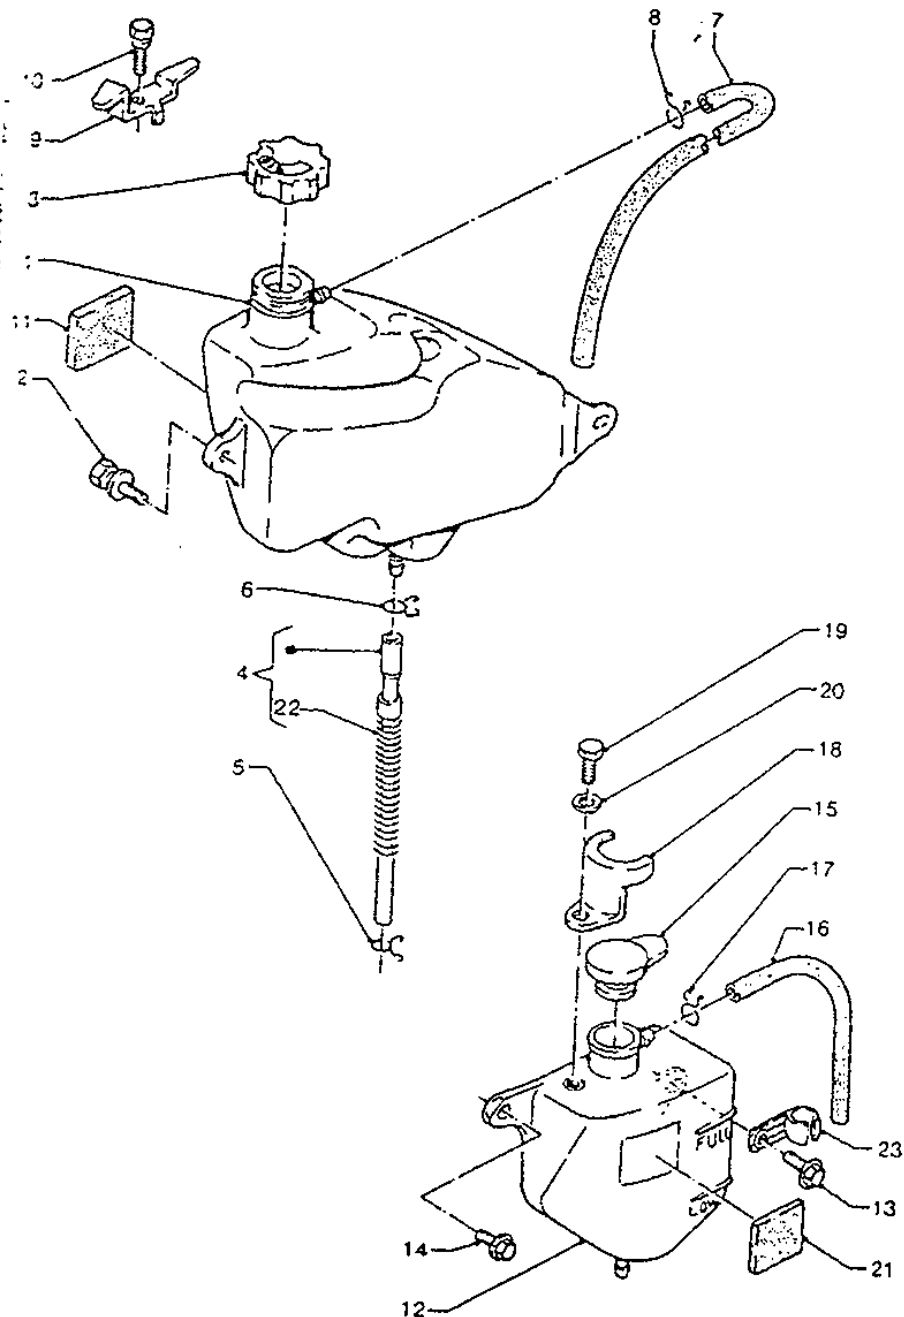 


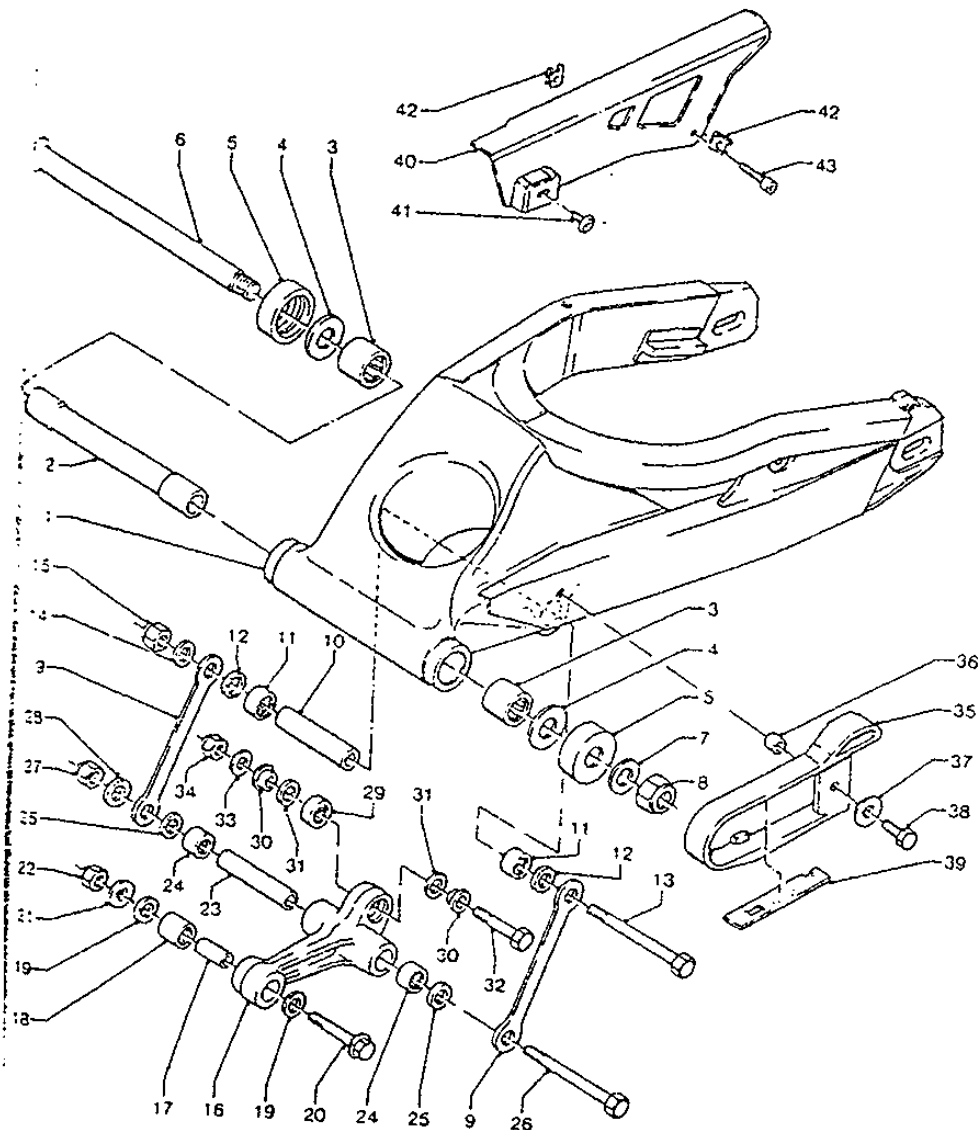 


Ref No	Part No	Description
01	4DL-F2110-10-35	Rear Arm Comp.
02	3MA-22184-00-00	Bush
03	93317-52865-00	Bearing
04	3GM-22127-00-00	Shim
05	3GM-22128-00-00	Cover, Thrust 1
06	3MA-22141-01-00	Shaft, Pivot
07	90201-18264-00	Washer, Plate
08	90185-18104-00	Nut, Self-locking
09	3MA-2217M-00-00	Arm 1
10	90387-122R5-00	Collar
11	93317-21746-00	Bearing
12	93109-17048-00	Oil Seal
13	90101-10658-00	Bolt
14	90201-101J1-00	Washer, Plate
15	95611-10100-00	Nut, U
16	3MA-2217A-00-00	Arm, Relay
17	90387-102R4-00	Collar
18	93317-31701-00	Bearing
19	93109-17048-00	Oil Seal
20	90105-10376-00	Bolt, Washer Based
21	90201-102J5-00	Washer, Plate
22	95611-10100-00	Nut, U
23	90387-122R5-00	Collar
24	93317-21746-00	Bearing
25	93109-17048-00	Oil Seal
26	90101-10658-00	Bolt
27	95611-10100-00	Nut, U
28	90201-101J1-00	Washer, Plate
29	93399-99919-00	Bearing
30	90387-124W2-00	Collar
31	93101-16131-00	Oil Seal
32	90101-10659-00	Bolt
33	90201-101J1-00	Washer, Plate
34	95611-10100-00	Nut, U
35	4DL-F2151-00-00	Seal, Guard
36	90387-062E2-00	Collar
37	92906-06200-00	Washer, Plain
38	97006-06020-00	Bolt
39	4DL-F214F-00-00	Damper 1
40	4DL-F2311-00-00	Case, Chain
41	90110-06015-00	Bolt, Hexagon Socket Head
42	2VW-21736-00-00	Nut,plate
43	91316-06025-00	Bolt

 20-1210




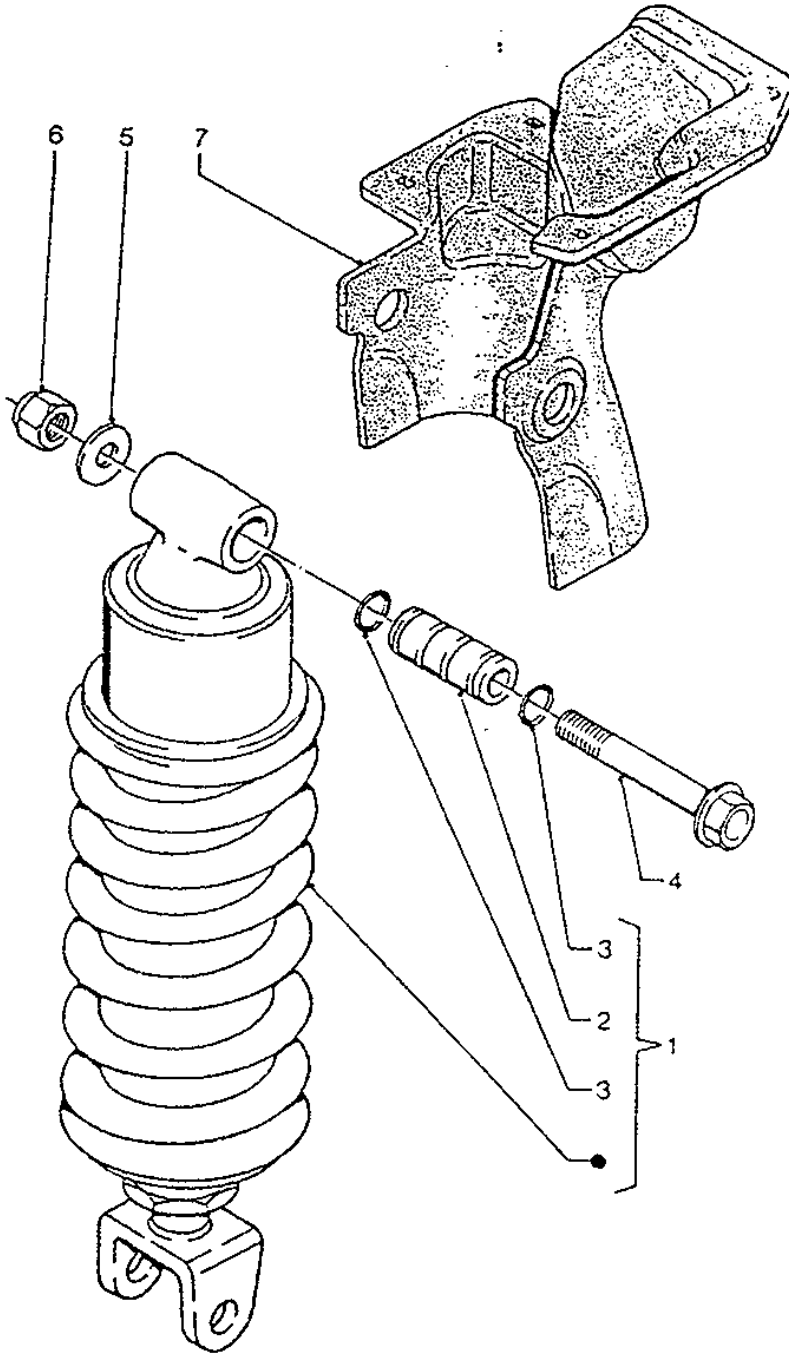

Ref No	Part No	Description
01	4DL-F2210-10-33	Shock Absorber Assy, Rear
02	90387-10306-00	• Collar
03	93210-15020-00	• O-ring
04	90105-10609-00	Bolt, Washer Based
05	90201-101J1-00	Washer, Plate
06	95611-10100-00	Nut, U
07	4DL-F2221-00-00	Cover

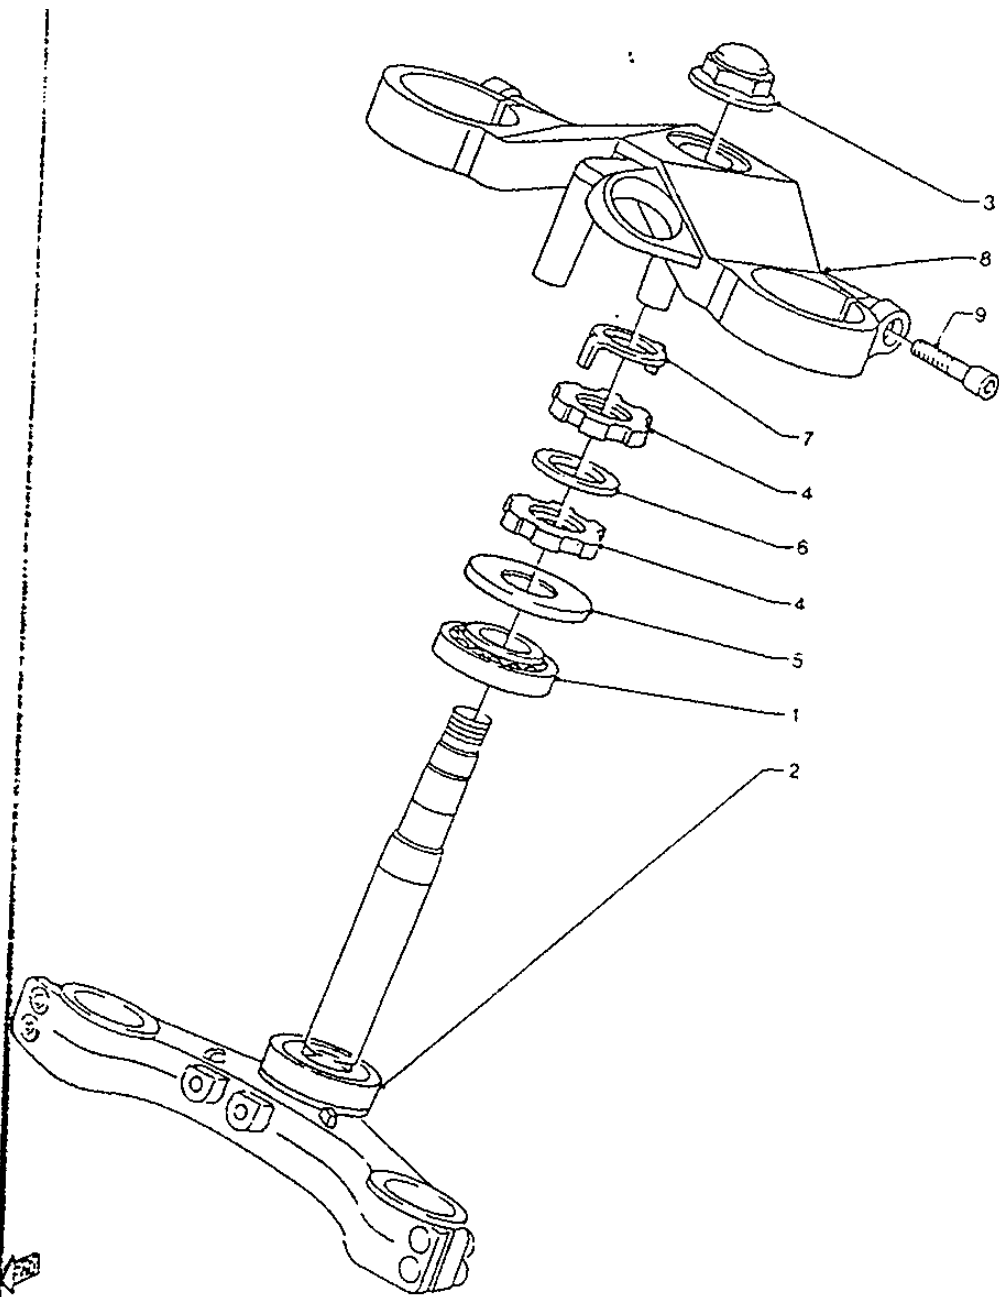 


Ref No	Part No	Description
01	93332-00001-00	Bearing
02	93332-000Y3-00	Bearing
03	90176-22050-00	Nut, Crown
04	90176-25033-00	Nut, Crown
05	3EN-23415-00-00	Cover, Ball Race 1
06	90202-26142-00	Washer, Plate
07	26H-23418-01-00	Washer, Special
08	4DL-F3435-00-33	Crown, Handle
09	91311-08035-00	Bolt

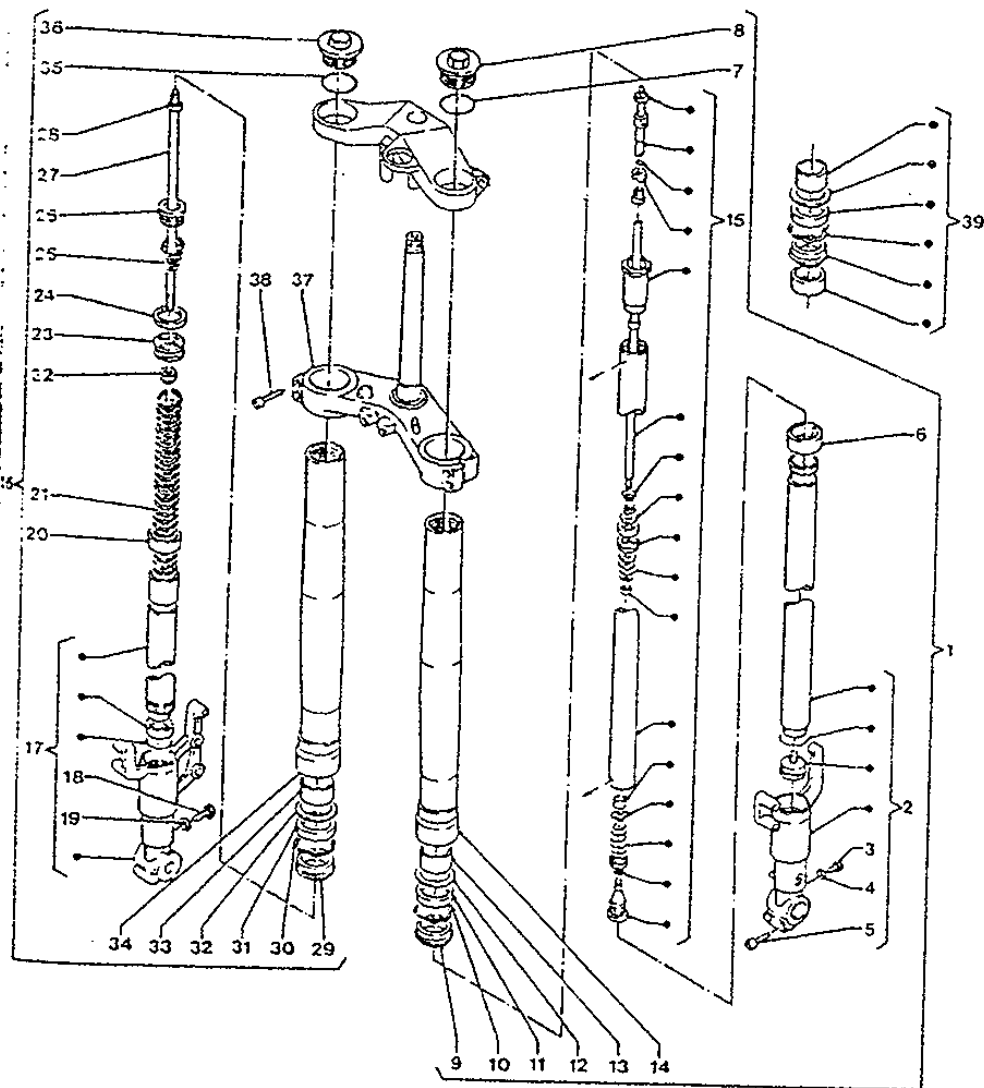 


Ref No	Part No	Description
01	4DL-F3102-00-00	Front Fork Assy (l.h)
01	4DL-F3102-01-00	Front Fork Assy (l.h)
01	4DL-F3102-02-00	Front Fork Assy (l.h)
02	4DL-F3120-00-00	. Inner Tube Comp.2
02	4DL-F3120-01-00	. Inner Tube Comp.2
02	4DL-F3120-02-00	. Inner Tube Comp.2
03	97311-06008-00	. Bolt
04	3HL-F3129-00-00	. Gasket, Drain Plug
05	91311-06035-00	. Bolt
06	3SH-F3173-00-00	. Spindle, Taper
07	4DL-F3147-00-00	. O-ring
08	4DL-F3111-00-00	. Bolt, Cap
09	3SH-F3144-00-00	. Seal, Dust
10	3NG-F3156-00-00	. Clip, Oil Seal
11	3NG-F3145-00-00	. Oil Seal
12	3NG-F3146-00-00	. Washer, Oil Seal
13	3SH-F3125-00-00	. Metal, Slide 1
14	4DL-F3136-00-00	. Tube, Outer (right)
15	4DL-F319K-00-00	. Plunger Kit
15	4DL-F319K-01-00	. Plunger Kit
16	4DL-F3103-00-00	Front Fork Assy (r.h)
16	4DL-F3103-01-00	Front Fork Assy (r.h)
17	4DL-F3110-00-00	. Inner Tube Comp.1
17	4DL-F3110-01-00	. Inner Tube Comp.1
18	97311-06008-00	. Bolt
19	3HL-F3129-00-00	. Gasket, Drain Plug
20	3SH-F3173-00-00	. Spindle, Taper
21	4DL-F3141-00-00	. Spring, Front Fork
22	95711-08300-00	. Nut, Flange
23	4DL-F3171-00-00	. Piston, Front Fork
24	4DL-F3157-00-00	. Ring, Piston
25	4DL-F3117-00-00	. Guide, Spring
26	4DL-F312G-00-00	. Plug
27	4DL-F318Y-00-00	. Plunger
28	95711-07300-00	. Nut, Flange
29	3SH-F3144-00-00	. Seal, Dust
30	3NG-F3156-00-00	. Clip, Oil Seal
31	3NC-F3145-00-00	. Oil Seal
32	3NG-F3146-00-00	. Washer, Oil Seal
33	3SH-F3125-00-00	. Metal, Slide 1
34	4DL-F3136-00-00	. Tube, Outer (right)
35	4DL-F3147-00-00	. O-ring
36	4DL-F3111-00-00	. Bolt, Cap
37	4DL-F3340-00-00	Under Bracket Comp.
38	91311-08030-00	Bolt
39	4DL-F3114-00-00	Gasket

 00-1240

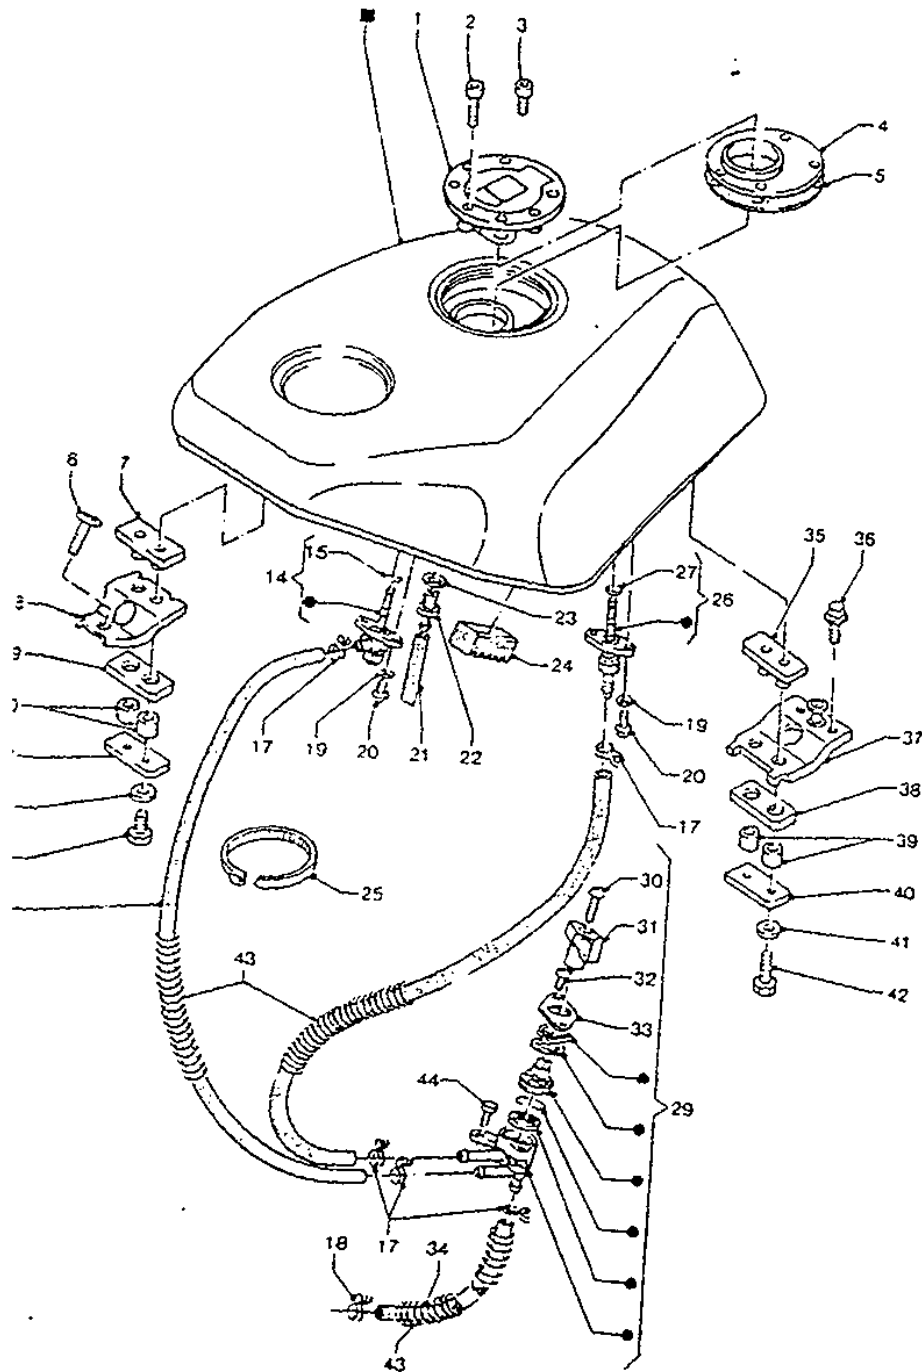

Ref No	Part No	Description
01	1JK-24602-11-00	Cap Assy
02	91311-05025-00	Bolt
03	91311-05010-00	Bolt
04	3SH-F4114-00-00	Tube, Filler
05	3SH-F414A-00-00	Cover, Filler
06	90110-06015-00	Bolt, Hexagon Socket Head
07	2GH-24181-00-00	Damper, Locating 1
08	3MA-24191-00-00	Bracket, Fuel Tank 1
09	2GH-24183-00-00	Damper, Locating 3
10	90387-06299-00	Collar
11	2GH-24186-00-00	Washer, Special
12	92902-06100-00	Washer, Spring
13	97001-06025-00	Bolt
14	4DL-F4510-10-00	Fuel Cock Assy 2
15	93210-11114-00	• O-ring
16	90445-100G2-00	Hose
17	90467-11001-00	Clip
18	90467-12001-00	Clip
19	90202-06010-00	Washer, Plate
20	90149-06011-00	Screw
21	90445-080F3-00	Hose
22	3SH-F4155-00-00	• Indicator, Choke
23	3SH-F415A-00-00	• Label, Caution
24	3MA-24182-00-00	Damper, Locating 2
25	437-83936-01-00	Band, Switch Cord
26	4DL-F4510-00-00	Fuel Cock Assy 2
27	93210-11114-00	• O-ring
28	90445-100G1-00	Hose
29	4DL-F4500-00-00	Fuel Cock Assy 1
30	98501-04015-00	Screw, Pan Head
31	4DL-F4524-00-00	• Lever, Cock
32	98501-03008-00	• Screw, Pan Head
33	4DL-F4525-00-00	• Plate, Lever Fitting
34	90445-100G3-00	Hose
35	2GH-24181-00-00	Damper, Locating 1
36	91026-06012-00	Bolt, Flange
37	3MA-24192-00-00	Bracket, Fuel Tank 2
38	2GH-24183-00-00	Damper, Locating 3
39	90387-06299-00	Collar
40	2GH-24186-00-00	Washer, Special
41	92901-06100-00	Washer, Spring
42	97001-06025-00	Bolt
43	90501-13001-00	Spring, Compression
44	91006-06010-00	Bolt, Flange




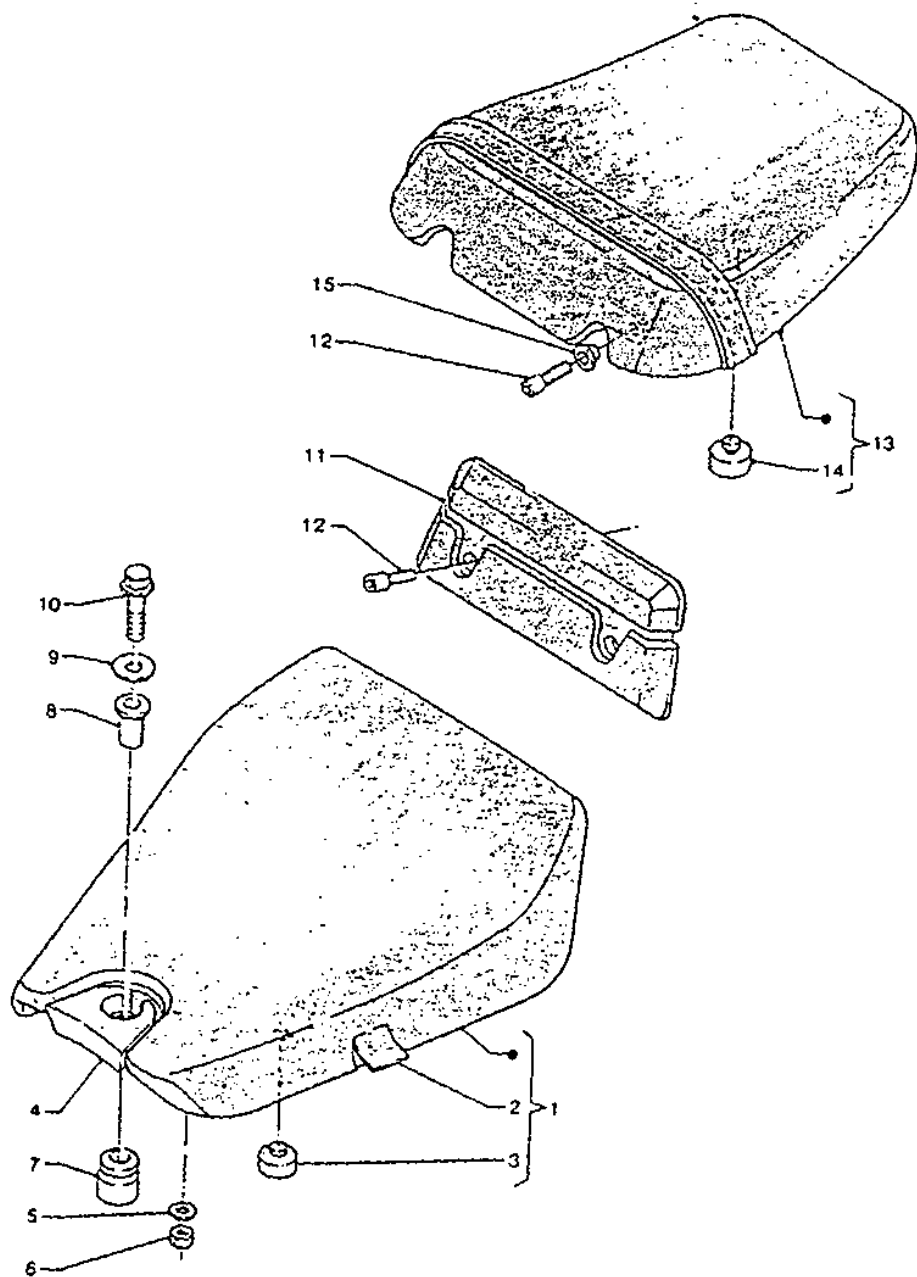 


Ref No	Part No	Description
01	4DL-F4710-00-00	Single Seat Assy
02	4DL-F4711-00-00	• . Cover, Single Seat
03	4DL-F4741-00-00	• . Pad, Seat
04	4DL-F4708-00-00	Seat Lever Assy
05	92902-06200-00	Washer
06	95712-06300-00	Nut, Flange
07	90480-17507-00	Grommet
08	90387-084L1-00	Collar
09	90201-086A3-00	Washer, Plate
10	95026-08040-00	Bolt, Flange
11	4DL-F840F-00-00	Back Rest Assy
12	91316-06014-00	Bolt
13	4DL-F4750-00-00	Tandem Seat Assy
14	4DL-F4741-00-00	• . Pad, Seat
15	90387-06500-00	Collar

Ref No	Part No	Description
--------	---------	-------------


01	4DL-F5168-00-33	Cast Wheel, Front
01	4DL-F5168-00-UJ	Cast Wheel, Front
02	90560-18001-00	Spacer
03	93900-00001-00	Valve, Rim
04	93306-00001-00	Bearing
05	93102-23252-00	Oil Seal
06	90387-17001-00	Collar
07	341-25149-00-00	Clutch, Meter
08	341-25846-00-00	Retainer, Clutch
09	93105-45017-00	Oil Seal
10	3MA-25190-00-00	Gear Unit Assy
11	90387-17002-00	Collar
12	3GM-25181-00-00	Axle, Wheel
13	4DL-F5108-00-00	Front Tire Set
13	4DL-F5108-10-00	Front Tire Set

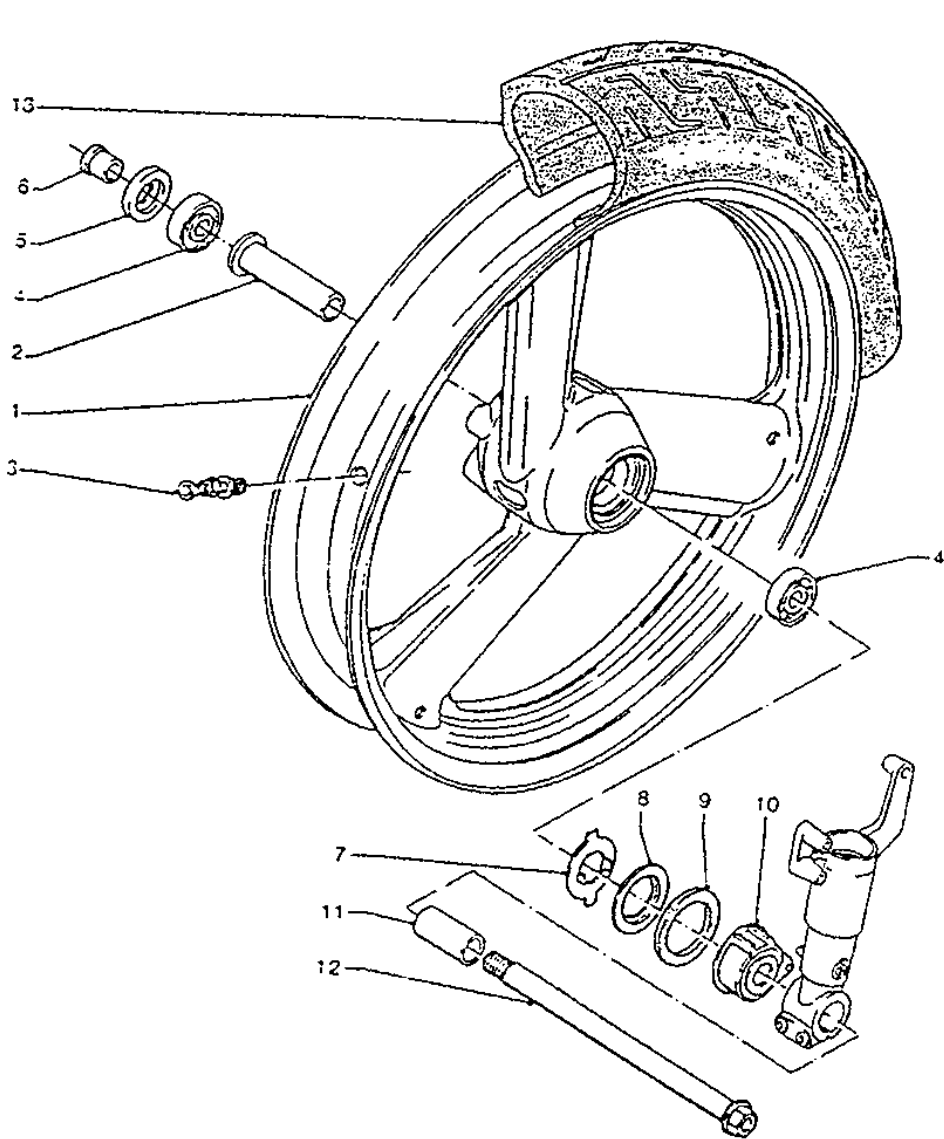 


Ref No	Part No	Description
01	3SH-F5830-10-00	Disk Brake Assy
02	90109-08720-00	Bolt
03	92900-M8SIC-00	Washer
04	4DL-F580U-00-00	Caliper Assy (right)
05	4DL-W0045-00-00	• . Brake Pad Kit, Front
06	4DL-F5924-00-00	• . Pin, Pad
07	3SH-F3387-60-00	• . Bleeding
08	2VW-F1502-20-00	• . Boot
09	95811-10030-00	Bolt, Flange
10	92900-M1SIC-00	Washer

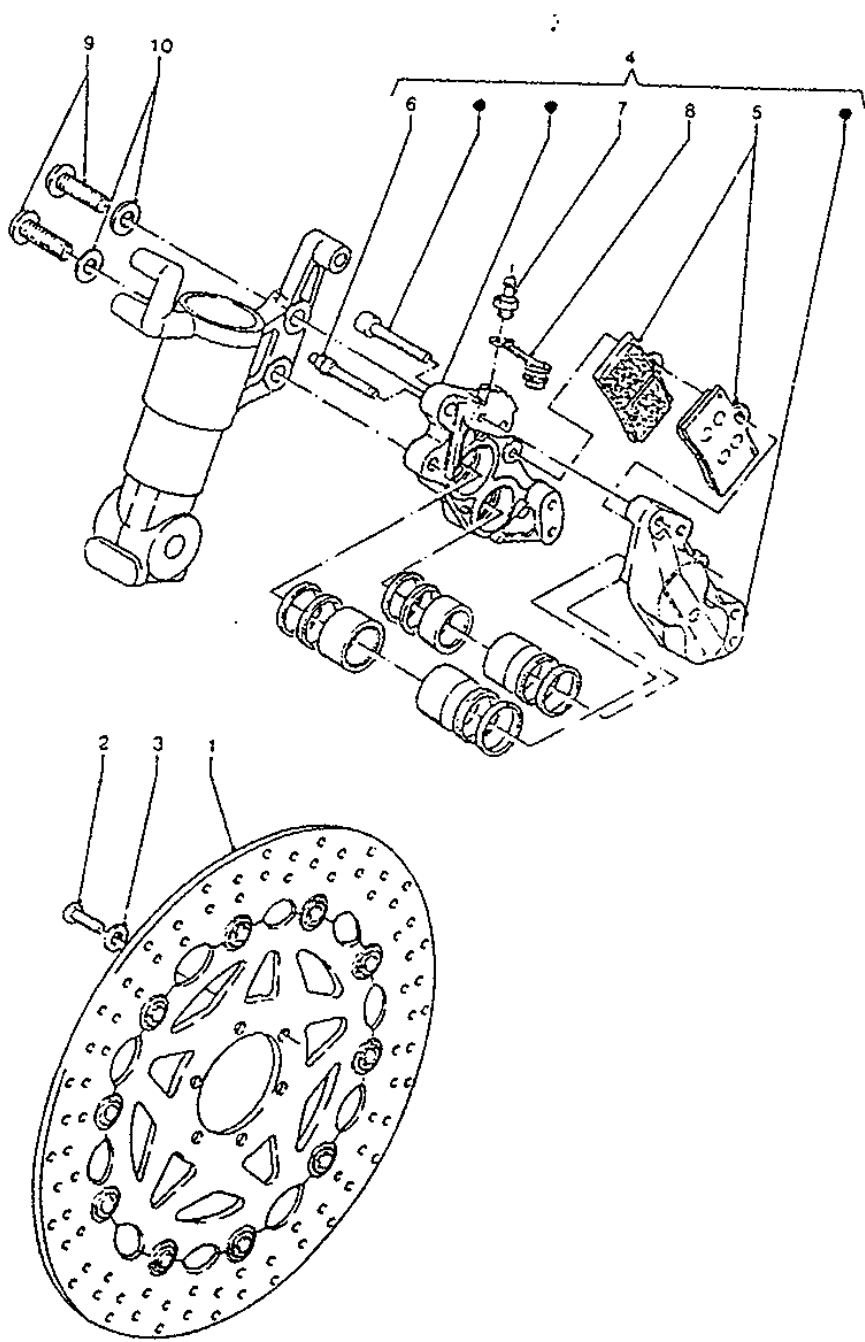 


Ref No	Part No	Description
01	3SH-F5338-00-33	Cast Wheel, Rear
01	3SH-F5338-00-UJ	Cast Wheel, Rear
02	90560-15277-00	Spacer
03	93306-20222-00	Bearing
04	93102-22216-00	Oil Seal
05	1KT-25364-00-00	Damper
06	4DL-F5308-00-00	Rear Tire Set
06	4DL-F5308-10-00	Rear Tire Set
07	93900-00001-00	Valve, Rim
08	1KT-25366-03-00	Clutch, Hub
08	4DL-F5366-03-00	Clutch, Hub
09	90116-08220-00	Bolt, Stud
10	90387-153N3-00	Collar
11	93306-20446-00	Bearing
12	93102-28022-00	Oil Seal
13	90387-15004-00	Collar
14	4DL-F5388-00-00	Puller, Chain 1
15	90387-15001-00	Collar
16	90201-15001-00	Washer, Plate
17	3SH-F5381-00-00	Axle, Wheel
18	95611-14100-00	Nut, U
19	4DL-F5447-00-98	Sprocket, Driven
20	1KT-25412-00-00	Washer
21	90170-08351-00	Nut
22	94510-01136-00	Chain
23	94681-33011-00	Joint, Chain
24	4DL-F538H-00-00	Reinforcement
25	93210-04800-00	O-ring
26	95306-08600-00	Nut
27	4DL-F5379-00-00	Bolt, Chain Pullar

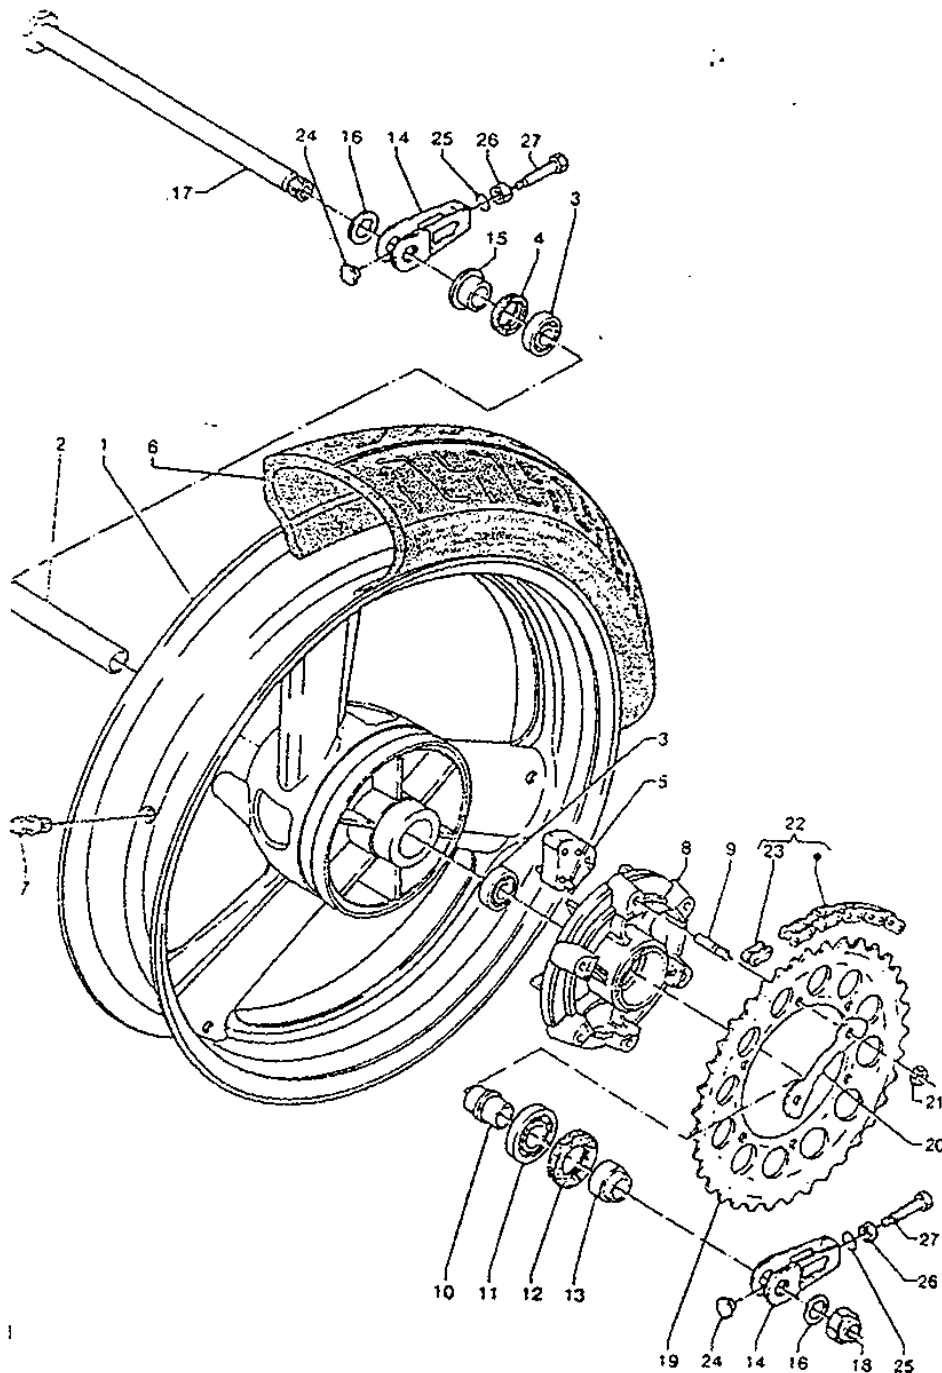 

Ref No	Part No	Description
01	1WG-25831-50-00	Disc, Brake
02	90109-08718-00	Bolt
03	4DL-F5819-00-00	Bracket, Caliper
04	4DL-F580W-00-00	Caliper Assy, Rear 2
05	3SH-F5811-20-00	. . Pad, Caliper 2
06	3SH-F5919-00-00	. . Support, Pad
07	2VW-F1502-20-00	. . Boot
08	3SH-F5824-00-00	. . Screw, Bleed
09	92900-M8S1C-00	Washer
10	91311-08020-00	Bolt

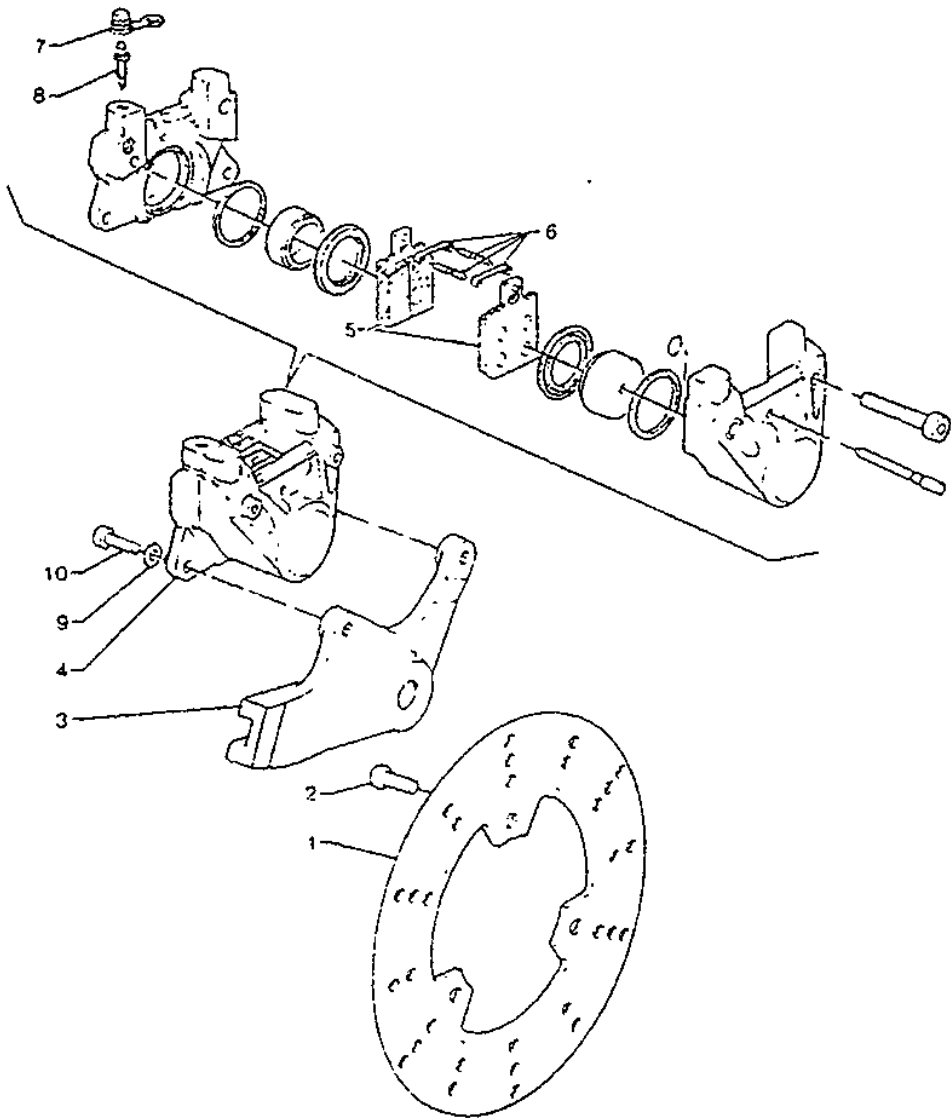 


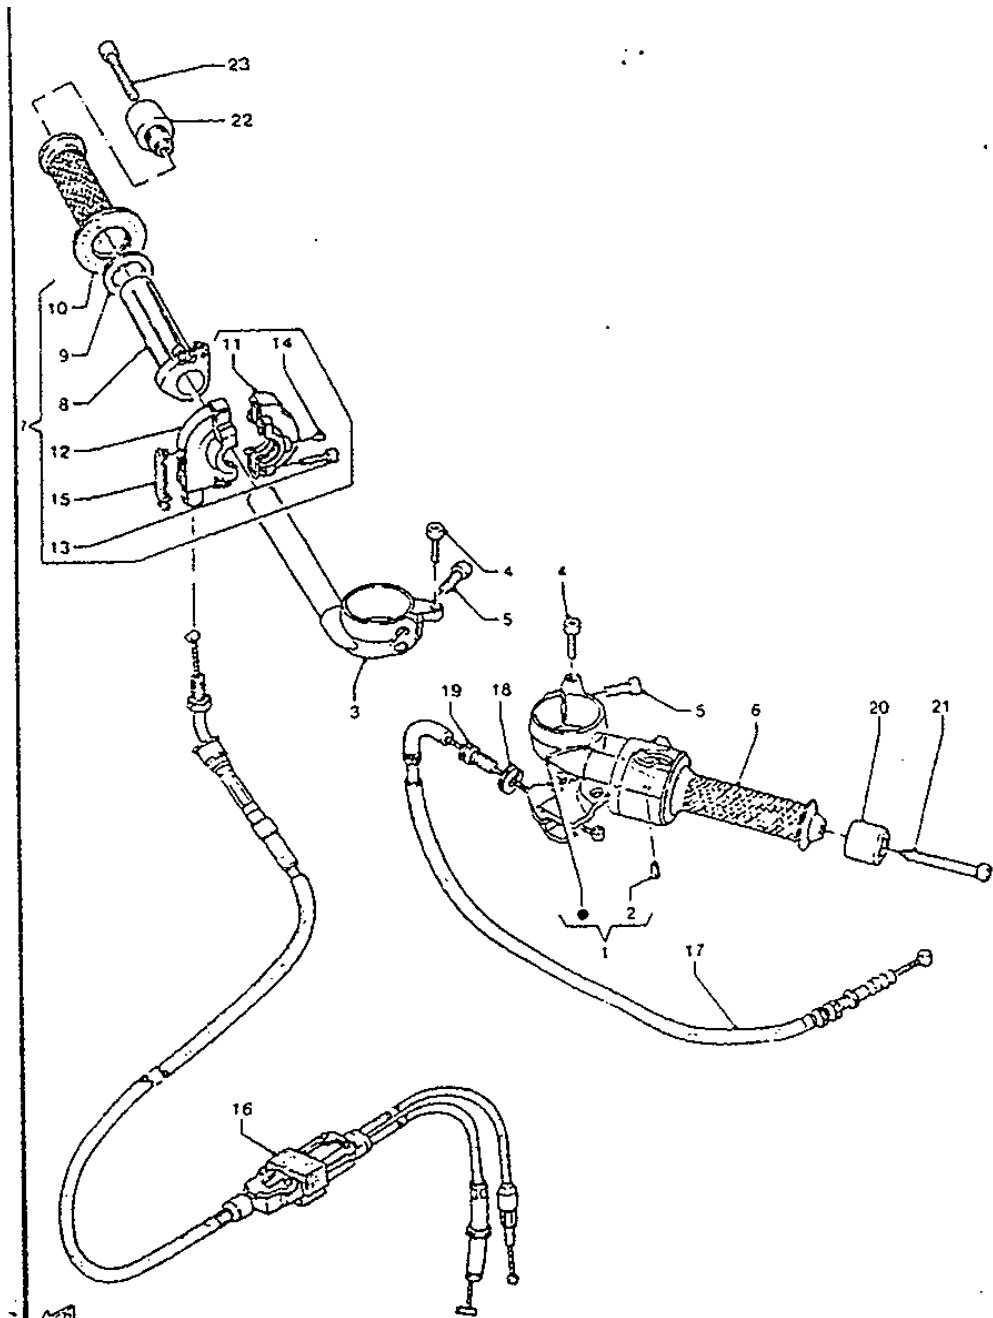 


Ref No	Part No	Description
01	4DL-F6121-10-00	Handlebar (left)
02	91600-50020-00	. Pin, Spring
03	4DL-F6122-10-00	Handlebar (right)
04	90110-06022-00	Bolt, Hexagon Socket Head
05	91311-06020-00	Bolt
06	4DL-F6241-00-00	Grip
07	4DL-F6240-00-00	Grip Assy
08	4DL-F6243-00-00	. Tube, Throttle Guide
09	4DL-F6249-00-00	. Ring, Leaf
10	4DL-F6242-00-00	. Grip (right)
11	4DL-F6282-00-00	. Cap, Grip Lower
12	4DL-F6281-00-00	. Cap, Grip Upper
13	90110-05018-00	. Bolt, Hexagon Socket Head
14	4DL-F629E-00-00	. Stopper
15	4DL-F628H-00-00	. Cap, Wire
16	4DL-F6302-00-00	Throttle Cable Assy
17	4DL-F6335-00-00	Cable, Clutch
18	90179-08148-00	Nut
19	90123-08046-00	Bolt
20	4DL-F6246-00-00	. End, Grip
21	91316-08060-00	. Bolt
22	4DL-F6246-00-00	. End, Grip
23	91316-08060-00	Bolt

300-2310


Ref No	Part No	Description
01	4DL-F583T-00-00	Master Cylinder Assy
01	4DL-F583T-10-00	Master Cylinder Assy
02	4DL-H3922-00-00	• . Lever 2
03	3SH-F8200-20-00	• . Bolt, Nut
04	3SH-F582A-00-00	• . Joint
05	4DL-F5867-00-00	• . Bracket, Master Cylinder
06	3SH-H3980-00-00	• . Front Stop Switch Assy
07	90201-10119-00	Washer, Plate
08	90401-10096-00	Bolt, Union
09	2VW-F5862-00-00	Boot, Master Cylinder
10	4DL-F5876-00-00	Holder, Brake Hose 2
11	92902-06600-00	Washer, Plate
12	97382-06014-00	Bolt
13	4DL-F5872-00-00	Hose, Brake 1
14	4DL-F5894-00-00	Tank, Reservoir
15	4DL-F5852-00-00	• . Cap, Reservoir
16	90480-14023-00	Grommet
17	4DL-F582F-00-00	Hose
18	91316-06020-00	Bolt
19	90387-06001-00	Collar
20	90480-14023-00	Grommet
21	4DL-F589G-00-00	Holder
22	91316-06012-00	Bolt
23	92906-06600-00	Washer, Plate

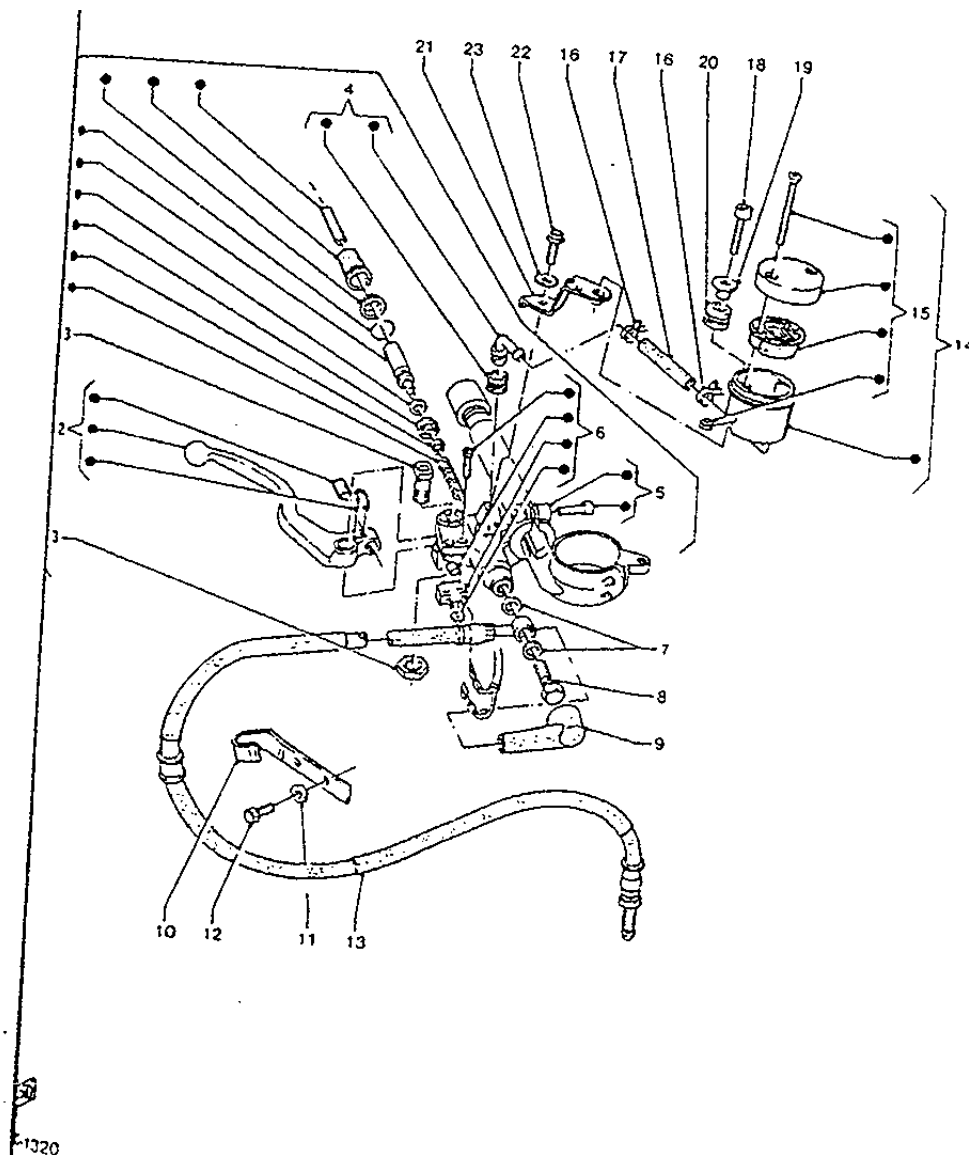 

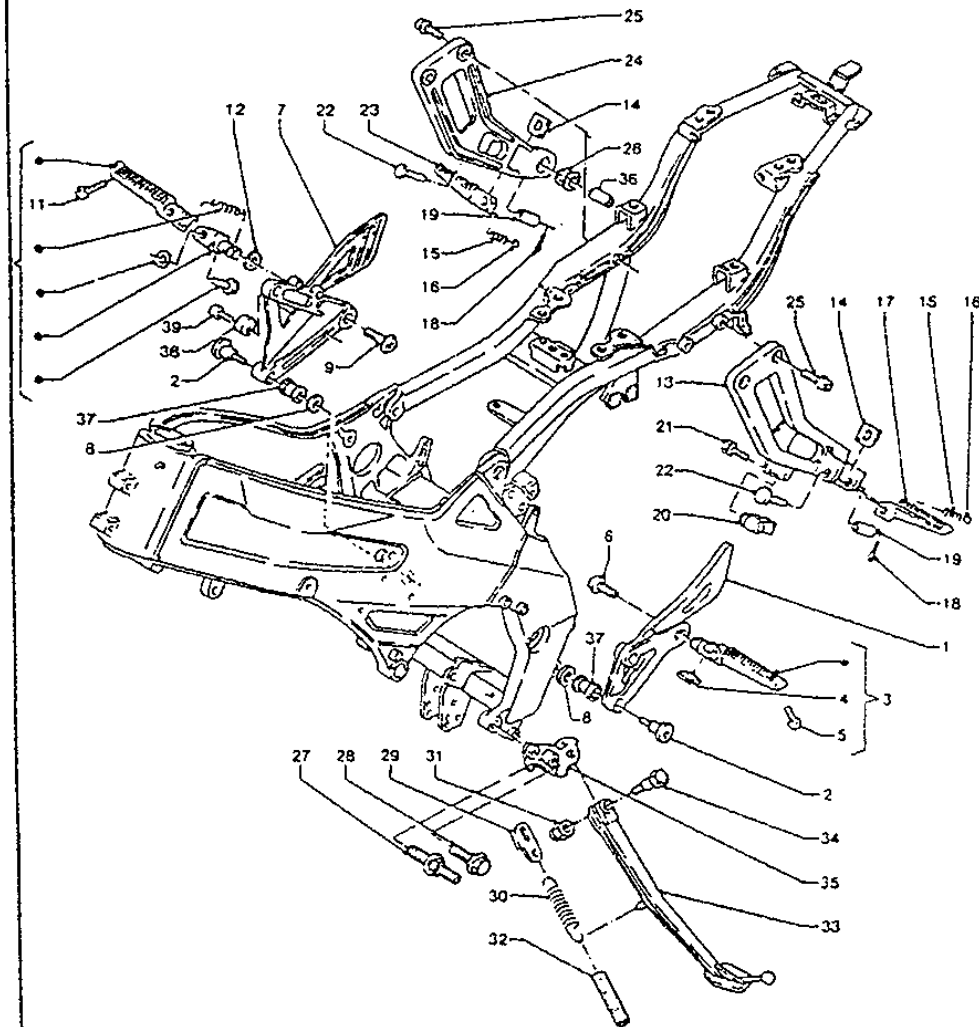 


Ref No	Part No	Description
01	4DL-F7442-01-00	Bracket 2
02	90109-08001-00	Bolt
03	3MA-27410-00-00	Front Footrest Assy (left)
04	90109-083A2-00	• Bolt
05	3MA-27491-00-00	• Protector
06	90109-103A9-00	Bolt
07	4DL-F7443-01-00	Bracket 3
08	90201-08001-00	Washer, Plate
09	90109-103A9-00	Bolt
10	3MA-27420-00-00	Front Footrest Assy (right)
11	90109-083A2-00	• Bolt
12	90206-17084-00	Washer, Wave
13	4DL-F7452-01-00	Bracket, Footrest 1
14	1HX-27437-00-00	Washer, Special
15	90501-12743-00	Spring, Compression
16	93501-04011-00	Ball
17	1HX-27431-00-00	Footrest, Rear 1
18	91401-20015-00	Pin, Cotter
19	90387-064H8-00	Collar
20	55E-21308-00-00	Helmet Hanger Assy
21	90151-06025-00	Screw, Countersunk
22	91701-06042-00	Pin, Clevis
23	1HX-27441-00-00	Footrest, Rear 2
24	4DL-F7462-01-00	Bracket, Footrest 2
25	90109-087F1-00	Bolt
26	90480-15001-00	Grommet
27	90109-102F8-00	Bolt
28	90105-10599-00	Bolt, Washer Based
29	4UB-27315-00-00	Link, Side Stand
30	90506-29266-00	Spring, Tension
31	90185-10037-00	Nut, Self-locking
32	90445-212G3-00	Hose
33	3MA-27311-00-00	Stand, Side
34	90109-100E8-00	Bolt
35	3MA-27321-00-00	Bracket, Side Stand
36	90387-10002-00	Collar
37	4DL-F7414-00-00	Damper, Footrest
38	4DL-F7238-00-00	Nut, Adjusting
39	91311-06012-00	Bolt




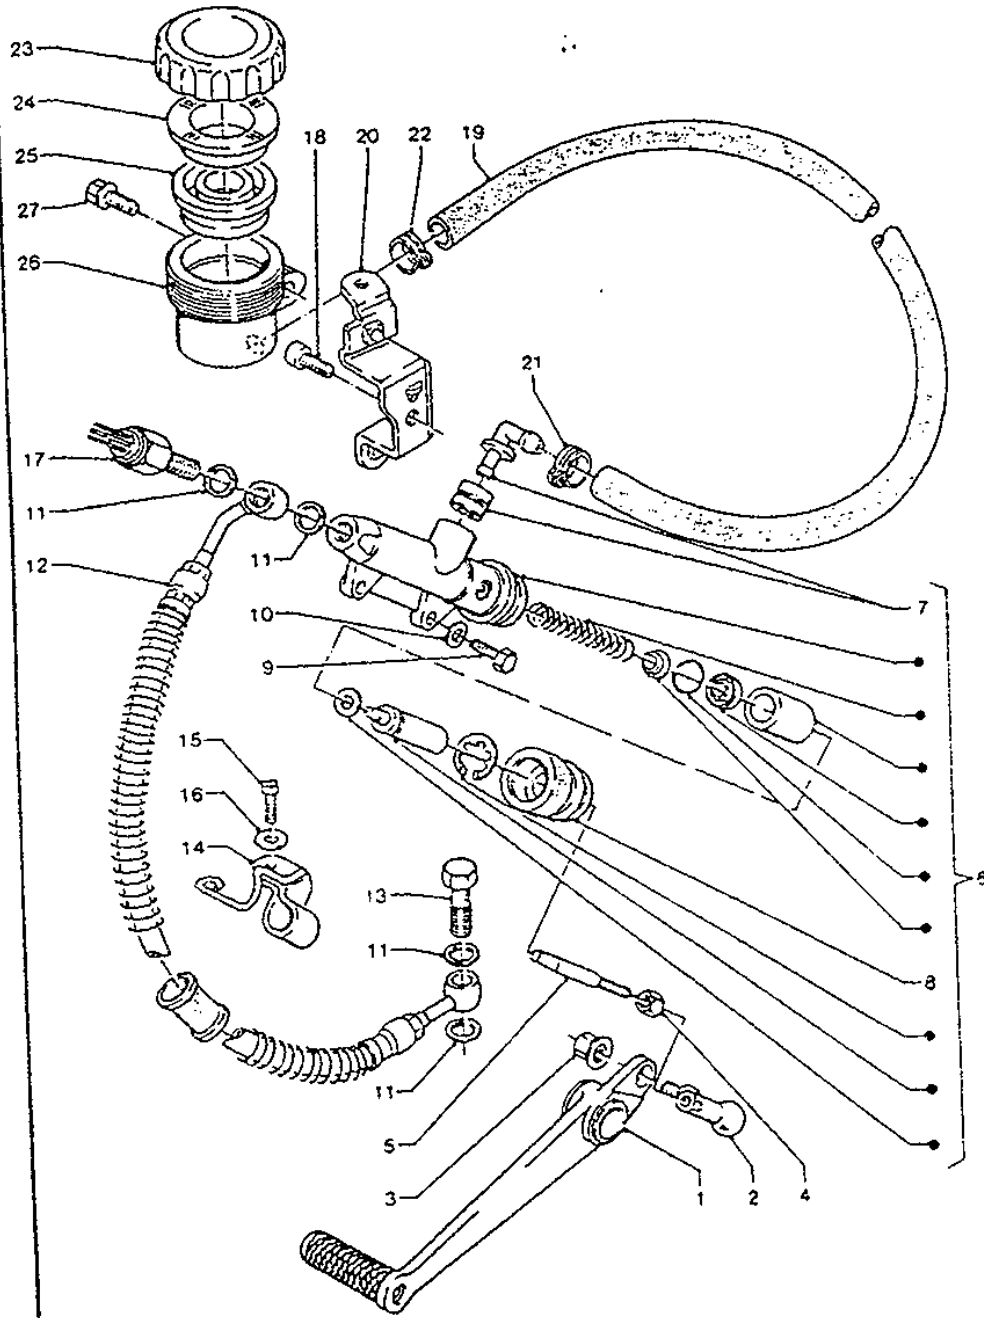 

Ref No	Part No	Description
01	4DL-F7200-00-00	Pedal, Brake
02	4DL-F7222-00-00	Joint
03	95701-06500-00	Nut, Flange
04	95301-06700-00	Nut
05	4DL-F7231-00-00	Rod, Brake
06	3SH-F580E-00-00	Rear Master Cylinder Assy
07	3SH-F582A-00-00	• . Joint
08	3SH-F583H-00-00	• . Boot
09	97382-06020-00	Bolt
10	92900-M6S1C-00	Washer
11	90201-10119-00	Washer, Plate
12	4DL-F581J-00-00	Hose, Brake 4
13	90401-10096-00	Bolt, Union
14	4DL-F5887-00-00	Holder, Brake Hose
15	97382-06020-00	Bolt
16	92902-06600-00	Washer, Plate
17	4DL-H2530-00-00	Stop Switch Assy
18	91316-06012-00	Bolt
19	4DL-F5895-00-00	Hose, Reservoir
20	3MA-2582E-00-00	Holder, Reserve Tank
21	90467-12001-00	Clip
22	90450-15014-00	Hose Clamp Assy
23	1A5-25852-00-00	Cap, Reservoir
24	2GU-25855-00-00	Bush,diaphragm
25	360-25854-00-00	Diaphragm, Reservoir
26	47X-25894-00-00	Tank, Reservoir
27	90119-06052-00	Bolt, With Washer

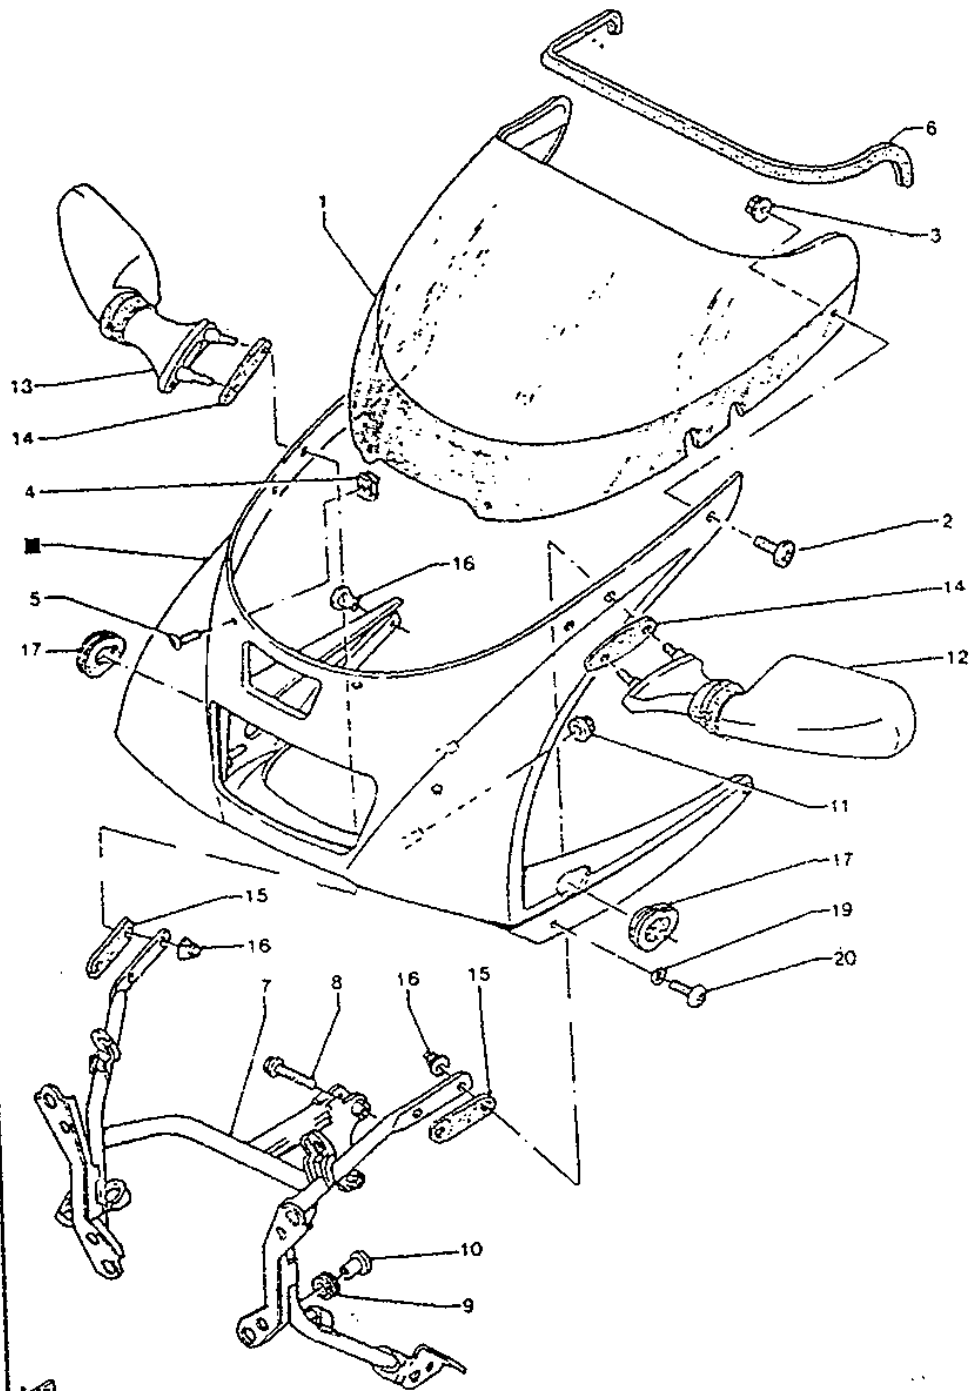 


Ref No	Part No	Description
01	4DL-F837U-00-00	Screen
02	90150-05020-00	Screw, Round Head
03	95706-05500-00	Nut, Flange
04	90183-05041-00	Nut, Spring
05	90150-05023-00	Screw, Round Head
06	4DL-F8346-00-00	Mole 2
07	4DL-F8356-00-00	Stay 1
08	91006-08035-00	Bolt, Flange
09	90480-10020-00	Grommet
10	90387-06518-00	Collar
11	95712-06300-00	Nut, Flange
12	4DL-F6280-00-00	Rear View Mirror Assy(left)
13	4DL-F6290-00-00	Rear View Mirror Assy (right)
13	4DL-F6290-10-00	Rear View Mirror Assy (right)
14	3TJ-28371-00-00	Damper
15	3CV-26298-00-00	Plate, Mirror Fitting 1
16	90176-06055-00	Nut, Crown
17	3MA-83321-01-00	Damper, Flasher 1
18	90179-05523-00	Nut
19	90202-05180-00	Washer, Plate
20	90149-05224-00	Screw

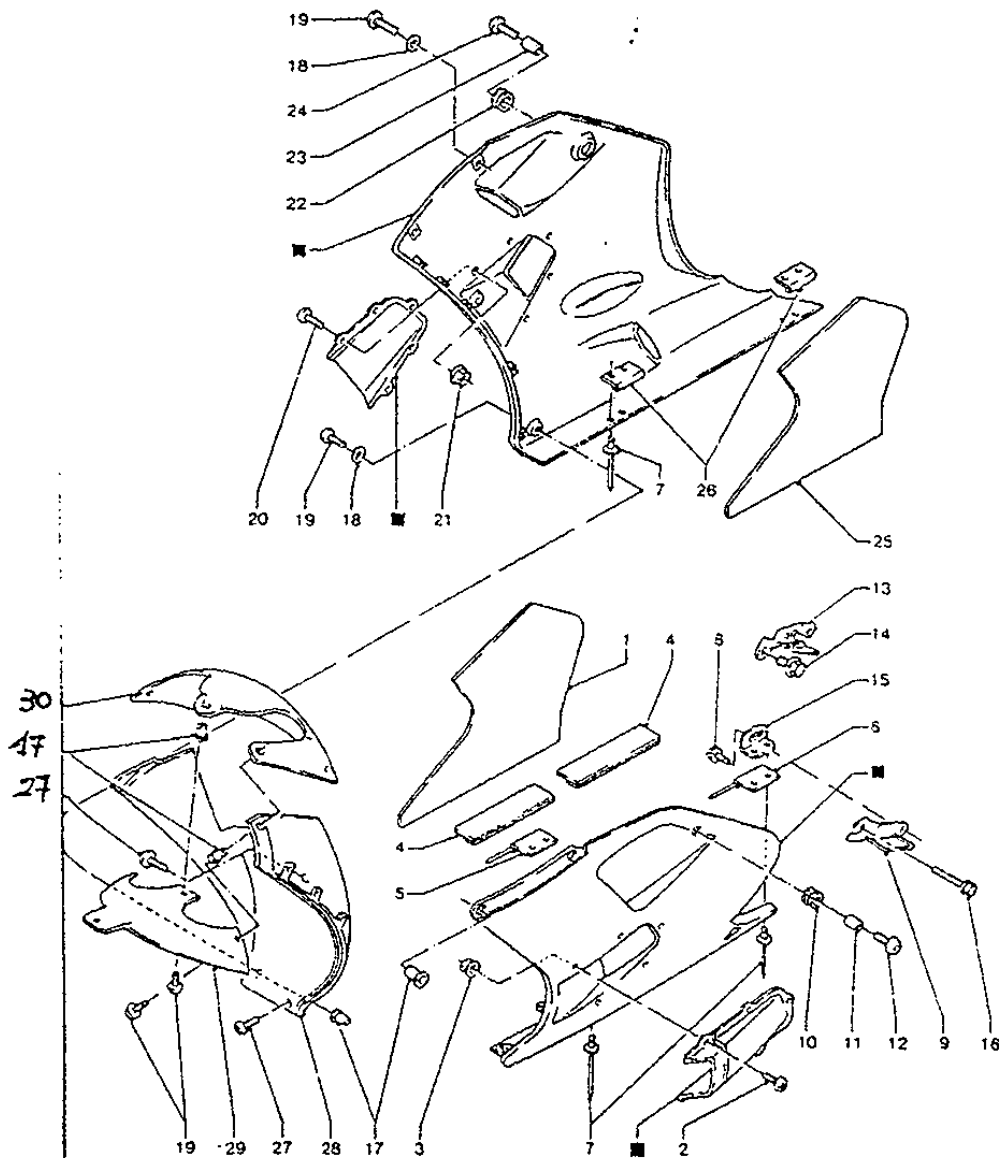 


Ref No	Part No	Description
01	4DL-F834E-00-00	Damper 1
02	90150-05020-00	Screw, Round Head
03	95706-05500-00	Nut, Flange
04	4DL-F8371-10-00	Damper
05	1KT-2194X-00-00	Bracket 1
06	1KT-2195X-00-00	Bracket 2
07	90267-08040-00	Rivet, Blind
08	91001-06016-00	Bolt, Flange
09	3MA-28358-01-00	Stay 3
10	90480-13398-00	Grommet
11	90387-067K6-00	Collar
12	90110-06078-00	Bolt, Hexagon Socket Head
13	3MA-28321-00-00	Stay 1
14	91026-06012-00	Bolt, Flange
15	1KT-2836G-00-00	Bracket 4
16	90119-06117-00	Bolt, With Washer
17	90179-05523-00	Nut
18	90202-05180-00	Washer, Plate
19	90149-05224-00	Screw
20	90150-05020-00	Screw, Round Head
21	95706-05500-00	Nut, Flange
22	90480-13398-00	Grommet
23	90387-067N5-00	Collar
24	90110-06078-00	Bolt, Hexagon Socket Head
25	4DL-F834F-00-00	Damper
26	8V0-2194X-00-00	Bracket 1
27	97706-50614-00	Screw, Tapping
28	4DL-F836K-51-00	Panel, Inner 1
28	4DL-F836K-61-00	Panel, Inner 1
29	4DL-F835U-51-00	Panel 1
29	4DL-F835U-61-00	Panel 1
30	4DL-F835U-51-00	Panel 1
30	4DL-F835V-61-00	Panel 2
30	4DL-F835V-61-00	Panel 2

0-2360

Ref No	Part No	Description
01	4DL-F4110-00-00	Fuel Tank Comp.
02	4DL-F4110-00-S4	Fuel Tank Comp.
03	4DL-W283K-00-GE	Pannel, Inner 1
04	4DL-F838R-00-GH	Duct 2
05	4DL-F1511-00-GH	Fender, Front
06	4DL-F838N-00-GH	Duct 1
07	4DL-W283J-00-GE	Body, Front Upper 2
08	4DL-W2172-00-53	Side Cover 2
09	4DL-F1731-00-LK	Cover, Side 3
10	4DL-F1651-00-GE	Cover, Rear Fender
11	4DL-W2172-01-S3	Side Cover 2
12	4DL-F1731-10-LK	Cover, Side 3
12	4DL-F1731-10-LK	Cover, Side 3

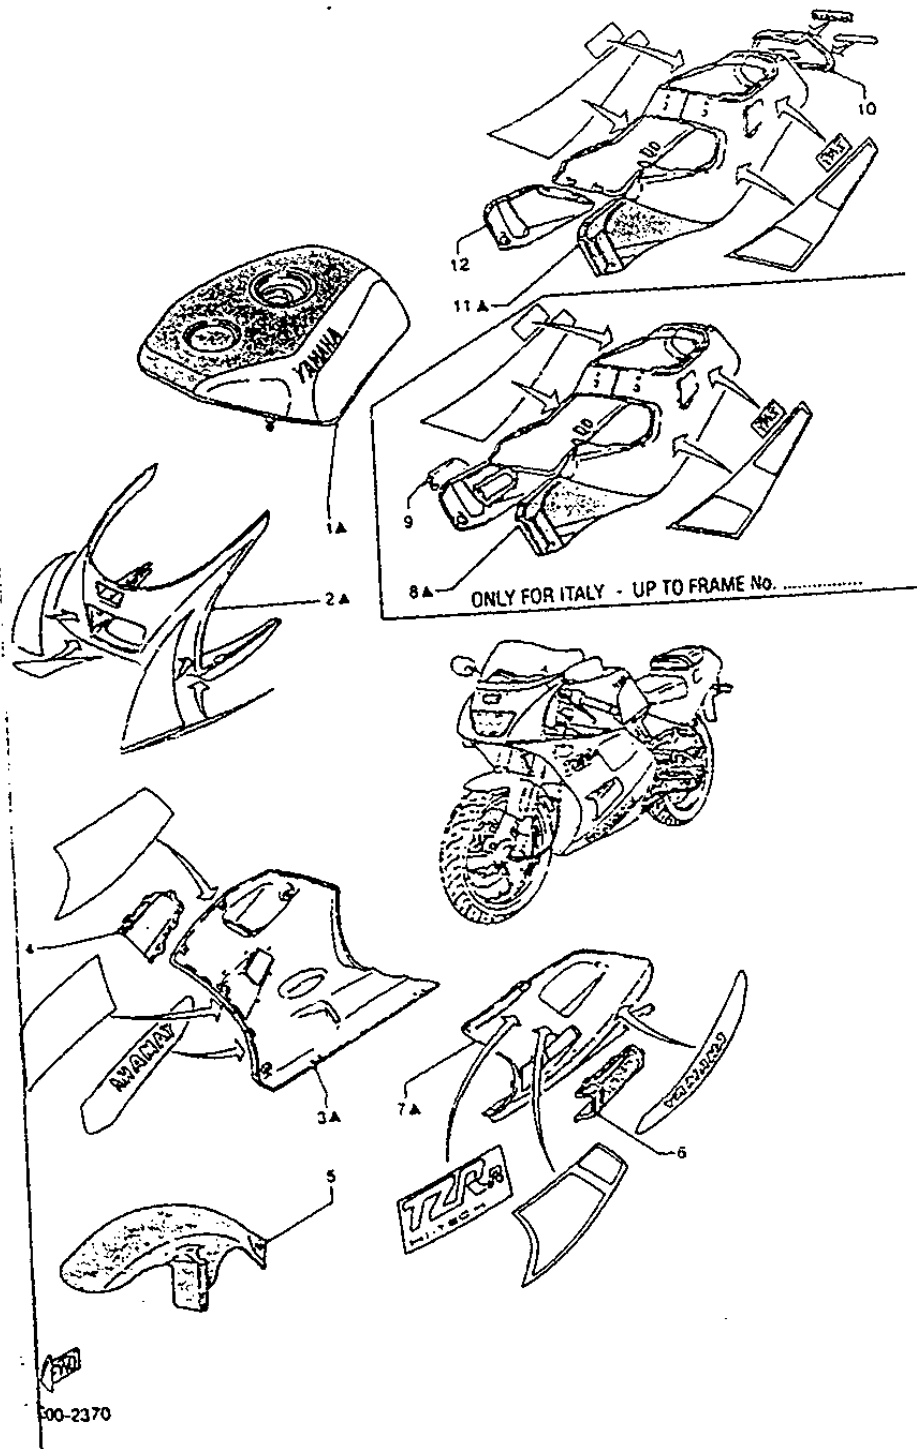 


000-2370

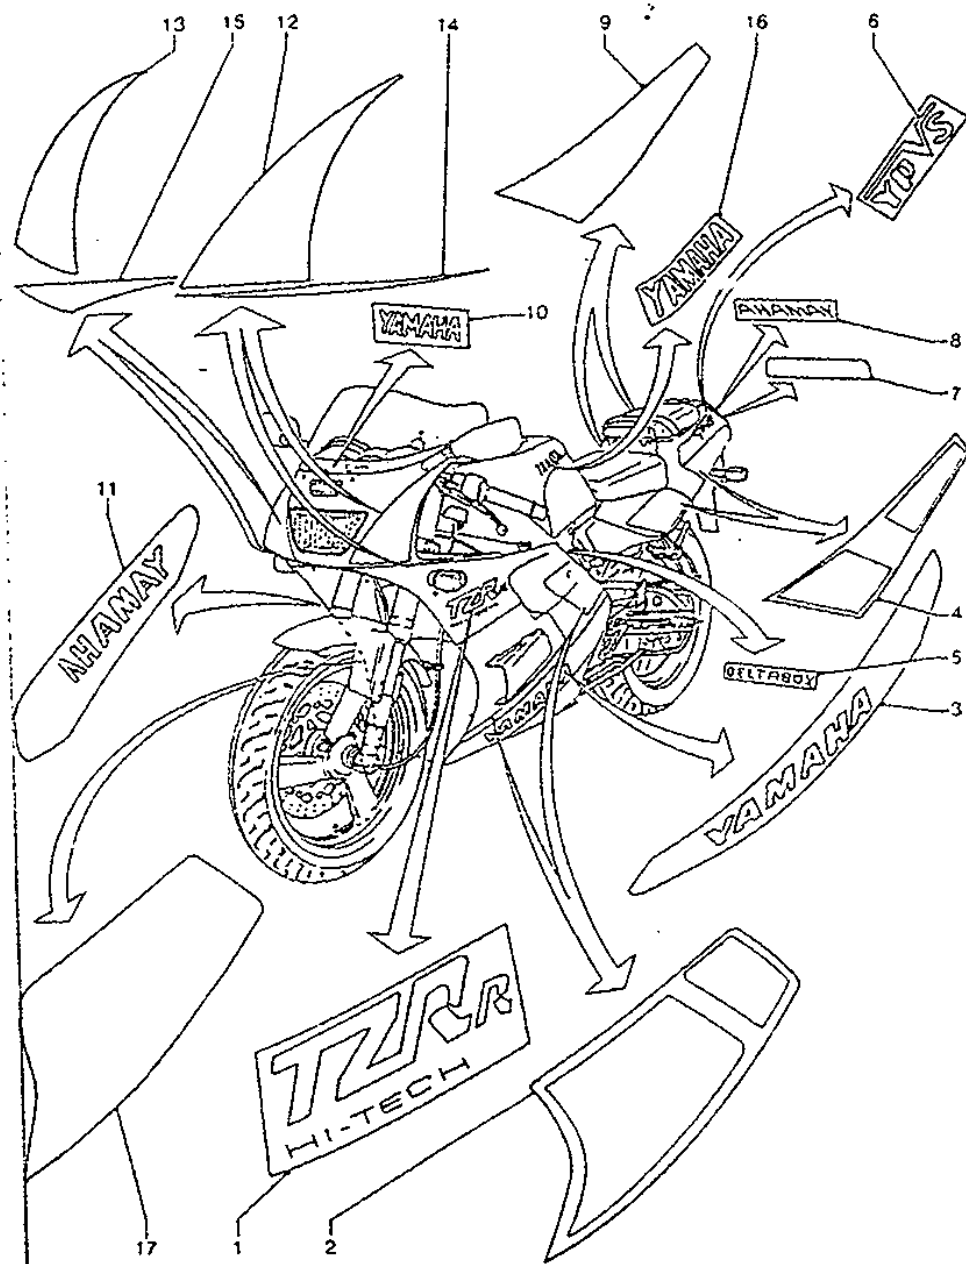 


Ref No	Part No	Description
01	4DL-F8328-00-00	Emblem
02	4DL-F8301-00-00	Graphic Set, Lower Cover 1
03	4DL-F839A-00-00	Graphic 7
04	4DL-F173L-00-00	Graphic Set 1
05	4DL-F118E-10-00	Emblem 1
06	4DL-F1781-00-00	Emblem 1
07	4DL-F1663-00-00	Graphic, Tailcover
08	2UT-F163H-00-00	Emblem 2
09	4DL-F174L-00-00	Graphic Set 2
10	2UT-F163H-10-00	Emblem 2
11	4DL-F839E-00-00	Graphic 8
12	4DL-F832K-00-00	Graphic 12
13	4DL-F832L-00-00	Graphic 13
14	4DL-F8328-00-00	Emblem
16	99234-00040-00	Emblem, Yamaha
17	4DL-F8303-00-00	Graphic Set, Lower Cover 2

Ref No	Part No	Description
01	3MB-85550-00-00	Rotor Assy
02	3MB-85560-00-00	Base Assy
03	38N-85520-00-00	. . Coil, Charge
04	38N-81313-00-00	. . Coil, Lighting 1
05	3MB-81314-00-00	. . Coil, Lighting 2
06	34X-85595-M0-00	. . Coil, Pulser
07	98511-04030-00	. . Screw, Pan Head
08	98511-04030-00	. . Screw, Pan Head
09	97601-04108-00	. . Screw, Pan Head With Washer
10	97601-04106-00	. . Screw, Pan Head With Washer
11	90179-12248-00	Nut
12	90201-123L6-00	Washer, Plate
13	95026-06020-00	Bolt, Flange

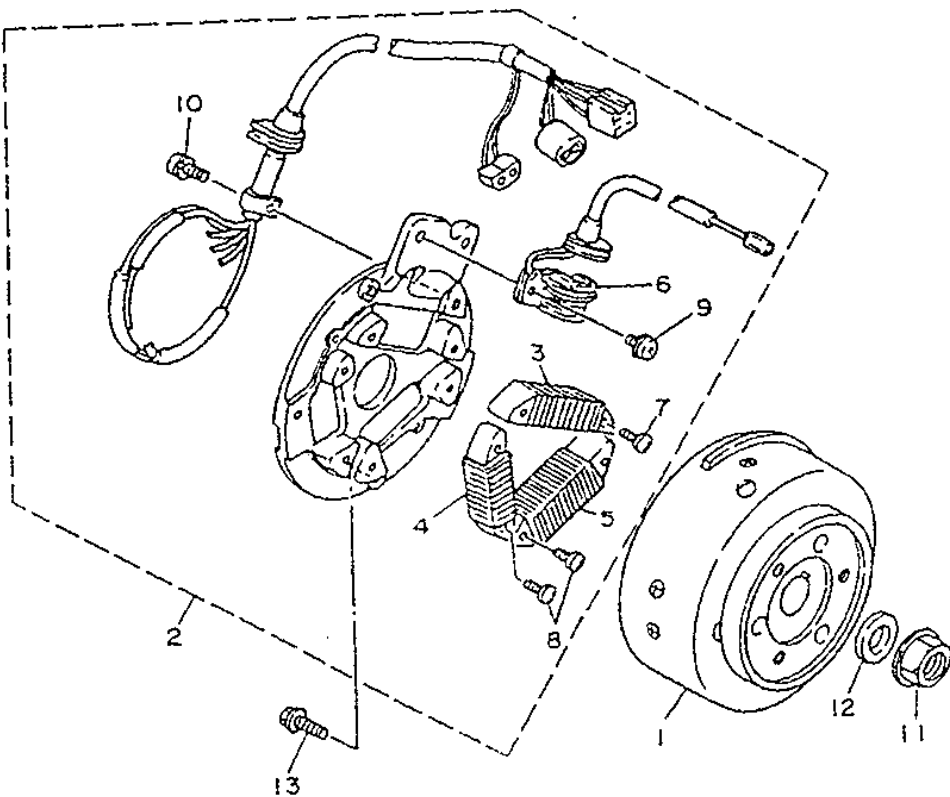 


00-1390

Ref No	Part No	Description
01	4DL-81800-00-00	Starting Motor Assy
02	50W-81801-M0-00	• Brush Set
03	93210-44678-00	• O-ring
04	4DL-8183G-00-00	• Cord Comp.
05	50W-81828-M0-00	• Bolt 2
06	90202-26166-00	Washer, Plate
07	98501-06025-00	Screw, Pan Head

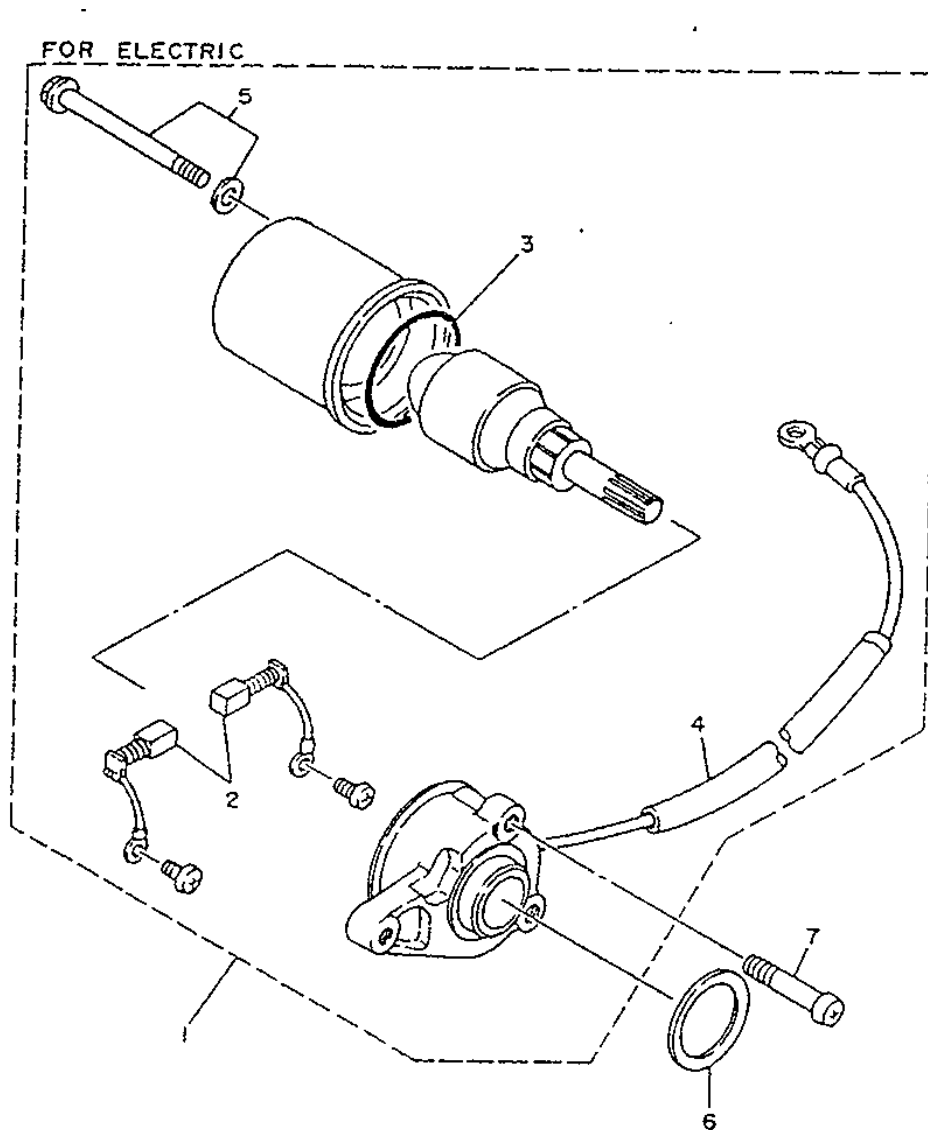 

00-1400

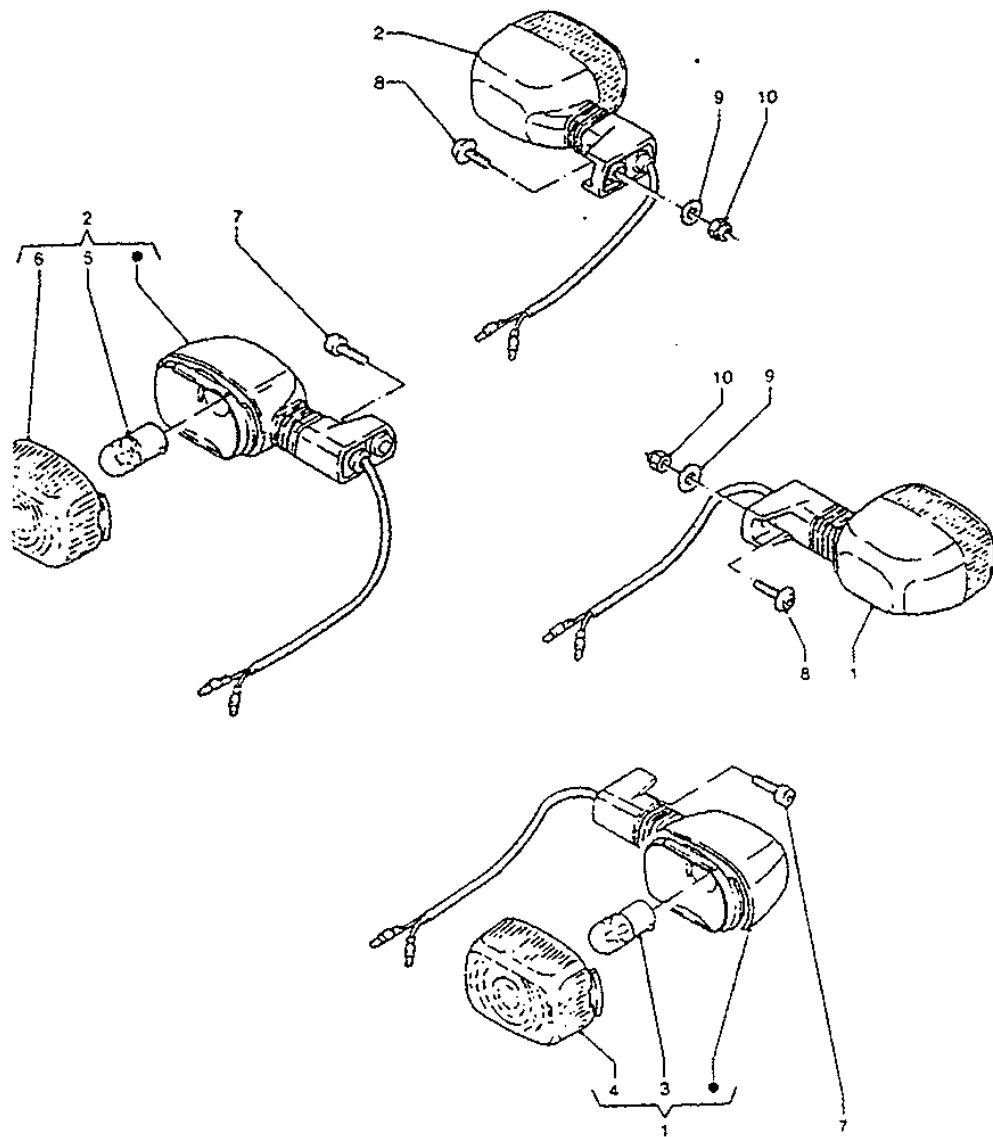 


Ref No	Part No	Description
01	4DL-H3310-00-00	Front Flasher Light Assy 1
02	4DL-H3320-00-00	Front Flasher Light Assy 2
03	4DL-H3311-00-00	• Bulb, Flasher
04	4DL-H3311-00-00	• Bulb, Flasher
05	4DL-H3311-00-00	• Bulb, Flasher
06	4DL-H3332-00-00	• Lens, Flasher
07	91316-06014-00	Bolt
08	92016-06020-00	Bolt, Button Head
09	92902-06200-00	Washer
10	95702-06100-00	Nut, Flange




2-1410




Ref No	Part No	Description
01	4DL-83570-00-00	Speedometer Assy
02	4DL-83540-00-00	Tachometer Assy
03	3MA-83590-00-00	Water Temperature Assy
04	3GM-83559-00-00	Cover, Meter
05	3LG-8353H-00-00	Case, Under
06	2GH-83578-00-00	Knob, Trip Meter
07	4DL-83509-00-00	Socket Cord Assy
08	4G1-84744-00-00	Bulb (12v-5w)
09	3GM-83517-00-00	Bulb
10	2GV-83517-00-00	Bulb
11	98580-04010-00	Screw, Pan Head
12	92902-04100-00	Washer, Spring
13	92902-04600-00	Washer, Plate
14	90167-04057-00	Screw, Tapping
15	98580-03010-00	Screw, Pan Head
16	92990-03100-00	Washer, Spring
17	90159-03102-00	Screw, With Washer
18	90164-04008-00	Screw, Tapping
19	90167-03058-00	Screw, Tapping
20	3GM-83520-00-00	Socket Cord Assy
21	3GM-83520-00-00	Socket Cord Assy
22	3GM-83525-00-00	Clip
23	90480-14229-00	Grommet
24	95306-06600-00	Nut
25	90201-06380-00	Washer, Plate
26	90387-07001-00	Collar
27	4DL-H3550-00-00	Speedometer Cable Assy

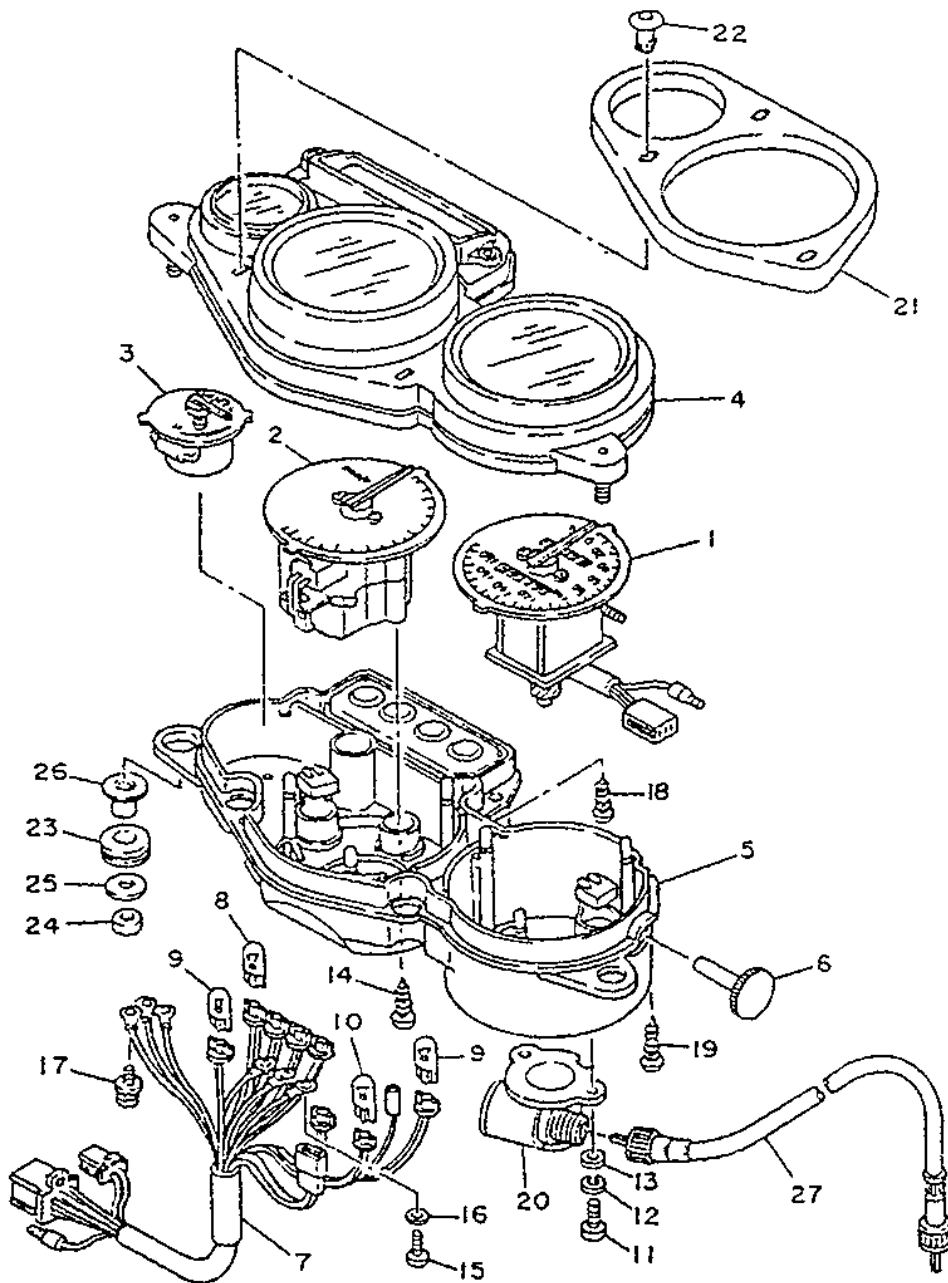 

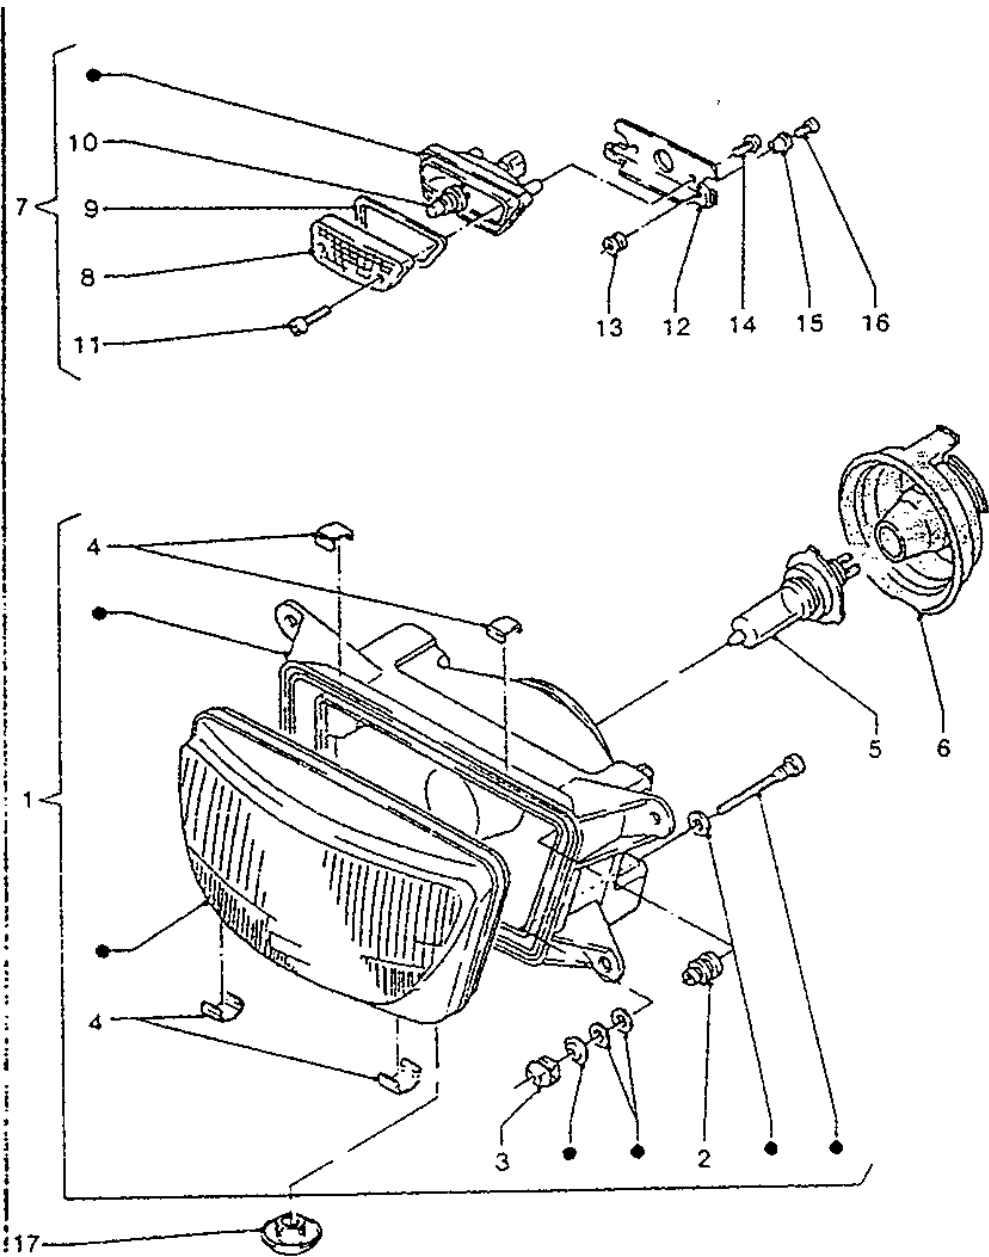 

Ref No	Part No	Description
01	3HE-84320-40-00	Lens Assy
02	51L-8431U-00-00	. . Holder
03	51L-84334-00-00	. . Nut, Adjusting
04	3MA-8413H-00-00	. . Plate, Spring
05	2L2-84314-20-00	Bulb, Headlight
06	36Y-84397-00-00	Cover, Socket
07	3GM-84301-00-00	Pilot Light Assy 1
08	3GM-84321-00-00	. . Lens Assy
09	3GM-84322-00-00	. . Gasket, Lens
10	2JE-84744-00-00	. . Bulb (12v-5w)
11	3GM-84192-00-00	. . Screw, Special
12	3GM-8431R-00-00	Stay, Setting
13	90480-10517-00	Grommet
14	90167-05041-00	Screw, Tapping
15	90387-04001-00	Collar
16	97786-04020-00	Screw, Tapping
17	4DL-H4397-00-00	Cover, Socket

 00-1430

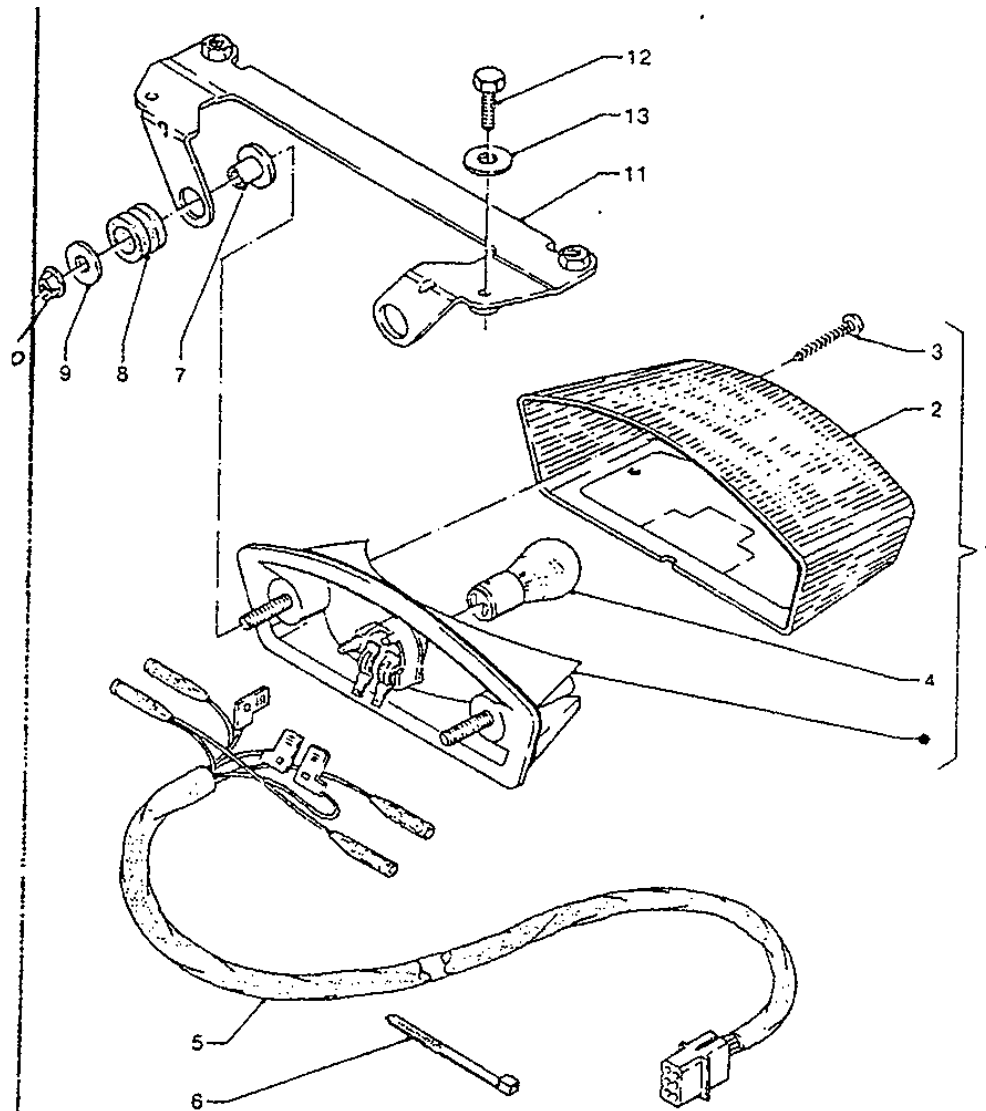


Ref No	Part No	Description
01	4DL-H4710-00-00	Taillight Unit Assy
02	4DL-H4721-00-00	• Lens, Taillight
03	97701-40132-00	• Screw, Tapping
05	4DL-H4517-00-00	Cord, Taillight
06	2AJ-F3192-50-00	Band
07	90387-06518-00	Collar
08	90480-10020-00	Grommet
09	92902-06200-00	Washer
10	95702-06100-00	Nut, Flange
11	4DL-H4702-00-00	Bracket, Taillight
12	97382-06014-00	Bolt
13	92902-06200-00	Washer

END
 00-1440



Ref No	Part No	Description
01	4DL-H3972-00-00	Switch, Handle 4
02	91316-06016-00	• Bolt
03	4DL-H3975-00-00	Switch, Handle 2
04	91316-03016-00	• Bolt
05	29L-82911-01-00	Holder, Lever 1
06	3HE-83912-01-00	Lever 1
07	31A-83913-00-00	Collar, Lever 1
08	31A-82917-00-00	Switch
09	31A-83945-00-00	Bolt, Lever
10	98702-03008-00	Screw, Flat Head
11	95616-06100-00	Nut, U
12	97001-06025-00	Bolt
13	92906-06100-00	Washer, Spring

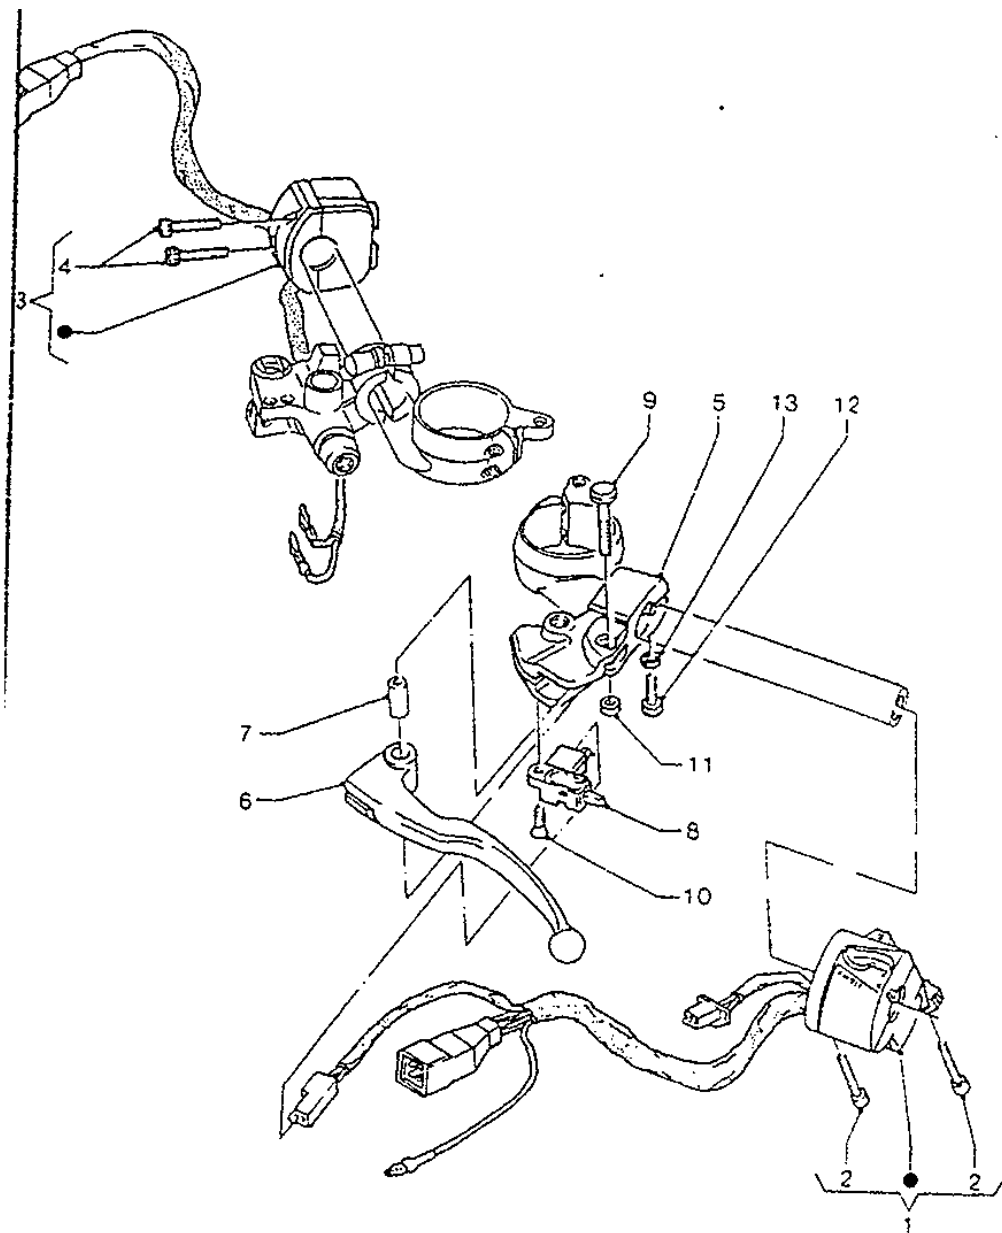 


1-1450




Ref No Part No Description

Ref No	Part No	Description
01	1M1-82370-21-00	Plug Cap Assy
02	90468-15020-00	Clip
03	90179-06524-00	Nut
04	4DL-H2312-00-00	Holder, Coil Fitting
05	92902-06600-00	Washer, Plate
06	97001-06050-00	Bolt
07	2JN-82310-M0-00	Ignition Coil Assy
08	97001-06020-00	Bolt
09	97001-06025-00	Bolt
10	90149-06228-00	Screw
11	3LY-82501-00-00	Main Switch Steering Lock
12	4DL-H2590-00-00	Wire Harness Assy
13	2AJ-F3192-50-00	Band
14	437-83936-01-00	Band, Switch Cord
15	3MA-85720-10-00	Oil Level Gauge Assy
16	35H-H2541-00-00	Wire, Lead
17	18U-82131-00-00	Band, Battery
18	116-82150-01-00	Fuse Holder Assy
19	116-82151-00-00	• . Fuse
20	4DL-H2116-00-00	Wire, Minus Lead
21	3MB-82115-00-00	Wire, Plus Lead
22	3SH-H2110-00-00	Battery Assy
23	90445-087E1-00	Hose
24	3NC-H2540-00-00	Neutral Switch Assy
25	341-82543-00-00	• . Gasket
26	437-10403-BL-00	Clamp

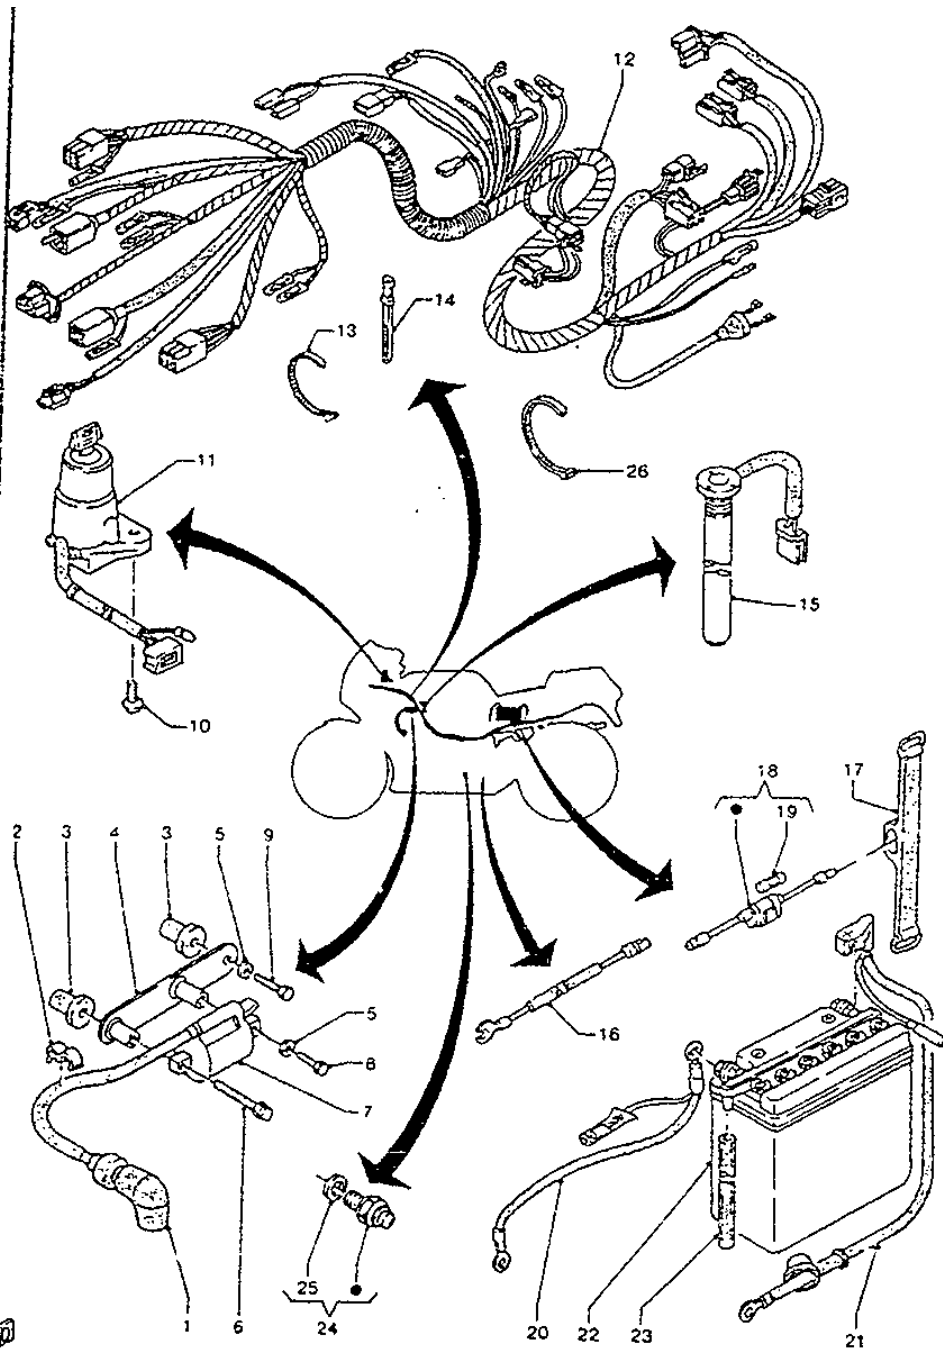 

00-1460

 [

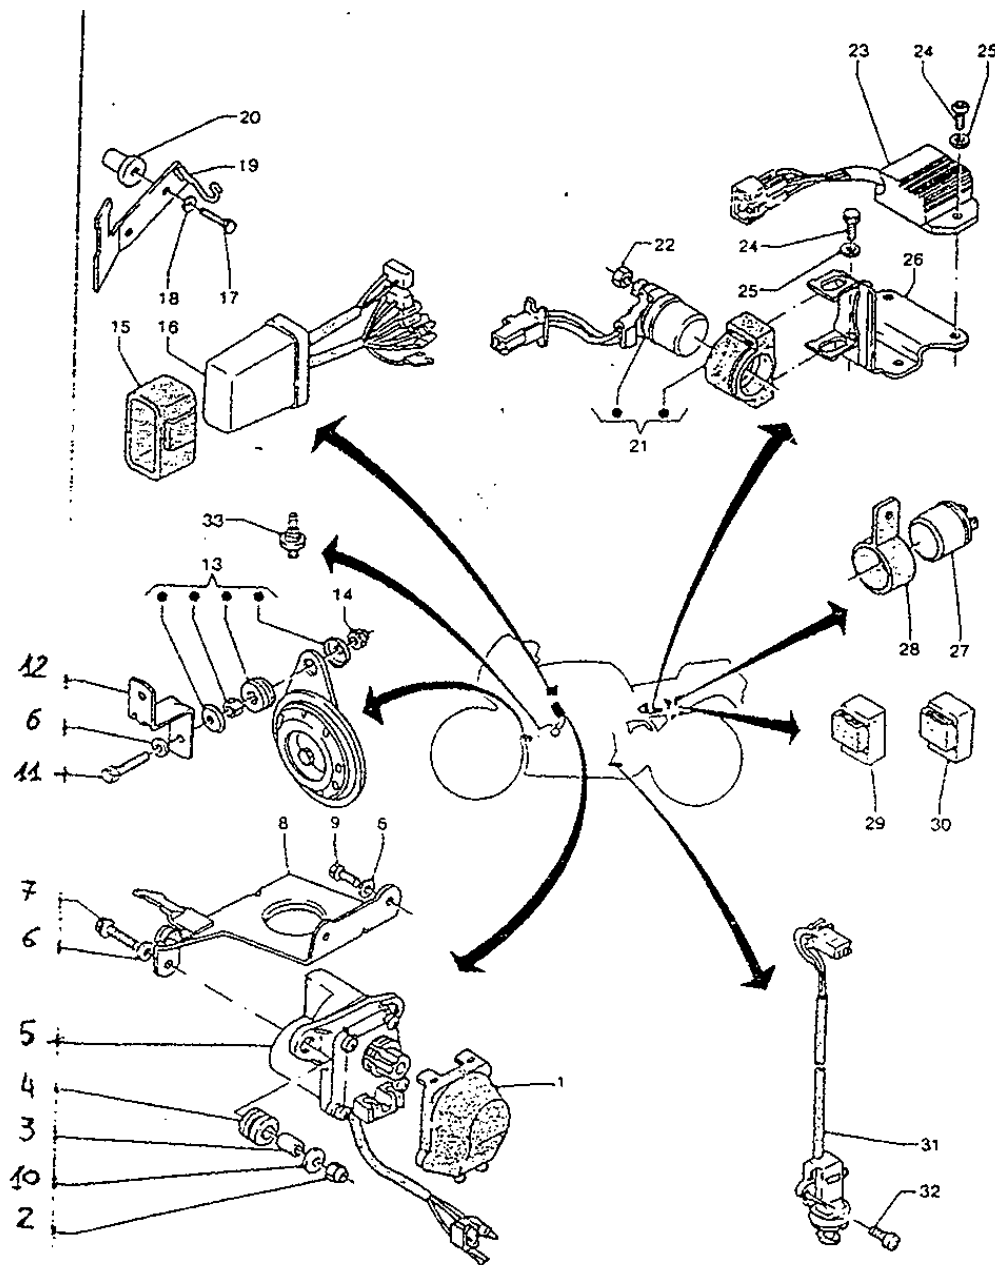


Ref No	Part No	Description
01	34X-85825-00-00	Cover, Wire
02	95712-06300-00	Nut, Flange
03	90387-06299-00	Collar
04	90480-14023-00	Grommet
05	3MB-85820-00-00	Servo Motor Assy
06	92902-06600-00	Washer, Plate
07	90101-06030-00	Bolt
08	4DL-H5824-00-00	Bracket, Cable
09	97001-06020-00	Bolt
10	92902-06200-00	Washer
11	90101-06022-00	Bolt
12	4DL-H3378-00-00	Stay, Horn
13	3SH-H3371-00-00	Horn
14	95702-06100-00	Nut, Flange
15	3MB-85546-00-00	Band
16	4DL-85540-00-00	C.d.i. Unit Assy
17	97001-06025-00	Bolt
18	92902-06600-00	Washer, Plate
19	4DL-H5542-10-00	Bracket
20	90179-06524-00	Nut
21	3AY-81940-00-00	Starter Relay Assy
22	95702-06500-00	Nut, Flange
23	38N-81960-01-00	Rectifier & Regulator Assy
24	97382-06014-00	Bolt
25	92902-06600-00	Washer, Plate
26	4DL-H1948-10-00	Bracket
27	4DL-H3351-00-00	Relay, Flasher
28	4DL-H3350-00-00	Flasher Relay Assy
29	29U-81950-92-00	Relay Assy
30	1RL-81950-91-00	Relay Assy
31	3MD-82566-00-00	Switch, Side Stand
32	90157-05079-00	Screw, Pan Head
33	11H-83591-00-00	Thermo Unit

00-1470

E



Ref No	Part No	Description
04	4GM-E415A-00-00	. Jet, Main
42	4GM-E4101-00-00	Carburetor Assy 1

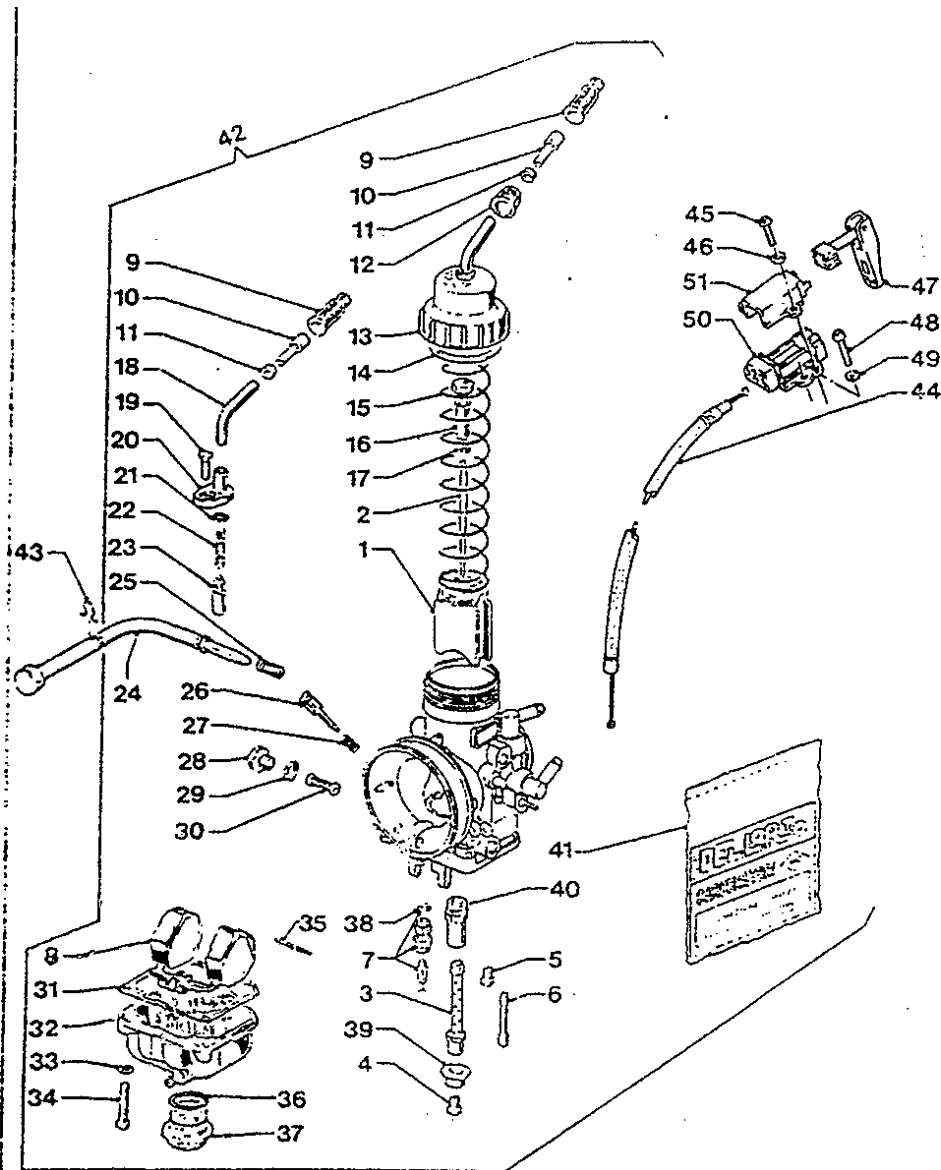 

300-2480

00090000 .007



Ref No	Part No	Description
01	4GM-E4610-00-00	Exhaust Pipe Assy 1

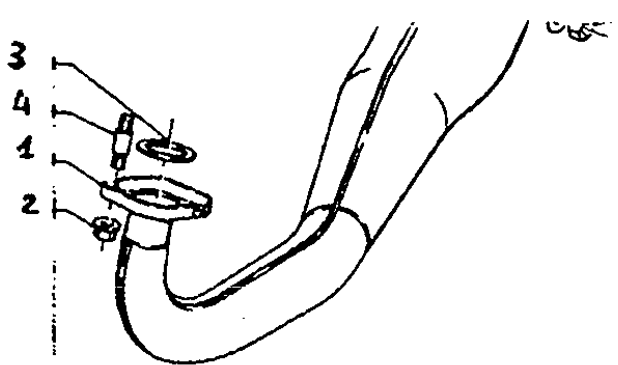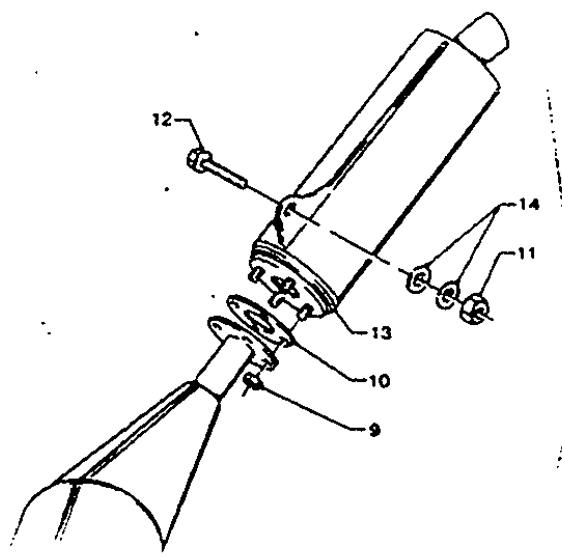  

bc-2490

F



Ref No	Part No	Description
01	4GM-F1110-10-33	Frame Comp.
01	4GM-F1110-10-AL	Frame Comp.
21	4GM-F1182-00-00	Manufacturer Plate
22	90267-32018-00	Rivet, Blind

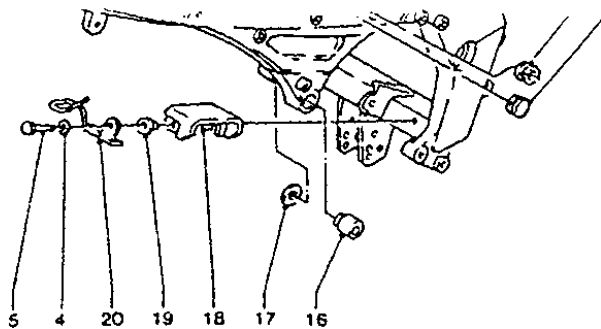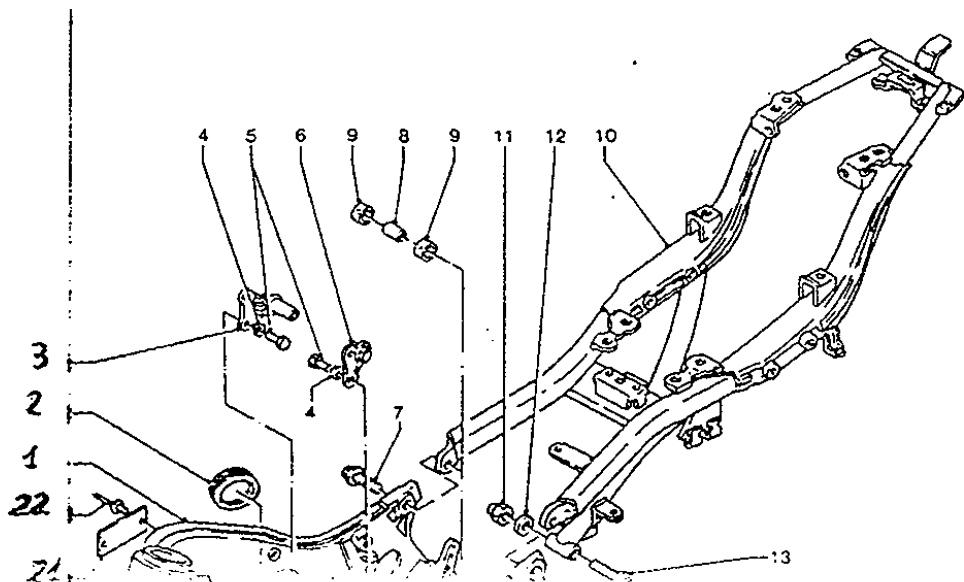  

300-2500


[

Ref No	Part No	Description
01	4DL-F3102-02-00	Front Fork Assy (l.h)
02	4DL-F3120-02-00	. Inner Tube Comp.2
15	4DL-F319K-01-00	. Plunger Kit
16	4DL-F3103-01-00	Front Fork Assy (r.h)
17	4DL-F3110-01-00	. Inner Tube Comp.1

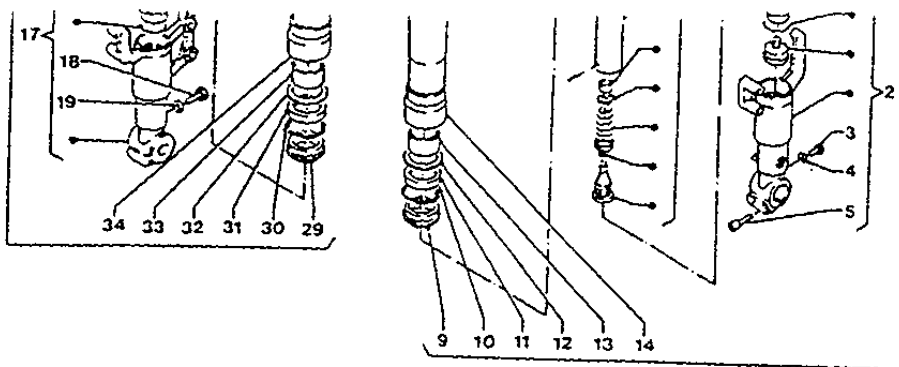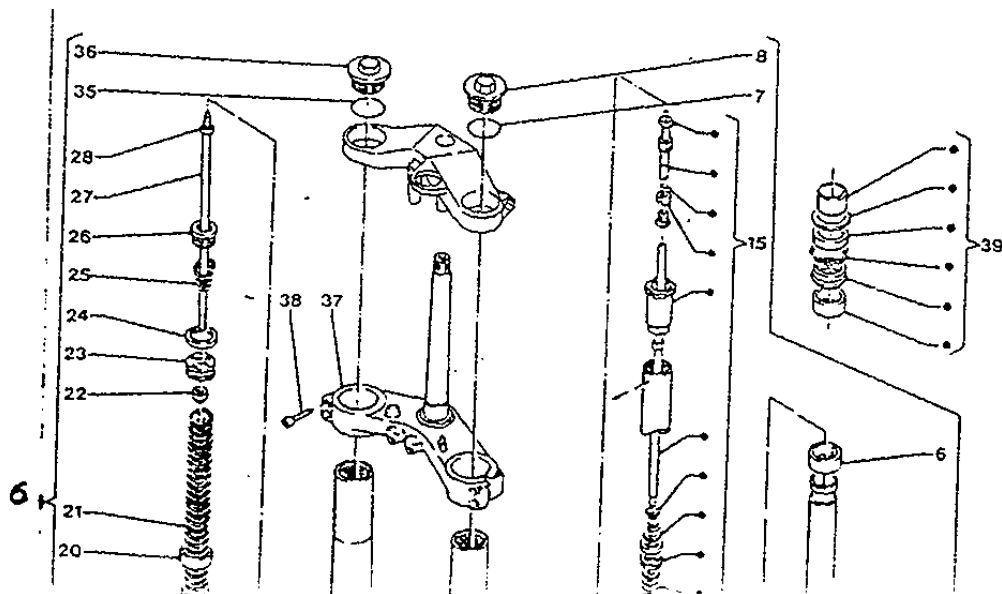  


90-2510

 F


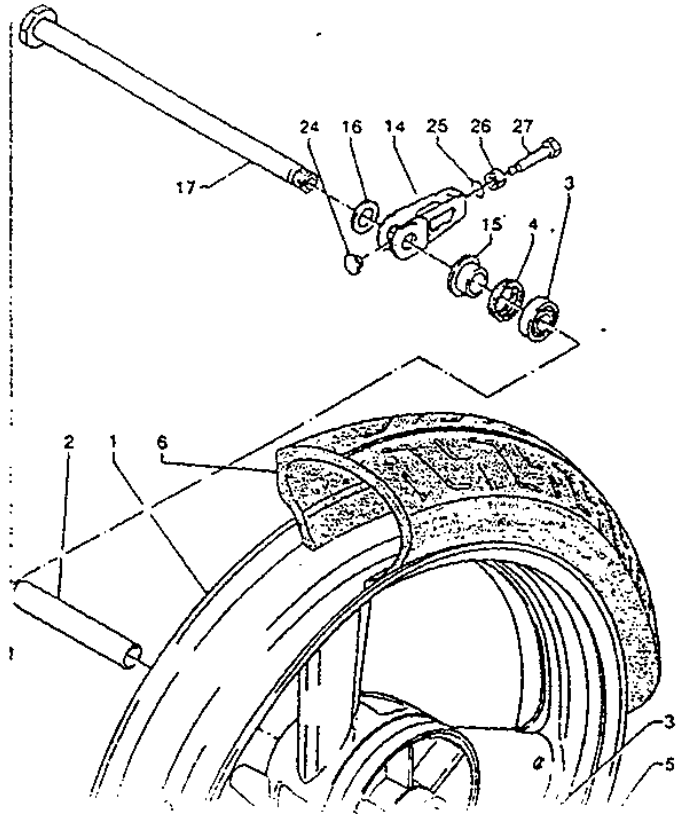



22

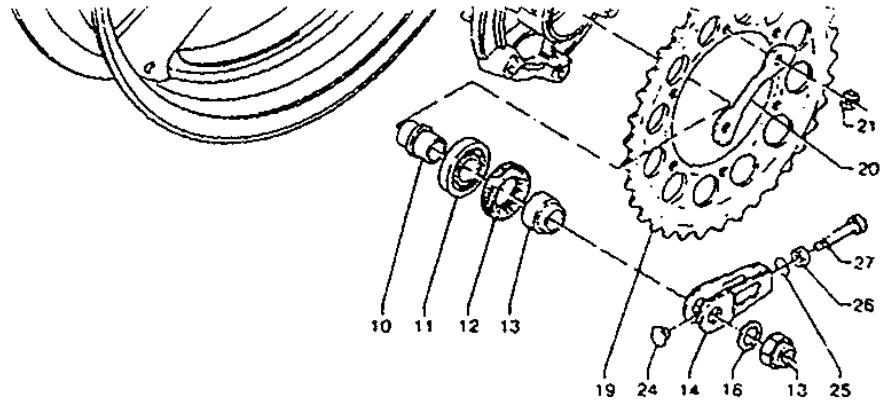 

Ref No	Part No	Description
08	4DL-F5366-00-00	Clutch, Hub
19	4DL-F5447-10-98	Sprocket, Driven


Ref No	Part No	Description
14	4DL-F583T-10-00	Master Cylinder Assy

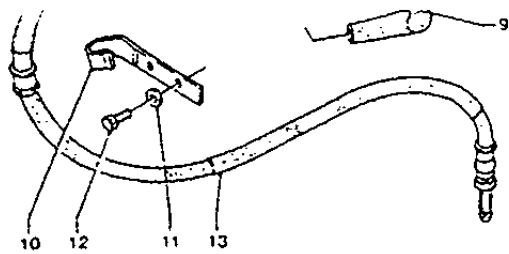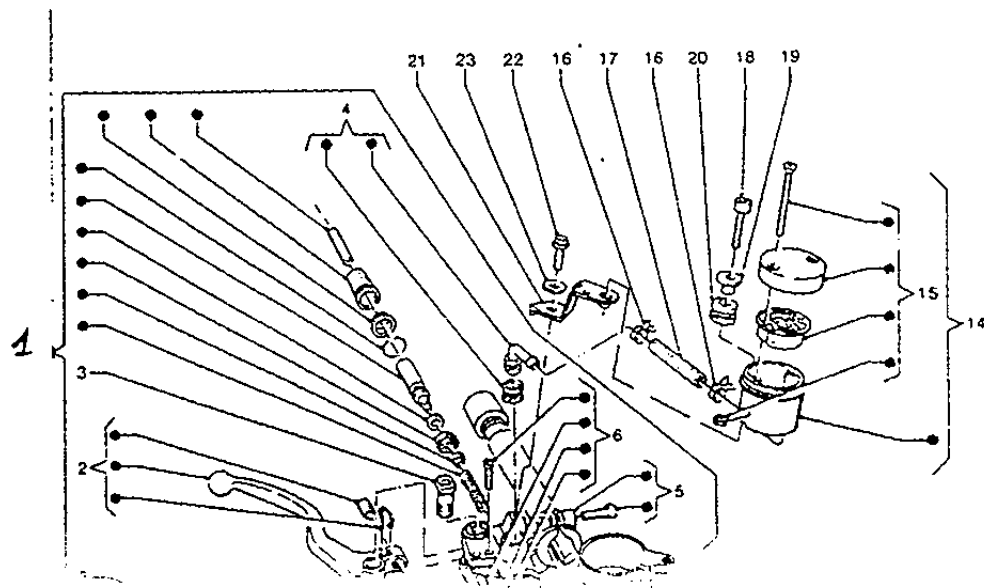  

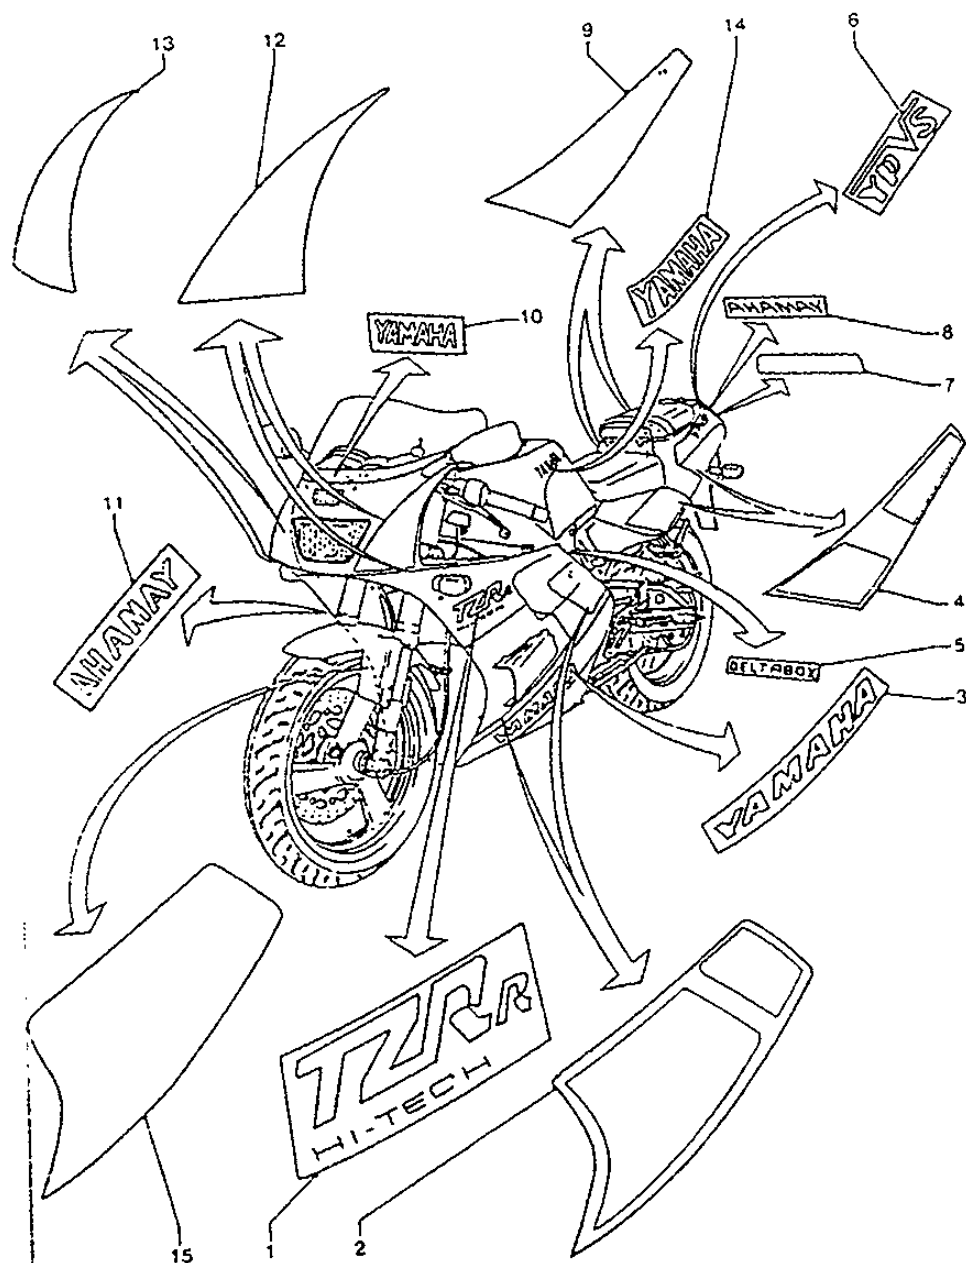 


Ref No	Part No	Description
01	4DL-F8328-10-00	Emblem
02	4DL-F8301-10-00	Graphic Set, Lower Cover 1
03	99234-00070-00	Emblem, Yamaha
04	4DL-F173L-10-00	Graphic Set 1
05	4DL-F118E-00-00	Emblem 1
06	4DL-F1781-10-00	Emblem 1
07	4DL-F1663-00-00	Graphic, Tailcover
08	2UT-F163H-20-00	Emblem 2
09	4DL-F174L-10-00	Graphic Set 2
10	2UT-F163H-10-00	Emblem 2
11	99234-00070-00	Emblem, Yamaha
12	4DL-F832K-10-00	Graphic 12
13	4DL-F832L-10-00	Graphic 13
14	99236-00040-00	Emblem, Yamaha
15	4DL-F8303-10-00	Graphic Set, Lower Cover 2
15	4DL-F8303-10-00	Graphic Set, Lower Cover 2

 300-2381

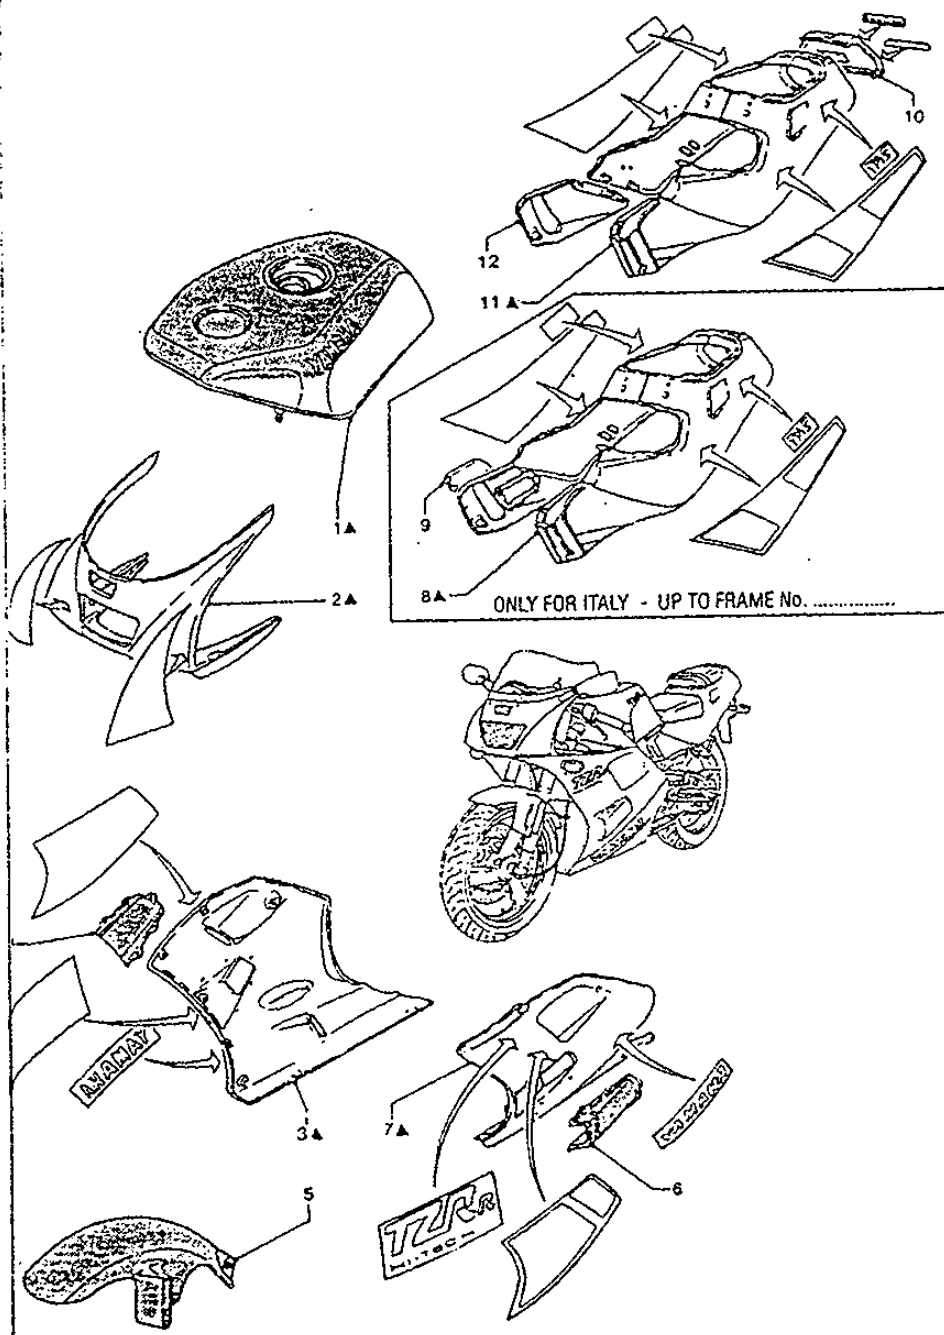

Ref No	Part No	Description
01	4DL-F4110-00-P2	Fuel Tank Comp.
02	4DL-W283G-00-P1	Bodu, Front Upper Assy Rh
03	4DL-W283K-00-P1	Body, Front Under Assy Rh
04	4DL-F838R-00-KH	Duct 2
05	4DL-F1511-00-KH	Fender, Front
06	4DL-F838N-00-KH	Duct 1
07	4DL-W283J-00-P1	Body, Front Upper 2
08	4DL-W2172-00-P1	Side Cover 2
09	4DL-F1731-00-P1	Cover, Side 3
10	4DL-F1651-00-P1	Cover, Rear Fender
11	4DL-W2172-01-P1	Side Cover 2
12	4DL-F1731-10-P1	Cover, Side 3

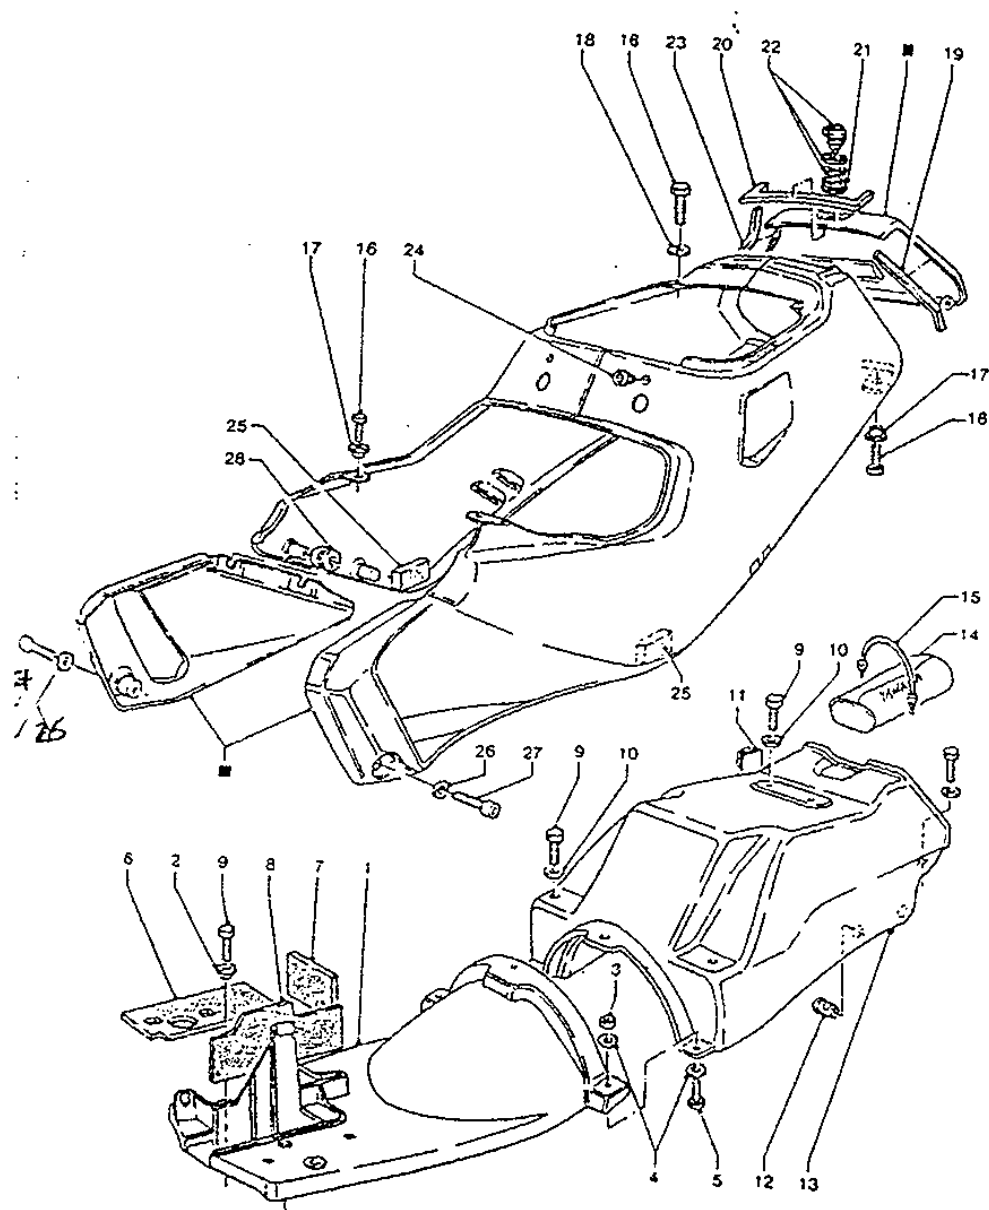 

Ref No	Part No	Description
01	4DL-F177G-00-00	Box, Battery
02	90387-06020-00	Collar
03	95702-06100-00	Nut, Flange
04	92902-06200-00	Washer
05	90101-06022-00	Bolt
06	4DL-F1779-00-00	Damper, Locating 2
07	4DL-F177M-00-00	Damper, Locating 3
08	4DL-F1778-00-00	Damper, Locating 1
09	97382-06014-00	Bolt
10	92902-06200-00	Washer
11	2VW-F8345-00-00	Mole 1
12	90179-06822-00	Nut
13	4DL-F8173-00-00	Box, Tool
14	3SH-F8100-00-00	Tool Kit
15	4DL-F846G-10-00	Band
16	97382-06014-00	Bolt
17	90387-06020-00	Collar
18	92902-06200-00	Washer
19	4DL-F1649-10-00	Damper
20	4DL-F1639-00-00	Damper 2
21	90480-24186-00	Grommet
22	3MA-21708-00-00	Lock Assy 2
23	4DL-F1649-00-00	Damper
24	90179-06822-00	Nut
25	4DL-F177N-00-00	Damper, Locating 4
26	92902-06600-00	Washer, Plate
27	92012-06020-00	Bolt, Button Head
28	90480-12001-00	Grommet